

Documentation | EN

EJ7031, EJ7041-0052

Stepper motor modules

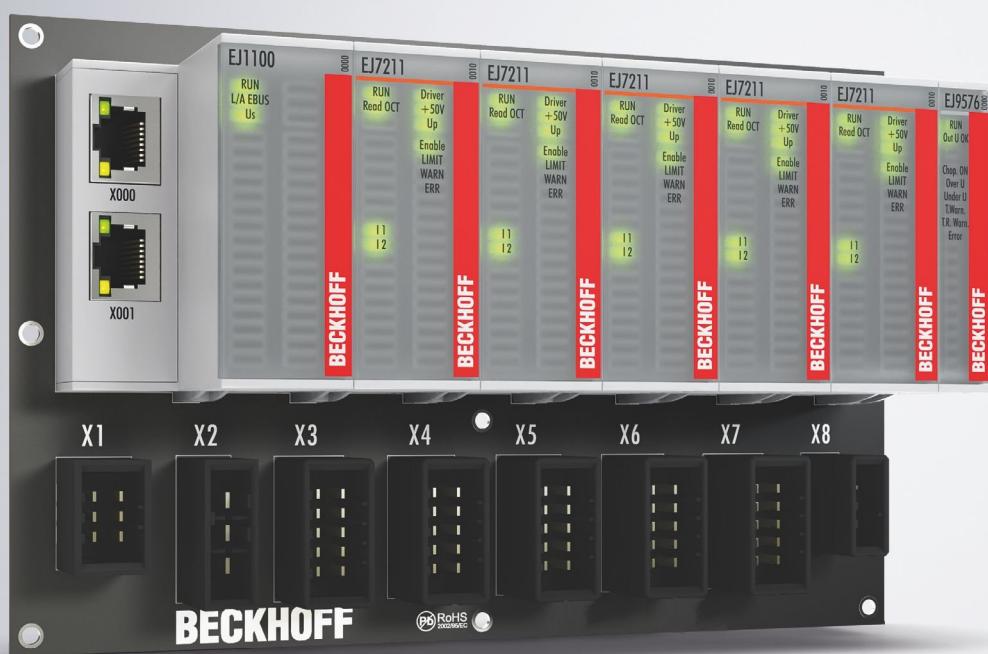


Table of contents

1 Foreword	5
1.1 Product overview - stepper motor modules.....	5
1.2 Notes on the documentation	5
1.3 Safety instructions	6
1.4 Intended use	7
1.5 Signal distribution board.....	7
1.6 Documentation issue status	7
1.7 Guide through documentation.....	8
1.8 Marking of EtherCAT plug-in modules	8
1.8.1 Beckhoff Identification Code (BIC).....	11
1.8.2 Electronic access to the BIC (eBIC).....	13
1.8.3 Certificates	15
2 System overview	16
3 EJ7031 - Product description.....	17
3.1 Introduction	17
3.2 Technical data.....	18
3.3 Pinout.....	20
3.4 LEDs	21
4 EJ7041-0052 - Product description	22
4.1 Introduction	22
4.2 Technical data.....	23
4.3 Pinout.....	24
4.4 LEDs	25
5 Installation of EJ modules.....	26
5.1 Power supply for the EtherCAT plug-in modules	26
5.2 Note on load voltage supply	27
5.3 EJxxxx - dimensions	28
5.4 Installation positions and minimum distances	29
5.4.1 Minimum distances for ensuring installability	29
5.4.2 Installation positions.....	30
5.5 Codings	32
5.5.1 Color coding	32
5.5.2 Mechanical position coding	33
5.6 Installation on the signal distribution board	33
5.7 Extension options	35
5.7.1 Using placeholder modules for unused slots	35
5.7.2 Linking with EtherCAT Terminals and EtherCAT Box modules via an Ethernet/EtherCAT connection.....	36
5.8 IPC integration	37
5.9 Disassembly of the signal distribution board.....	39
5.10 Disposal	39
6 EtherCAT basics	40
7 Commissioning	41

7.1	Note on EL70x1 documentation	41
7.2	EJ7031 - Object description and parameterization	41
7.2.1	Restore object	42
7.2.2	Configuration data	42
7.2.3	Vendor configuration data (device-specific)	46
7.2.4	Command object	47
7.2.5	Input data	47
7.2.6	Output data	48
7.2.7	Information and diagnostic data	52
7.2.8	Standard objects (0x1000-0x1FFF)	54
7.3	EJ7041-0052 - Object description and parameterization	66
7.3.1	Restore object	66
7.3.2	Configuration data	67
7.3.3	Vendor configuration data (device-specific)	70
7.3.4	Command object	71
7.3.5	Input data	71
7.3.6	Output data	72
7.3.7	Information and diagnostic data	76
7.3.8	Standard objects (0x1000-0x1FFF)	79
8	Appendix	91
8.1	Support and Service	91

1 Foreword

1.1 Product overview - stepper motor modules

[EJ7031 \[► 17\]](#) Stepper motor module 24 V_{DC}, 1.5 A
[EJ7041-0052 \[► 22\]](#) Stepper motor module 48 V_{DC}, 5 A

1.2 Notes on the documentation

Intended audience

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards.

It is essential that the documentation and the following notes and explanations are followed when installing and commissioning these components.

It is the duty of the technical personnel to use the documentation published at the respective time of each installation and commissioning.

The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

Disclaimer

The documentation has been prepared with care. The products described are, however, constantly under development.

We reserve the right to revise and change the documentation at any time and without prior announcement.

No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation.

Trademarks

Beckhoff®, TwinCAT®, TwinCAT/BSD®, TC/BSD®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, Safety over EtherCAT®, TwinSAFE®, XFC®, XTS® and XPlanar® are registered trademarks of and licensed by Beckhoff Automation GmbH. Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.

Patent Pending

The EtherCAT Technology is covered, including but not limited to the following patent applications and patents: EP1590927, EP1789857, EP1456722, EP2137893, DE102015105702 with corresponding applications or registrations in various other countries.



EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Copyright

© Beckhoff Automation GmbH & Co. KG, Germany.

The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization are prohibited.

Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

1.3 Safety instructions

Safety regulations

Please note the following safety instructions and explanations!

Product-specific safety instructions can be found on following pages or in the areas mounting, wiring, commissioning etc.

Exclusion of liability

All the components are supplied in particular hardware and software configurations appropriate for the application. Modifications to hardware or software configurations other than those described in the documentation are not permitted, and nullify the liability of Beckhoff Automation GmbH & Co. KG.

Personnel qualification

This description is only intended for trained specialists in control, automation and drive engineering who are familiar with the applicable national standards.

Description of instructions

In this documentation the following instructions are used.

These instructions must be read carefully and followed without fail!

DANGER

Serious risk of injury!

Failure to follow this safety instruction directly endangers the life and health of persons.

WARNING

Risk of injury!

Failure to follow this safety instruction endangers the life and health of persons.

CAUTION

Personal injuries!

Failure to follow this safety instruction can lead to injuries to persons.

NOTICE

Damage to environment/equipment or data loss

Failure to follow this instruction can lead to environmental damage, equipment damage or data loss.



Tip or pointer

This symbol indicates information that contributes to better understanding.

1.4 Intended use

WARNING

Caution - Risk of injury!

EJ components may only be used for the purposes described below!

1.5 Signal distribution board

NOTICE

Signal distribution board

Make sure that the EtherCAT plug-in modules are used only on a signal distribution board that has been developed and manufactured in accordance with the [Design Guide](#).

1.6 Documentation issue status

Version	Comment
1.5	<ul style="list-style-type: none">• Chapter <i>Note on load voltage supply</i> added• Update structure
1.4	<ul style="list-style-type: none">• Update chapter <i>Technical data</i>• Update chapter <i>Pinout</i>• Update chapter <i>Installation of EJ modules</i>• Update structure
1.3	<ul style="list-style-type: none">• Update chapter <i>Marking of EtherCAT plug-in modules</i>• Update Technical Data• Chapter <i>Disposal</i> added• Update chapter <i>Object description and parameterization</i>• Update structure
1.2	<ul style="list-style-type: none">• New Title page• Chapter <i>Product overview - stepper motor modules</i> added• Update Product description• Update chapter <i>Pinout EJ7031</i> and <i>Pinout EJ7041-0052</i>• Chapters <i>Basics communication</i>, <i>TwinCAT Quick Start</i>, <i>TwinCAT development environment</i> and <i>General Notes - EtherCAT Slave Application</i> replaced by references in the chapter <i>Guide through documentation</i>• Chapter <i>EJ7031 – Object description and parameterization</i> added• Chapter <i>EJ7041-0052 – Object description and parameterization</i> added• Update revision status• Update structure
1.1	<ul style="list-style-type: none">• Note <i>Signal distribution board</i> added• Chapter <i>Version identification of EtherCAT devices</i> replaced by chapter <i>Marking of EtherCAT plug-in modules</i>• Update chapter <i>Technical data</i>• Update chapter <i>Pinout</i>• Update revision status
1.0	First publication of EJ7031, EJ7041-0052

1.7 Guide through documentation

NOTICE	
Title	Description
	Further components of documentation This documentation describes device-specific content. It is part of the modular documentation concept for Beckhoff I/O components. For the use and safe operation of the device / devices described in this documentation, additional cross-product descriptions are required, which can be found in the following table.
EtherCAT System Documentation (PDF)	<ul style="list-style-type: none"> • System overview • EtherCAT basics • Cable redundancy • Hot Connect • EtherCAT devices configuration
Design Guide EJ8xxx - Signal distribution board for standard EtherCAT plug-in modules (PDF)	<p>Notes on the design of a signal distribution board for standard EtherCAT plug-in modules.</p> <ul style="list-style-type: none"> • Requirements for the signal distribution board • Backplane mounting guidelines • Module placement • Routing guidelines
Documentation of the corresponding ELxxxx EtherCAT Terminal (s. note on documentation of ELxxxx) [▶ 41]	<ul style="list-style-type: none"> • Notes on the principle of operation and • descriptions for configuration and parameterization are transferable to the corresponding EtherCAT plug-in modules
Infrastructure for EtherCAT/Ethernet (PDF)	Technical recommendations and notes for design, implementation and testing
Software Declarations I/O (PDF)	Open source software declarations for Beckhoff I/O components

The documentations can be viewed at and downloaded from the Beckhoff website (www.beckhoff.com) via:

- the “Documentation and Download” area of the respective product page,
- the [Download finder](#),
- the [Beckhoff Information System](#).

1.8 Marking of EtherCAT plug-in modules

Designation

A Beckhoff EtherCAT device has a 14-digit **technical designation**, made up as follows (e.g. EJ1008-0000-0017)

- **Order identifier**
 - family key: EJ
 - product designation: The first digit of product designation is used for assignment to a product group (e.g. EJ2xxx = digital output module).
 - Version number: The four digit version number identifies different product variants.
- **Revision number:**
It is incremented when changes are made to the product.

The Order identifier and the revision number are printed on the side of EtherCAT plug-in modules (s. following illustration (A and B)).

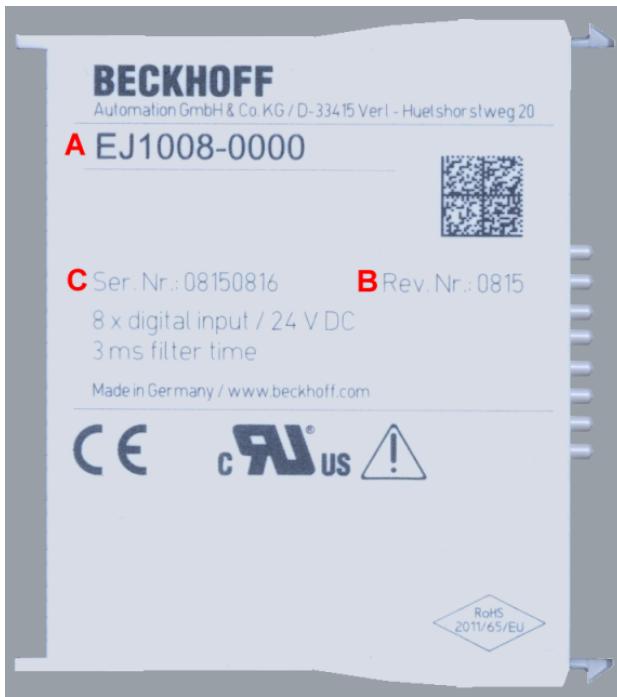


Fig. 1: Order identifier (A), Revision number (B) and serial number (C) using the example of EJ1008

Product group	Example		
	Product designation	Version	Revision
EtherCAT Coupler EJ1xx	EJ1101	-0022 (Coupler with external connectors, power supply module and optional ID switches)	-0016
Digital input modules EJ1xxx	EJ1008 8-channel	-0000 (basic type)	-0017
Digital output modules EJ2xxx	EJ2521 1-channel	-0224 (2 x 24 V outputs)	-0016
Analog input modules EJ3xxx	EJ3318 8-channel thermocouple	-0000 (basic type)	-0017
Analog output modules EJ4xxx	EJ4134 4-channel	-0000 (basic type)	-0019
Special function modules EJ5xxx, EJ6xxx	EJ6224 IO-Link master	-0090 (with TwinSAFE SC)	-0016
Motion modules EJ7xxx	EJ7211 servomotor	-9414 (with ECT, STO and TwinSAFE SC)	-0029

Notes

- The elements mentioned above result in the **technical designation**. EJ1008-0000-0017 is used in the example below.
- EJ1008-0000 is the **order identifier**, in the case of “-0000” usually abbreviated to EJ1008.
- The **revision** -0017 shows the technical progress, such as the extension of features with regard to the EtherCAT communication, and is managed by Beckhoff.
In principle, a device with a higher revision can replace a device with a lower revision, unless specified otherwise, e.g. in the documentation.
Associated and synonymous with each revision there is usually a description (ESI, EtherCAT Slave Information) in the form of an XML file, which is available for download from the Beckhoff web site.
- The product designation, version and revision are read as decimal numbers, even if they are technically saved in hexadecimal.

Serial number

The serial number for EtherCAT plug-in modules is usually the 8-digit number printed on the side of the module (see following illustration C). The serial number indicates the configuration in delivery state and therefore refers to a whole production batch, without distinguishing the individual modules of a batch.

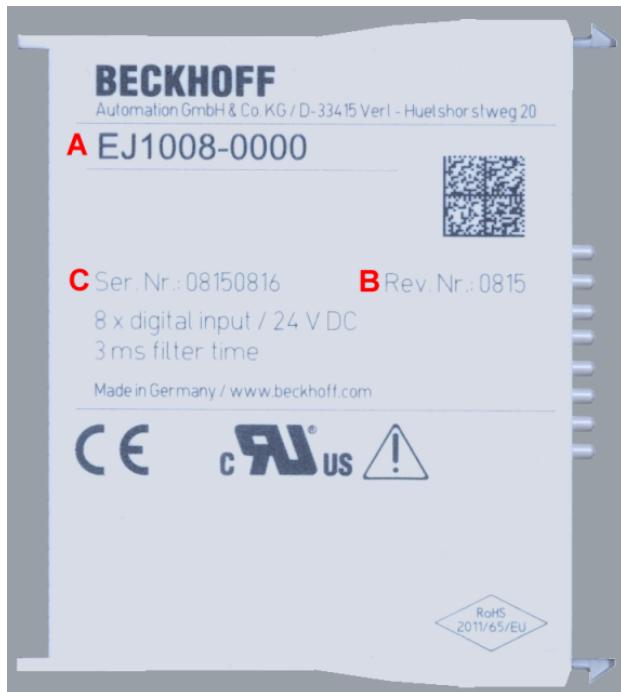


Fig. 2: Order identifier (A), revision number (B) and serial number (C) using the example of EJ1008

Serial number	Example serial number: 08 15 08 16
KK - week of production (CW, calendar week)	08 - week of production: 08
YY - year of production	15 - year of production: 2015
FF - firmware version	08 - firmware version: 08
HH - hardware version	16 - hardware version: 16

1.8.1 Beckhoff Identification Code (BIC)

The Beckhoff Identification Code (BIC) is increasingly being applied to Beckhoff products to uniquely identify the product. The BIC is represented as a Data Matrix Code (DMC, code scheme ECC200), the content is based on the ANSI standard MH10.8.2-2016.



Fig. 3: BIC as data matrix code (DMC, code scheme ECC200)

The BIC will be introduced step by step across all product groups.

Depending on the product, it can be found in the following places:

- on the packaging unit
- directly on the product (if space suffices)
- on the packaging unit and the product

The BIC is machine-readable and contains information that can also be used by the customer for handling and product management.

Each piece of information can be uniquely identified using the so-called data identifier (ANSI MH10.8.2-2016). The data identifier is followed by a character string. Both together have a maximum length according to the table below. If the information is shorter, it shall be replaced by spaces. The data under positions 1-4 are always available.

The following information is contained:

Item no.	Type of information	Explanation	Data identifier	Number of digits incl. data identifier	Example
1	Beckhoff order number	Beckhoff order number	1P	8	1P072222
2	Beckhoff Traceability Number (BTN)	Unique serial number, see note below	S	12	SBTNk4p562d7
3	Article description	Beckhoff article description, e.g. EL1008	1K	32	1KEL1809
4	Quantity	Quantity in packaging unit, e.g. 1, 10, etc.	Q	6	Q1
5	Batch number	Optional: Year and week of production	2P	14	2P4015031800 16
6	ID/serial number	Optional: Present-day serial number system, e.g. with safety products	51S	12	51S678294104
7	Variant number	Optional: Product variant number on the basis of standard products	30P	32	30PF971 , 2*K183
...					

Further types of information and data identifiers are used by Beckhoff and serve internal processes.

Structure of the BIC

Example of composite information from items 1 - 4 and with the above given example value on positon 6. The data identifiers are marked in bold font for better display:

1P072222\$BTNk4p562d71KEL1809 Q1 51S678294

Accordingly as DMC:



Fig. 4: Example DMC **1P072222\$BTNk4p562d71KEL1809 Q1 51S678294**

BTN

An important component of the BIC is the Beckhoff Traceability Number (BTN, item no. 2). The BTN is a unique serial number consisting of eight characters that will replace all other serial number systems at Beckhoff in the long term (e.g. batch designations on IO components, previous serial number range for safety products, etc.). The BTN will also be introduced step by step, so it may happen that the BTN is not yet coded in the BIC.

NOTICE

This information has been carefully prepared. However, the procedure described is constantly being further developed. We reserve the right to revise and change procedures and documentation at any time and without prior notice. No claims for changes can be made from the information, illustrations and descriptions in this information.

1.8.2 Electronic access to the BIC (eBIC)

Electronic BIC (eBIC)

The Beckhoff Identification Code (BIC) is applied to the outside of Beckhoff products in a visible place. If possible, it should also be electronically readable.

Decisive for the electronic readout is the interface via which the product can be electronically addressed.

K-bus devices (IP20, IP67)

Currently, no electronic storage and readout is planned for these devices.


EtherCAT devices (IP20, IP67)

All Beckhoff EtherCAT devices have a so-called ESI-EEPROM, which contains the EtherCAT identity with the revision number. Stored in it is the EtherCAT slave information, also colloquially known as ESI/XML configuration file for the EtherCAT master. See the corresponding chapter in the EtherCAT system manual ([Link](#)) for the relationships.

The eBIC is also stored in the ESI-EEPROM. The eBIC was introduced into the Beckhoff I/O production (terminals, box modules) from 2020; widespread implementation is expected in 2021.

The user can electronically access the eBIC (if existent) as follows:

- With all EtherCAT devices, the EtherCAT master (TwinCAT) can read the eBIC from the ESI-EEPROM
 - From TwinCAT 3.1 build 4024.11, the eBIC can be displayed in the online view.
 - To do this, check the checkbox "Show Beckhoff Identification Code (BIC)" under EtherCAT → Advanced Settings → Diagnostics:

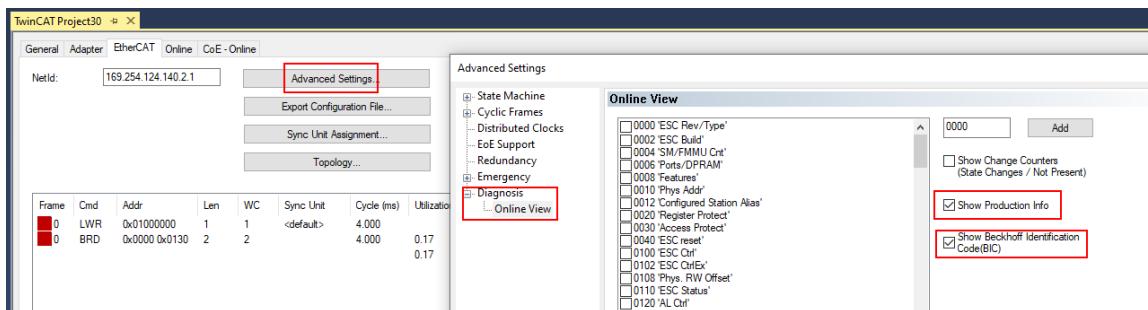

- The BTN and its contents are then displayed:

No	Addr	Name	State	CRC	Fw	Hw	Production Data	ItemNo	BTN	Description	Quantity	BatchNo	SerafNo
1	1001	Term 1 (EK1100)	OP	0,0	0	0	—	072222	k4p562d7	EL1809	1	678294	
2	1002	Term 2 (EL1018)	OP	0,0	0	0	2020 KW36 Fr	072222	k4p562d7	EL1809	1	678294	
3	1003	Term 3 (EL3204)	OP	0,0	7	6	2012 KW24 Sa	072223	k4p562d7	EL2004	1	678295	
4	1004	Term 4 (EL2004)	OP	0,0	0	0	—	072223	k4p562d7	EL2004	1	678295	
5	1005	Term 5 (EL1008)	OP	0,0	0	0	—	072223	k4p562d7	EL2004	1	678295	
6	1006	Term 6 (EL2008)	OP	0,0	0	12	2014 KW14 Mo	072223	k4p562d7	EL2004	1	678295	
7	1007	Term 7 (EK1100)	OP	0	1	8	2012 KW25 Mo	072223	k4p562d7	EL2004	1	678295	

- Note: as can be seen in the illustration, the production data HW version, FW version and production date, which have been programmed since 2012, can also be displayed with "Show Production Info".
- From TwinCAT 3.1. build 4024.24 the functions *FB_EcReadBIC* and *FB_EcReadBTN* for reading into the PLC and further eBIC auxiliary functions are available in the Tc2_EtherCAT Library from v3.3.19.0.
- In the case of EtherCAT devices with CoE directory, the object 0x10E2:01 can additionally be used to display the device's own eBIC; the PLC can also simply access the information here:

- The device must be in PREOP/SAFEOP/OP for access:

Index	Name	Flags	Value	
1000	Device type	RO	0x015E1389 (22942601)	
1008	Device name	RO	ELM37D4-0000	
1009	Hardware version	RO	00	
100A	Software version	RO	01	
100B	Bootloader version	RO	J0.1.27.0	
+ 1011:0	Restore default parameters	RO	>1 <	
+ 1018:0	Identity	RO	>4 <	
+ 10E2:0	Manufacturer-specific Identification C...	RO	>1 <	
+ 10E2:01	SubIndex 001	RO	1P1584425BTN0008jekp1KELM3704	Q1 2P482001000016
+ 10F0:0	Backup parameter handling	RO	>1 <	
+ 10F3:0	Diagnosis History	RO	>21 <	
10F8	Actual Time Stamp	RO	0x170fb277e	

- the object 0x10E2 will be introduced into stock products in the course of a necessary firmware revision.
- From TwinCAT 3.1. build 4024.24 the functions *FB_EcCoEReadBIC* and *FB_EcCoEReadBTN* for reading into the PLC and further eBIC auxiliary functions are available in the *Tc2_EtherCAT Library* from v3.3.19.0.
- Note: in the case of electronic further processing, the BTN is to be handled as a string(8); the identifier "SBTN" is not part of the BTN.
- Technical background
The new BIC information is additionally written as a category in the ESI-EEPROM during the device production. The structure of the ESI content is largely dictated by the ETG specifications, therefore the additional vendor-specific content is stored with the help of a category according to ETG.2010. ID 03 indicates to all EtherCAT masters that they must not overwrite these data in case of an update or restore the data after an ESI update.
The structure follows the content of the BIC, see there. This results in a memory requirement of approx. 50..200 bytes in the EEPROM.
- Special cases
 - If multiple, hierarchically arranged ESCs are installed in a device, only the top-level ESC carries the eBIC Information.
 - If multiple, non-hierarchically arranged ESCs are installed in a device, all ESCs carry the eBIC Information.
 - If the device consists of several sub-devices with their own identity, but only the top-level device is accessible via EtherCAT, the eBIC of the top-level device is located in the CoE object directory 0x10E2:01 and the eBICs of the sub-devices follow in 0x10E2:nn.

PROFIBUS, PROFINET, DeviceNet devices etc.

Currently, no electronic storage and readout is planned for these devices.

1.8.3 Certificates

- The EtherCAT plug-in modules meet the requirements of the EMC and Low Voltage Directive. The CE mark is printed on the side of the modules.
- The cRUs imprint identifies devices that meet product safety requirements according to U.S. and Canadian regulations.
- The warning symbol is a request to read the corresponding documentation. The documentations for EtherCAT plug-in modules can be downloaded from the Beckhoff [homepage](#).



Fig. 5: Marking for CE and UL using EJ1008 as an example

2 System overview

Electronically, the EJxxxx EtherCAT plug-in modules are based on the EtherCAT I/O system. The EJ system consists of the signal distribution board and EtherCAT plug-in modules. It is also possible to connect an IPC to the EJ system.

The EJ system is suitable for mass production applications, applications with small footprint and applications requiring a low total weight.

The machine complexity can be extended by means of the following:

- reserve slots,
- the use of placeholder modules,
- linking of EtherCAT Terminals and EtherCAT Boxes via an EtherCAT connection.

The following diagram illustrates an EJ system. The components shown are schematic, to illustrate the functionality.

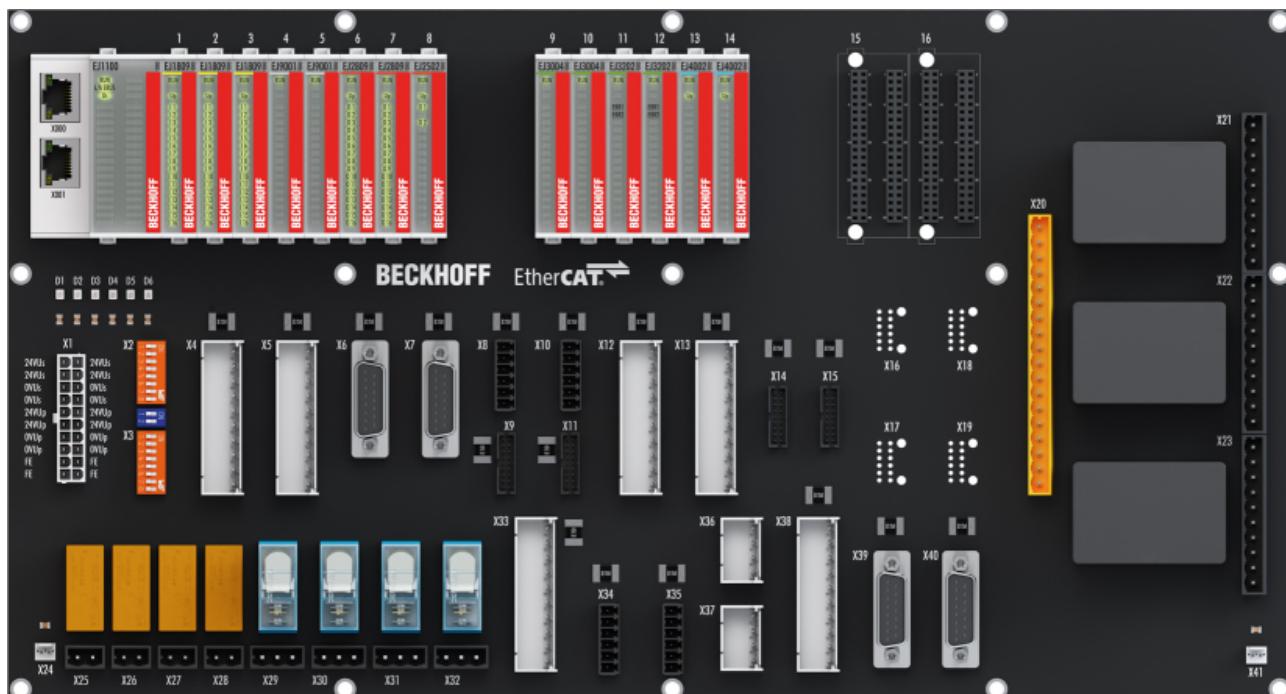


Fig. 6: EJ system sample

Signal distribution board

The signal distribution board distributes the signals and the power supply to individual application-specific plug connectors, in order to connect the controller to further machine modules. Using pre-assembled cable harnesses avoids the need for time-consuming connection of individual wires. Coded components reduce the unit costs and the risk of miswiring.

Beckhoff offers development of signal distribution boards as an engineering service. Customers have the option to develop their own signal distribution board, based on the design guide.

EtherCAT plug-in modules

Similar to the EtherCAT Terminal system, a module strand consists of a bus coupler and I/O modules. Almost all of the EtherCAT Terminals can also be manufactured in the EJ design as EtherCAT plug-in modules. The EJ modules are directly attached to the signal distribution board. The communication, signal distribution and supply take place via the contact pins at the rear of the modules and the PCB tracks of the signal distribution board. The coding pins at the rear serve as mechanical protection against incorrect connection. Color coding on the housing facilitates distinguishing of the modules.

3 EJ7031 - Product description

3.1 Introduction

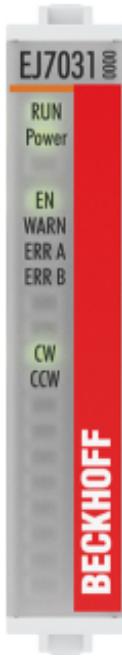


Fig. 7: EJ7031

Stepper motor module, 24 V_{DC}, 1.5 A

The EJ7031 stepper motor output stage is intended for the direct connection of different stepper motors up to 1.5 A. The slimline PWM output stages for two motor coils are located in the EtherCAT plug-in module together with two inputs for limit switches. The EJ7031 can be adjusted to the motor and the application by changing just a few parameters. 64-fold micro-stepping ensures particularly quiet and precise motor operation.

3.2 Technical data

Technical data	EJ7031
Technology	compact Drive Technology
Number of outputs	1 stepper motor, 2 phases
Number of inputs	2 end position
Number of channels	1 stepper motor, 2 digital inputs
Connection method	direct motor connection
Load type	2-phase stepper motor (uni-/ bipolar)
Nominal voltage	24 V _{DC} (-15%/+20%)
Supply voltage power	24 V _{DC} via Up-contacts (via Distribution Board)
Output current max.	1.5 A (overload- and short-circuit-proof)
Maximum step frequency	1000, 2000, 4000, or 8000 full steps/s (configurable)
Step pattern	up to 64-fold micro stepping
Current controller frequency	approx. 16 kHz
Diagnostics LED	error phase A and B, loss of step/stagnation, power, enable
Resolution	approx. 5000 positions in typ. applications (per revolution)
Electrical isolation	500 V (E-bus/field voltage)
Current consumption Load voltage (Up-contacts)	typ. 30 mA + motor current
Current consumption from the E-bus	typ. 140 mA
Distributed-Clocks (DC)	yes
Special features	travel distance control
Support NoCoEStorage	yes
Permissible ambient temperature range during operation	0°C ... +55°C
Permissible ambient temperature range during storage	-25°C ... +85°C
Permissible relative humidity	95 %, no condensation
Operating altitude	max. 2.000 m
Dimensions (W x H x D)	approx. 12 mm x 66 mm x 55 mm
Weight	approx. 30 g
Mounting	on signal distribution board
Pollution degree	2
Installation position	Standard see note [▶ 30]
Position of coding pins [▶ 33]	1 and 8
Color coding	orange
Vibration/shock resistance	Conforms to EN 60068-2-6 / EN 60068-2-27 (with corresponding signal distribution board)
EMC immunity/emission	according to EN 61000-6-2 / EN 61000-6-4 (with corresponding signal distribution board) according to IEC/EN 61800-3 (with corresponding signal distribution board)
EMC category	Category C3 - standard Category C2, C1 - auxiliary filter required
Protection class	EJ module: IP20 EJ system: dependent on signal distribution board and housing
Approvals/markings*	CE, EAC, UKCA UL (see note [▶ 19])

*) Real applicable approvals/markings see type plate on the side (product marking).



CE approval

The CE Marking refers to the EtherCAT plug-in module mentioned above.
If the EtherCAT plug-in module is used in the production of a ready-to-use end product (PCB in conjunction with a housing), the manufacturer of the end product must check compliance of the overall system with relevant directives and CE certification.
To operate the EtherCAT plug-in modules, they must be installed in a housing.

UL notice - Compact Motion**Notes on motion devices**

- *Motor overtemperature*

Motor overtemperature sensing is not provided by the drive.

- *Application for compact motion devices*

The modules are intended for use only within Beckhoff's Programmable Controller system Listed in File E172151.

- *Galvanic isolation from the supply*

The modules are intended for operation within circuits not connected directly to the supply mains (galvanically isolated from the supply, i.e. on transformer secondary).

- *Requirements for environmental conditions*

For use in Pollution Degree 2 Environment only.

3.3 Pinout

EJ7031									
Pin#		Signal							
1	2	U _{EBUS}	U _{EBUS}	E-Bus contacts					
3	4	GND	GND	The power supply U _{EBUS} is provided by the coupler and supplied from the supply voltage U _S of the EtherCAT coupler.					
5	6	RX0+	TX1+						
7	8	RX0-	TX1-						
9	10	GND	GND						
11	12	TX0+	RX1+	Signals					
13	14	TX0-	RX1-						
15	16	GND	GND						
17	18	MotorA A1	MotorA A1						
19	20	MotorA A2	MotorA A2						
21	22	MotorB B1	MotorB B1						
23	24	MotorB B2	MotorB B2						
25	26	NC	DI 1	Up-Contacts					
27	28	NC	DI 2						
29	30	NC	NC						
31	32	NC	NC						
33	34	0V Up	0V Up	The peripheral voltage U _P supplies the electronics on the field side.					
35	36	0V Up	24V Up						
37	38	24V Up	24V Up						
39	40	SGND	SGND						

Signal	Description
U _{EBUS}	E-Bus power supply 3.3 V
GND	E-Bus GND signal. Don't connect with 0V Up!
RXn+	Positive E-Bus receive signal
RXn-	Negative E-Bus receive signal
TXn+	Positive E-Bus transmit signal
TXn-	Negative E-Bus transmit signal
NC	Do not connect
MotorA A1	Motor winding A
MotorA A2	Motor winding A
MotorB B1	Motor winding B
MotorB B2	Motor winding B
DI 1 ... DI2	Digital Input 1 ... 2
0V Up	Field side GND signal
24V Up	Field side power supply 24 V
SGND	Shield Ground

Fig. 8: EJ7031

The PCB footprint can be downloaded from the Beckhoff [homepage](#).

NOTICE



Damage to devices possible!

- The pins named with “NC” must not be connected.
- Before installation and commissioning read the chapters [Installation of EJ modules \[▶ 26\]](#) and [Commissioning \[▶ 41\]](#)!



Shielding

Feedback signal, sensors and actuators should always be connected with shielded, twisted paired wires.

3.4 LEDs

LED No.	EJ7031
A	RUN
B	Power
C	
1	EN
2	WARN
3	ERR A
4	ERR B
5	
6	
7	CW
8	CCW
9	
10	
11	
12	
13	
14	
15	
16	

Fig. 9: EJ7031 - LEDs

LED	Color	Display	State	Meaning
RUN	green	off	Init	State of the EtherCAT State Machine: INIT = Initialization of the terminal or BOOTSTRAP = Function for firmware updates of the terminal
		blinking	Pre-Operational	State of the EtherCAT State Machine: PREOP = Setting for mailbox communication and variant standard settings
		single flash	Safe-Operational	State of the EtherCAT State Machine: SAFEOP = Channel checking of the <u>Sync-Manager</u> and the Distributed Clocks. Outputs stay in safe operation mode.
		on	Operational	State of the EtherCAT State Machine: OP = Normal operation mode, mailbox- and process data communication possible
		flickering	Bootstrap	State of the EtherCAT State Machine: BOOTSTRAP = function for firmware updates of the plug-in module
Power	green	off	-	Supply voltage (24 V _{DC}) not available or motor control is blocked (index 0x6010:02 is not set)
		on	-	Supply voltage (24 V _{DC}) present
EN	green	off	-	Motor control is blocked (index 0x6010:02 is not set) or EJ7031 is not ready for operation
		on	-	Motor control is activated (index 0x6010:02 is set) or EJ7031 is ready for operation
Warn	yellow	off	-	no defect
		on	-	Configuration error, e.g.: <ul style="list-style-type: none"> • Motor power supply not connected • 80°C temperature exceeded • 100% duty cycle reached • ...
ERR A ERR B	red	on	-	Configuration error of output stage A, e.g.: <ul style="list-style-type: none"> • 100°C temperature exceeded • Short circuit • ...
CW	green	on	-	Motor turns clockwise
CCW	green	on	-	Motor turns counter-clockwise

4 EJ7041-0052 - Product description

4.1 Introduction

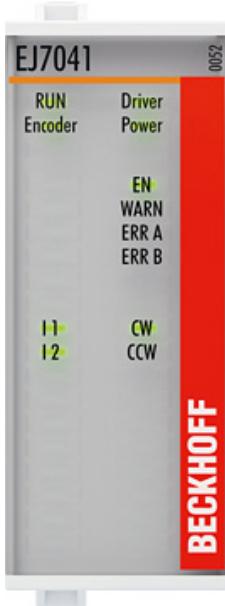


Fig. 10: EJ7041-0052

Stepper motor module, 48 V_{DC}, 5 A

The EJ7041-0052 EtherCAT plug-in module is intended for use with stepper motors in the medium performance range. The PWM output stages cover a wide voltage and current range. Together with two inputs for limit switches, they are integrated in the EtherCAT plug-in module. By setting just a few parameters, the EJ7041-0052 module can be adapted to the individual motor and application at hand. 64-fold microstepping ensures particularly smooth and precise motor operation.

4.2 Technical data

Technical data	EJ7041-0052
Technology	compact Drive Technology
Number of outputs	1 stepper motor, 2 phases
Number of inputs	2 end position
Number of channels	1 stepper motor, 2 digital inputs
Connection method	direct motor connection
Load type	2-phase stepper motor (uni-/ bipolar)
Nominal voltage	24 V _{DC} (-15%/+20%)
Supply voltage power	8 ... 48 V _{DC} (via Distribution Board)
Output current max.	5.0 A (overload- and short-circuit-proof)
Maximum step frequency	1000, 2000, 4000, or 8000 full steps/s (configurable)
Step pattern	up to 64-fold micro stepping
Current controller frequency	approx. 16 kHz
Diagnostics LED	error phase A and B, loss of step/stagnation, power, enable
Resolution	approx. 5000 positions in typ. applications (per revolution)
Electrical isolation	500 V (E-bus/field voltage)
Current consumption Load voltage (Up-contacts)	typ. 50 mA
Current consumption from the E-bus	typ. 140 mA
Distributed-Clocks (DC)	yes
Special features	travel distance control
Support NoCoEStorage	yes
Permissible ambient temperature range during operation	0°C ... +55°C
Permissible ambient temperature range during storage	-25°C ... +85°C
Permissible relative humidity	95 %, no condensation
Operating altitude	max. 2.000 m
Dimensions (W x H x D)	approx. 24 mm x 66 mm x 55 mm
Weight	approx. 50 g
Mounting	on signal distribution board
Pollution degree	2
Installation position	Standard see note [▶ 30]
Position of coding pins [▶ 33]	1 and 8
Color coding	orange
Vibration/shock resistance	Conforms to EN 60068-2-6 / EN 60068-2-27 (with corresponding signal distribution board)
EMC immunity/emission	according to EN 61000-6-2 / EN 61000-6-4 (with corresponding signal distribution board) according to IEC/EN 61800-3 (with corresponding signal distribution board)
EMC category	Category C3 - standard Category C2, C1 - auxiliary filter required
Protection class	EJ module: IP20 EJ system: dependent on signal distribution board and housing
Approvals/markings*	CE, EAC, UKCA

*) Real applicable approvals/markings see type plate on the side (product marking).



CE approval

The CE Marking refers to the EtherCAT plug-in module mentioned above.

If the EtherCAT plug-in module is used in the production of a ready-to-use end product (PCB in conjunction with a housing), the manufacturer of the end product must check compliance of the overall system with relevant directives and CE certification.

To operate the EtherCAT plug-in modules, they must be installed in a housing.

4.3 Pinout

EJ7041-0052 Left connector (Encoder)				EJ7041-0052 Right connector (Motor)			
Pin#		Signal		Pin#		Signal	
1	2	U _{EBUS}	U _{EBUS}	1	2	NC	NC
3	4	GND	GND	3	4	GND	GND
5	6	RX0+	TX1+	5	6	NC	NC
7	8	RX0-	TX1-	7	8	NC	NC
9	10	GND	GND	9	10	GND	GND
11	12	TX0+	RX1+	11	12	NC	NC
13	14	TX0-	RX1-	13	14	NC	NC
15	16	GND	GND	15	16	GND	GND
17	18	NC	NC	17	18	MotorA A1	MotorA A1
19	20	NC	NC	19	20	MotorA A2	MotorA A2
21	22	NC	NC	21	22	MotorA B1	MotorA B1
23	24	NC	NC	23	24	MotorA B2	MotorA B2
25	26	NC	DI 1	25	26	48V_Motor	48V_Motor
27	28	NC	DI 2	27	28	48V_Motor	48V_Motor
29	30	GND Sensor	24V Sensor	29	30	GND_Motor	GND_Motor
31	32	NC	NC	31	32	GND_Motor	GND_Motor
33	34	0V Up	0V Up	33	34	0V Up	0V Up
35	36	0V Up	24V Up	35	36	0V Up	24V Up
37	38	24V Up	24V Up	37	38	24V Up	24V Up
39	40	SGND	SGND	39	40	SGND	SGND

Left connector (Encoder)		Right connector (Motor)	
Signal	Description	Signal	Description
U _{EBUS}	E-Bus power supply 3.3 V	NC	Do not connect
GND	E-Bus GND signal. Don't connect with 0V Up!	GND	E-Bus GND signal. Don't connect with 0V Up!
RXn+	Positive E-Bus receive signal		
RXn-	Negative E-Bus receive signal		
TXn+	Positive E-Bus transmit signal		
TXn-	Negative E-Bus transmit signal		
NC	Do not connect	MotorA A1	Motor winding A
DI 1 ... DI2	Digital Input 1 ... 2	MotorA A2	Motor winding A
GND Sensor	0 V optional sensor supply	MotorA B1	Motor winding B
24 V Sensor	24 V optional sensor supply	MotorA B2	Motor winding B
		48V_Motor	Feeding for output stage (max. +48 V _{DC})
		GND_Motor	Feeding for output stage (0 V _{DC})
0V Up	Field side GND signal	0V Up	Field side GND signal
24V Up	Field side power supply 24 V	24V Up	Field side power supply 24 V
SGND	Shield Ground	SGND	Shield Ground

Fig. 11: EJ7041-0052 - pinout

The PCB footprint can be downloaded from the Beckhoff [homepage](#).

NOTICE	
	Damage to devices possible!
	<ul style="list-style-type: none"> The pins named with “NC” must not be connected. Before installation and commissioning read the chapters Installation of EJ modules [▶ 26] and Commissioning [▶ 41]!



Shielding

Feedback signal, sensors and actuators should always be connected with shielded, twisted paired wires.

4.4 LEDs

LED No.	EJ7041-0052	
	Left	Right
A	RUN	Driver
B	Encoder	Power
C		
1		EN
2		WARN
3		ERR A
4		ERR B
5		
6		
7	I 1	CW
8	I 2	CCW
9		
10		
11		
12		
13		
14		
15		
16		

Fig. 12: EJ7041-0052 - LEDs

LEDs (left side)				
LED	Color	Display	State	Meaning
RUN	green	off	Init	State of the EtherCAT State Machine: INIT = Initialization of the terminal or BOOTSTRAP = Function for firmware updates of the terminal
		blinking	Pre-Operational	State of the EtherCAT State Machine: PREP = Setting for mailbox communication and variant standard settings
		single flash	Safe-Operational	State of the EtherCAT State Machine: SAFEOP = Channel checking of the <u>Sync-Manager</u> and the Distributed Clocks. Outputs stay in safe operation mode.
		on	Operational	State of the EtherCAT State Machine: OP = Normal operation mode, mailbox- and process data communication possible
		flickering	Bootstrap	State of the EtherCAT State Machine: BOOTSTRAP = function for <u>firmware updates</u> of the plug-in module
I 1	green	on	-	Signal at digital input 1
I 2	green	on	-	Signal at digital input 2

LEDs (right side)			
LED	Color	Display	Meaning
Driver	green	on	Driver stage ready for operation
Power	green	off	The power supply voltage (48 V _{DC}) is absent or the motor control is blocked (Index 0x6010:02 is not set)
		on	The power supply voltage (48 V _{DC}) is present
EN	green	off	The motor control is blocked (Index 0x6010:02 is not set) or EJ7041-0052 is not ready for operation.
		on	The motor control is activated (Index 0x6010:02 is set) or EJ7041-0052 is ready for operation.
WARN	yellow	off	No errors
		on	Configuration error, e.g.: <ul style="list-style-type: none"> • Motor power supply not connected • 80°C temperature exceeded • 100% duty cycle reached • ...
ERR A ERR B	red	on	Configuration error of output stage A or B, e.g.: <ul style="list-style-type: none"> • 100°C temperature exceeded • short circuit • ...
CW	green	on	Motor is triggered clockwise
CCW	green	on	Motor is triggered counter clockwise

5 Installation of EJ modules

5.1 Power supply for the EtherCAT plug-in modules

⚠️ WARNING

Power supply from SELV/PELV power supply unit!

SELV/PELV circuits (Safety Extra Low Voltage, Protective Extra Low Voltage) according to IEC 61010-2-201 must be used to supply this device.

Notes:

- SELV/PELV circuits may give rise to further requirements from standards such as IEC 60204-1 et al, for example with regard to cable spacing and insulation.
- A SELV (Safety Extra Low Voltage) supply provides safe electrical isolation and limitation of the voltage without a connection to the protective conductor, a PELV (Protective Extra Low Voltage) supply also requires a safe connection to the protective conductor.

The signal distribution board should have a power supply designed for the maximum possible current load of the module string. Information on the current required from the E-bus supply can be found for each module in the respective documentation in section “Technical data”, online and in the catalog. The power requirement of the module string is displayed in the TwinCAT System Manager.

E-bus power supply with EJ1100 or EJ1101-0022 and EJ940x

The EJ1100 Bus Coupler supplies the connected EJ modules with the E-bus system voltage of 3.3 V. The Coupler can accommodate a load up to 2.2 A. If a higher current is required, a combination of the coupler EJ1101-0022 and the power supply units EJ9400 (2.5 A) or EJ9404 (12 A) should be used. The EJ940x power supply units can be used as additional supply modules in the module string.

Depending on the application, the following combinations for the E-bus supply are available:

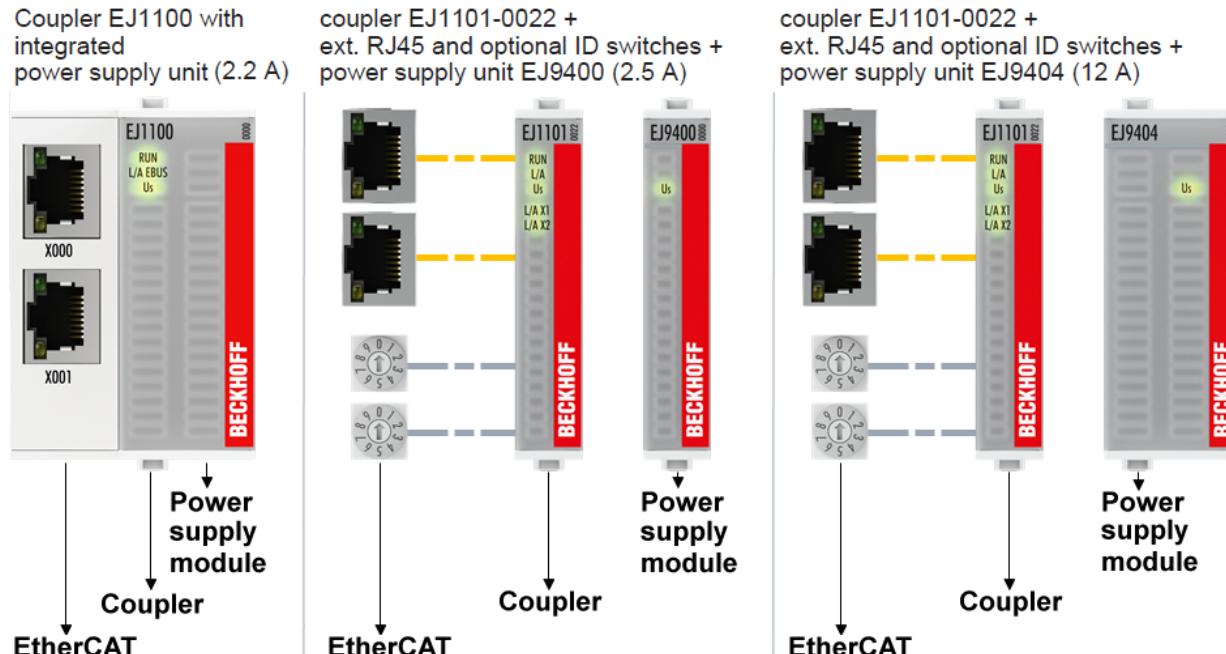


Fig. 13: E-bus power supply with EJ1100 or EJ1101-0022 + EJ940x

In the EJ1101-0022 coupler, the RJ45 connectors and optional ID switches are external and can be positioned anywhere on the signal distribution board, as required. This facilitates feeding through a housing.

The EJ940x power supply plug-in modules provide an optional reset function (see chapter Connection of the documentation for EJ9400 and EJ9404)

E-bus power supply with CXxxxx and EK1110-004x

The Embedded PC supplies the attached EtherCAT Terminals and the EtherCAT EJ coupler

- with a supply voltage U_s of 24 V_{DC} (-15 %/+20 %). This voltage supplies the E-bus and the bus terminal electronics.
- The CXxxxx units supply the E-bus with up to 2,000 mA E-bus current. If a higher current is required due to the attached terminals, power feed terminals or power supply plug-in modules must be used for the E-bus supply.
- with a peripheral voltage U_p of 24 V_{DC} to supply the field electronics.

The EK1110-004x EtherCAT EJ couplers relay the following parameters to the signal distribution board via the rear connector:

- the E-bus signals,
- the E-bus voltage U_{EBUS} (3.3 V) and
- the peripheral voltage U_p (24 V_{DC}).



Fig. 14: PCB with Embedded PC, EK1110-0043 and EJxxxx, rear view EK1110-0043

5.2 Note on load voltage supply

⚠ WARNING

Load voltage supply

Some devices permit an additional load voltage, e.g. 48 V DC, to be connected for the operation of a motor. In order to avoid stray currents on the protective conductor during operation, EN 60204-1:2018 provides for the possibility that the negative pole of the load voltage does not necessarily have to be connected to the protective conductor system (SELV). Therefore, the load voltage supply should be designed as an SELV supply.

5.3 EJxxxx - dimensions

The EJ modules are compact and lightweight thanks to their design. Their volume is approx. 50 % smaller than the volume of the EL terminals. A distinction is made between four different module types, depending on the width and the height:

Module type	Dimensions (W x H x D)	Sample in figure below
Coupler	44 mm x 66 mm x 55 mm	EJ1100 (ej_44_2xrj45_coupler)
Single module	12 mm x 66 mm x 55 mm	EJ1809 (ej_12_16pin_code13)
Double module	24 mm x 66 mm x 55 mm	EJ7342 (ej_24_2x16pin_code18)
Single module (long)	12 mm x 152 mm x 55 mm	EJ1957 (ej_12_2x16pin_extended_code4747)

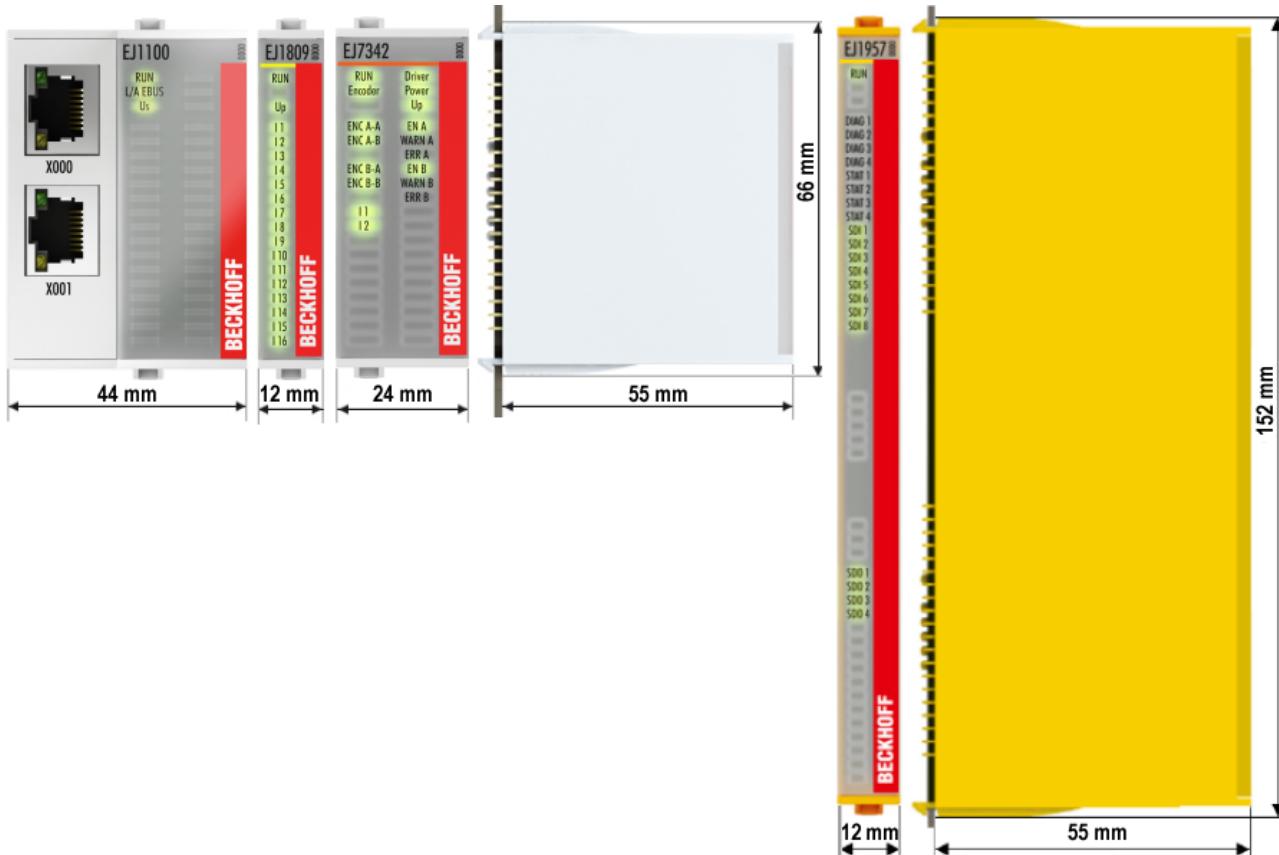


Fig. 15: EJxxxx - Dimensions

The technical drawings can be downloaded from the Beckhoff [homepage](#). The drawings are named as described in the drawing below.

Position of coding pins _____
 Amount of contact pins _____
 Housing width in mm _____ > ej_12_16pin_code13

Fig. 16: Naming of the technical drawings

5.4 Installation positions and minimum distances

5.4.1 Minimum distances for ensuring installability

Note the dimensions shown in the following diagram for the design of the signal distribution board to ensure safe latching and simple assembly / disassembly of the modules.

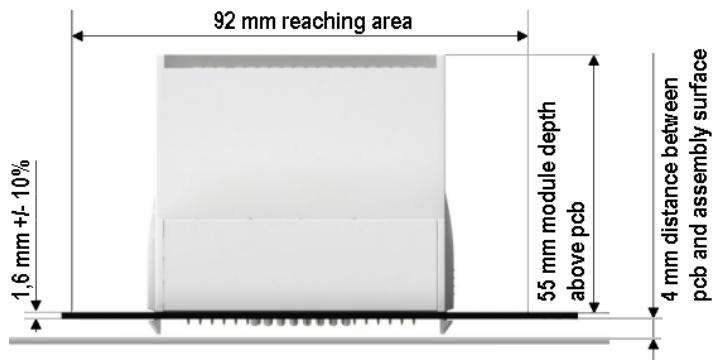


Fig. 17: Mounting distances EJ module - PCB



Observing the reaching area

A minimum reaching area of 92 mm is required for assembly / disassembly, in order to be able to reach the mounting tabs with the fingers.

Adherence to the recommended minimum distances for ventilation (see [section Installation position \[► 30\]](#)) ensures an adequate reaching area.

The signal distribution board must have a thickness of 1.6 mm and a minimum distance of 4 mm from the mounting surface, in order to ensure latching of the modules on the board.

5.4.2 Installation positions

NOTICE

Constraints regarding installation position and operating temperature range

Please refer to the [technical data \[▶ 23\]](#) for the installed components to ascertain whether any restrictions regarding the mounting position and/or the operating temperature range have been specified. During installation of modules with increased thermal dissipation, ensure adequate distance above and below the modules to other components in order to ensure adequate ventilation of the modules during operation!

The standard installation position is recommended. If a different installation position is used, check whether additional ventilation measures are required.

Ensure that the specified conditions (see Technical data) are adhered to!

Optimum installation position (standard)

For the optimum installation position the signal distribution board is installed horizontally, and the fronts of the EJ modules face forward (see Fig. *Recommended distances for standard installation position*). The modules are ventilated from below, which enables optimum cooling of the electronics through convection. “From below” is relative to the acceleration of gravity.

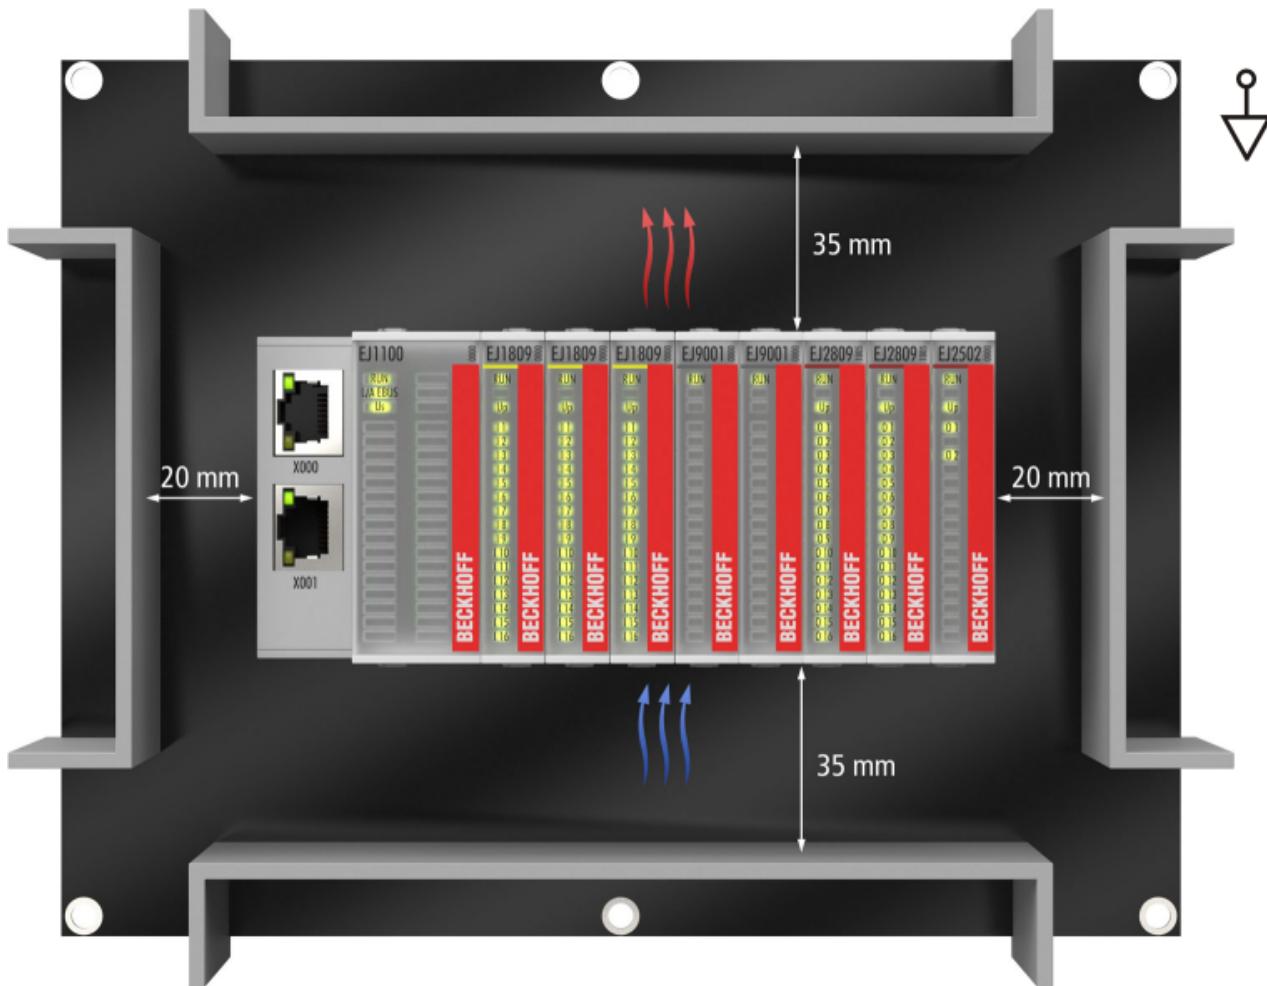


Fig. 18: Recommended distances for standard installation position

Compliance with the distances shown in Fig. *Recommended distances for standard installation position* is recommended. The recommended minimum distances should not be regarded as restricted areas for other components. The customer is responsible for verifying compliance with the environmental conditions described in the technical data. Additional cooling measures must be provided, if required.

Other installation positions

All other installation positions are characterized by a different spatial position of the signal distribution board, see Fig. *Other installation positions*.

The minimum distances to ambient specified above also apply to these installation positions.

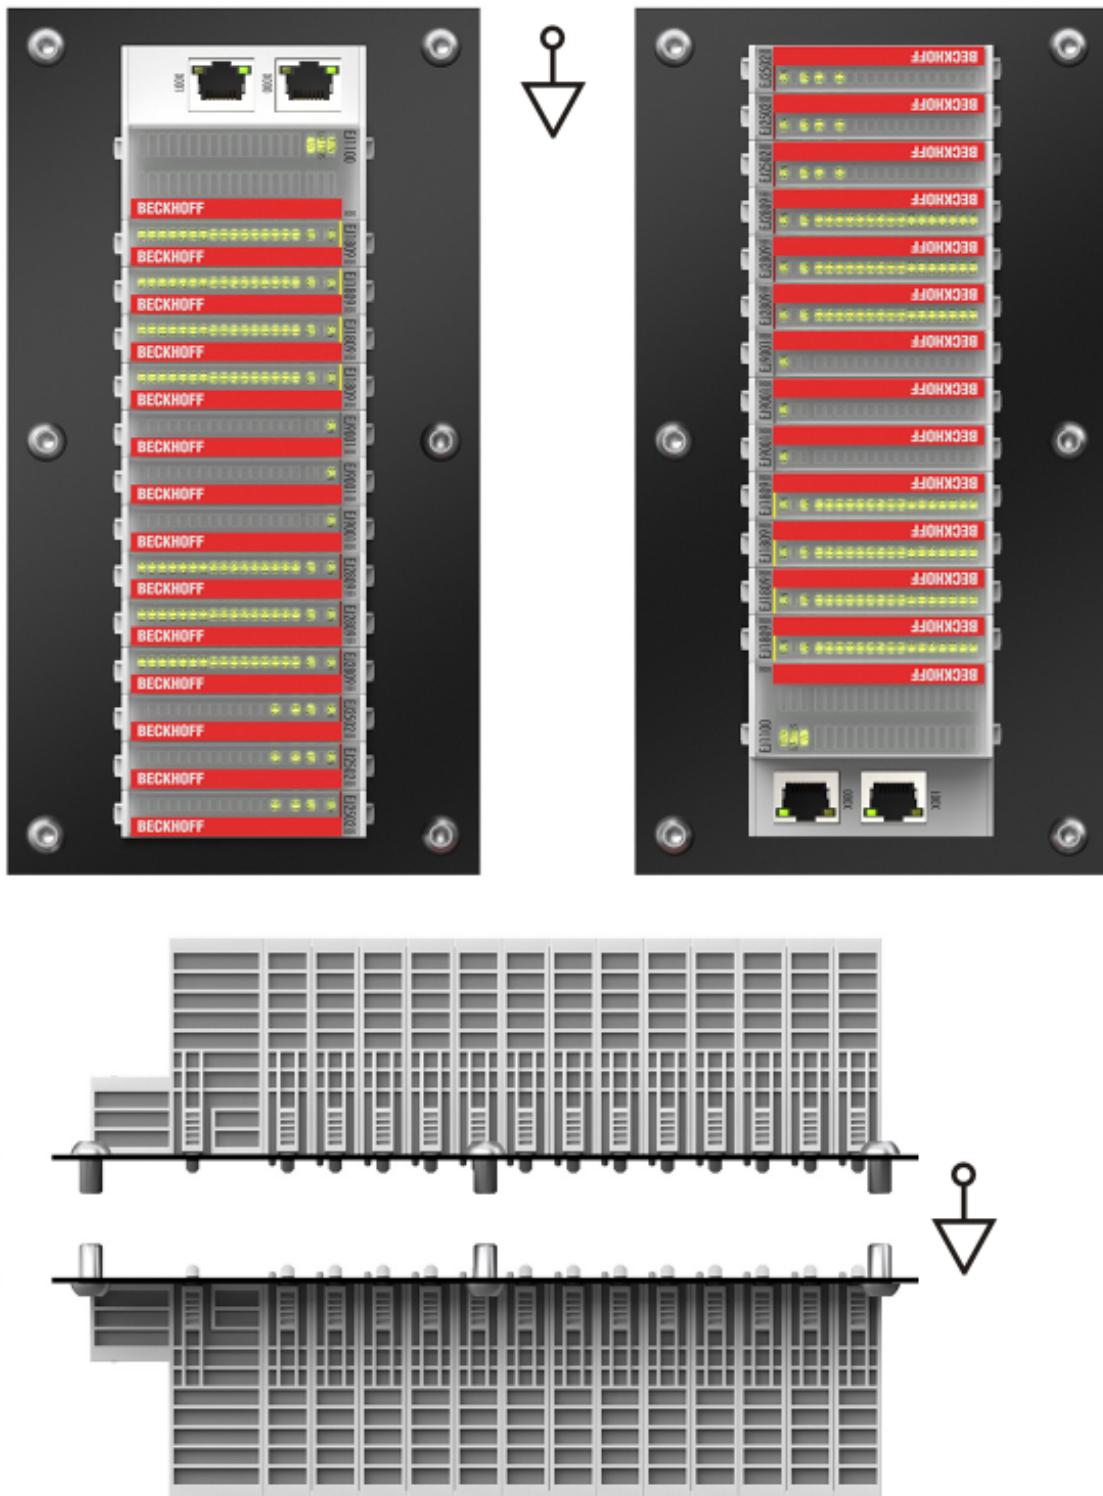


Fig. 19: Other installation positions

5.5 Codings

5.5.1 Color coding

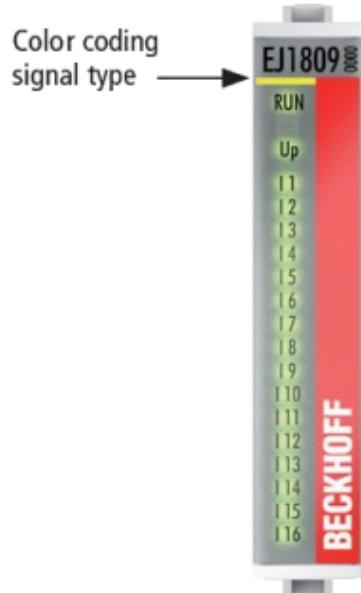


Fig. 20: EJ modules color code; sample: EJ1809

The EJ modules are color-coded for a better overview in the control cabinet (see diagram above). The color code indicates the signal type. The following table provides an overview of the signal types with corresponding color coding.

Signal type	Modules	Color
Coupler	EJ11xx	No color coding
Digital input	EJ1xxx	Yellow
Digital output	EJ2xxx	Red
Analog input	EJ3xxx	Green
Analog output	EJ4xxx	Blue
Position measurement	EJ5xxx	grey
Communication	EJ6xxx	grey
Motion	EJ7xxx	orange
System	EJ9xxx	grey

5.5.2 Mechanical position coding

The modules have two signal-specific coding pins on the underside (see Figs. B1 and B2 below). In conjunction with the coding holes in the signal distribution board (see Figs. A1 and A2 below), the coding pins provide an option for mechanical protection against incorrect connection. This significantly reduces the risk of error during installation and service.

Couplers and placeholder modules have no coding pins.

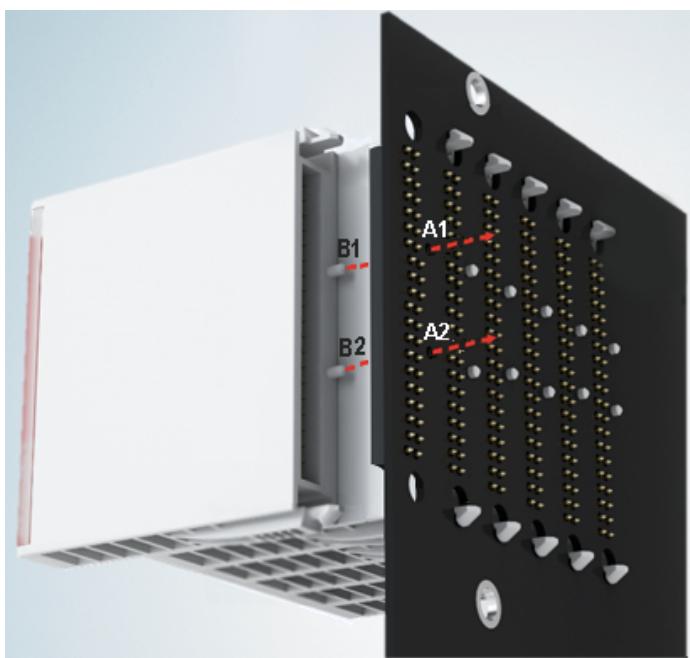


Fig. 21: Mechanical position coding with coding pins (B1 and B2) and coding holes (A1 and A2)

The following diagram shows the position of the position coding with position numbers on the left-hand side. Modules with the same signal type have the same coding. For example, all digital input modules have the coding pins at positions one and three. There is no plug protection between modules with the same signal type. During installation the module type should therefore be verified based on the device name.

Position coding area	1	2
1	●	11
2	●	12
3	●	13
4	●	14
5	●	15
6	●	16
7	●	17
8	●	18
		19
		20
		21
		22
		23
		24
		25
		26
		27
		28
		29
		30
		31
		32
		33
		34
		35
		36
		37
		38
		39
		40

Fig. 22: Pin coding; sample: digital input modules

5.6 Installation on the signal distribution board

EJ modules are installed on the signal distribution board. The electrical connections between coupler and EJ modules are realized via the pin contacts and the signal distribution board.

The EJ components must be installed in a control cabinet or enclosure which must provide protection against fire hazards, environmental conditions and mechanical impact.

WARNING

Risk of injury through electric shock and damage to the device!

Bring the module system into a safe, de-energized state before starting installation, disassembly or wiring of the modules.

NOTICE

Risk of damage to components through electrostatic discharge!

Observe the regulations for ESD protection.

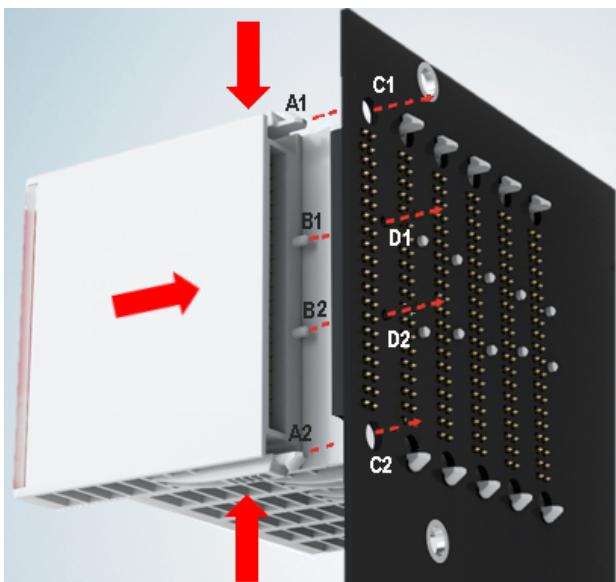


Fig. 23: Installation of EJ modules

A1 / A2	Latching lugs top / bottom	C1 / C2	Mounting holes
B1 / B2	Coding pins	D1 / D2	Coding holes

To install the modules on the signal distribution board proceed as follows:

1. Before the installation, ensure that the signal distribution board is securely connected to the mounting surface. Installation on an unsecured signal distribution board may result in damage to the board.
2. If necessary, check whether the positions of the coding pins (B) match the corresponding holes in the signal distribution board (D).
3. Compare the device name on the module with the information in the installation drawing.
4. Press the upper and the lower mounting tabs simultaneously and push the module onto the board while gently moving it up and down, until the module is latched securely.
The required contact pressure can only be established and the maximum current carrying capacity ensured if the module is latched securely.
5. Use placeholder modules (EJ9001) to fill gaps in the module strand.

NOTICE

- During installation ensure safe latching of the modules on the signal distribution board! The consequences of inadequate contact pressure include:
 - ⇒ loss of quality of the transferred signals,
 - ⇒ increased power dissipation of the contacts,
 - ⇒ impairment of the service life.

5.7 Extension options

Three options are available for modifications and extensions of the EJ system.

- Replacing the placeholder modules with the function modules provided for the respective slot
- Assigning function modules specified for the respective slots for the reserve slots at the end of the module string
- Linking with EtherCAT Terminals and EtherCAT Box modules via an Ethernet/EtherCAT connection

5.7.1 Using placeholder modules for unused slots

The EJ9001 placeholder modules are used to close temporary gaps in the module strands (see Fig. A1 below). Gaps in the module strand cause interruption in EtherCAT communication and must be equipped with placeholder modules.

In contrast to the passive terminals of the EL series, the placeholder modules actively participate in the data exchange. Several placeholder modules can therefore be connected in series, without impairing the data exchange.

Unused slots at the end of the module strand can be left as reserve slots (see Fig. B1 below).

The machine complexity is extended (extended version) by allocating unused slots (see Figs. A2 below - Exchanging placeholder modules and B2 - Assigning reserve slots) according to the specifications for the signal distribution board.

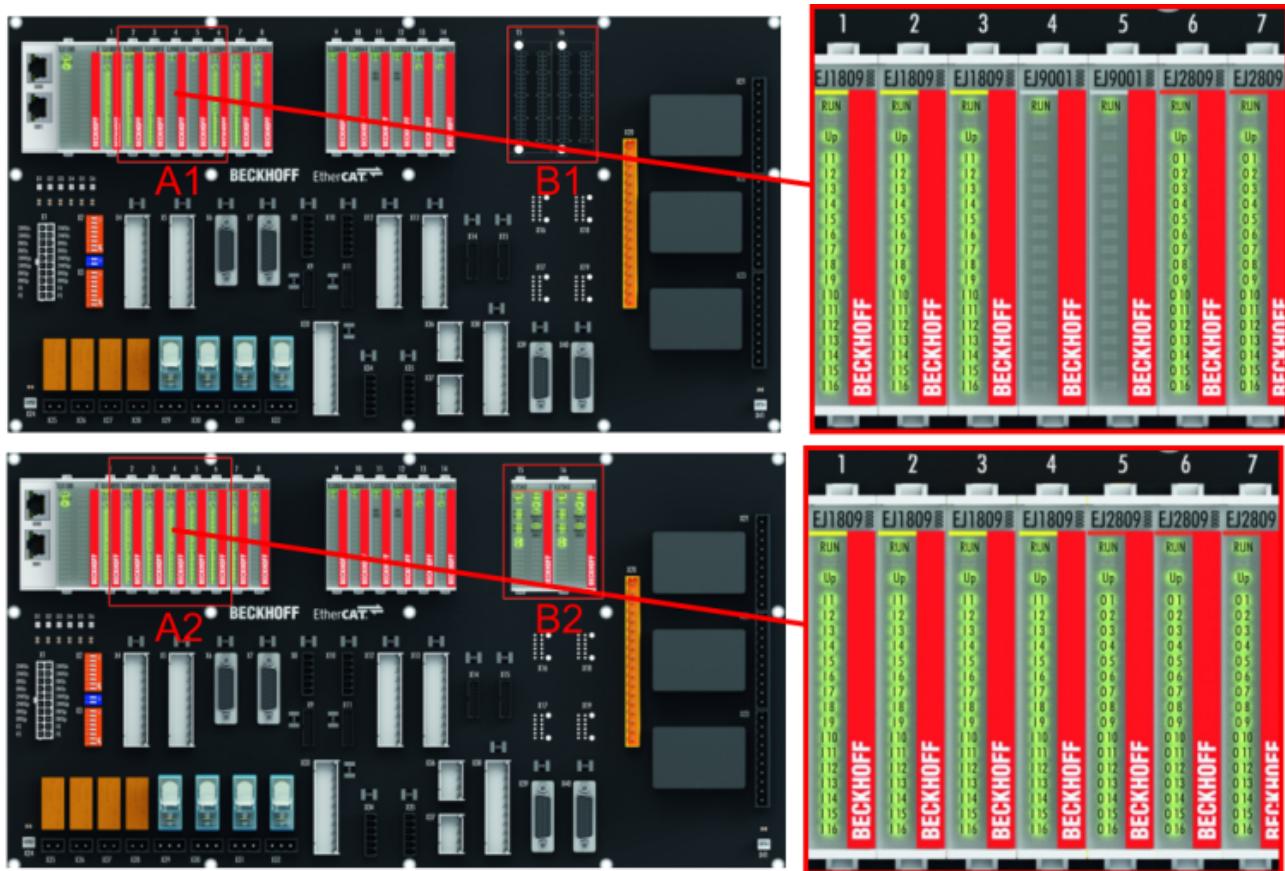


Fig. 24: Sample: Exchanging placeholder modules and assigning reserve slots



E-bus supply

Exchange the placeholder modules with other modules changes the current input from the E-Bus. Ensure that adequate power supply is provided.

5.7.2 Linking with EtherCAT Terminals and EtherCAT Box modules via an Ethernet/EtherCAT connection

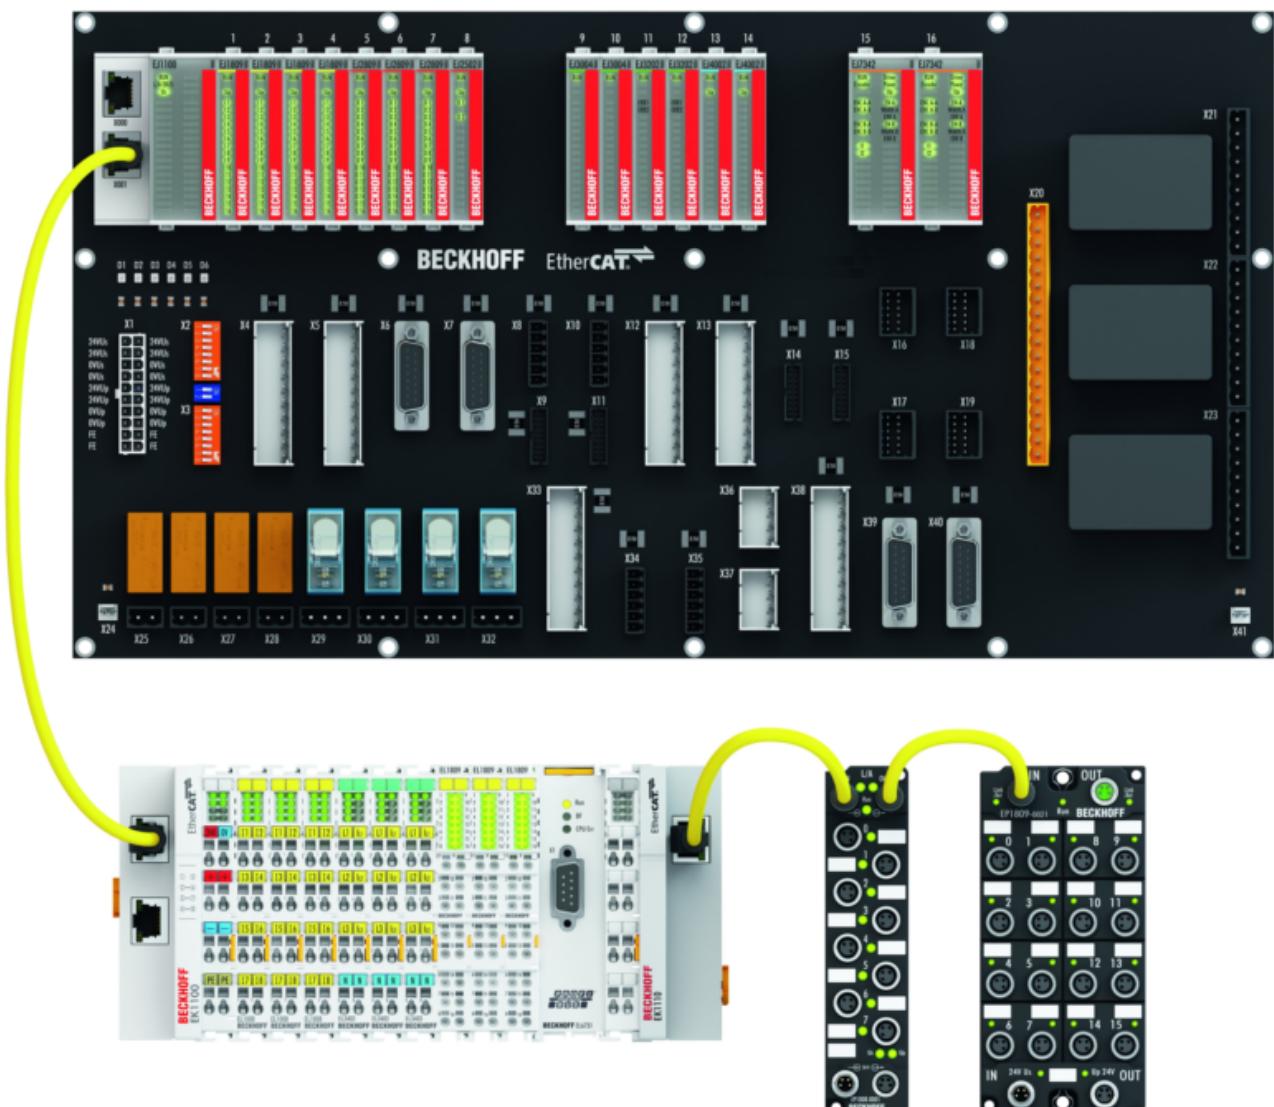


Fig. 25: Example of extension via an Ethernet/EtherCAT connection

5.8 IPC integration

Connection of CX and EL terminals via the EK1110-004x EtherCAT EJ coupler

The EK1110-0043 and EK1110-0044 EtherCAT EJ couplers connect the compact DIN-rail PCs of the CX series and attached EtherCAT Terminals (ELxxxx) with the EJ modules on the signal distribution board.

The EK1110-004x are supplied from the power supply unit of the Embedded PC.

The E-bus signals and the supply voltage of the field side U_p are routed directly to the PCB via a plug connector at the rear of the EtherCAT EJ couplers.

Due to the direct coupling of the Embedded PC and the EL terminals with the EJ modules on the PCB, no EtherCAT Extension (EK1110) or EtherCAT Coupler (EJ1100) is required.

The Embedded PC can be expanded with EtherCAT Terminals that are not yet available in the EJ system, for example.



Fig. 26: Example PCB with Embedded PC, EK1110-0043 and EJxxxx, rear view EK1110-0043

Connection of C6015 / C6017 via the EJ110x-00xx EtherCAT Coupler

Thanks to their ultra-compact design and versatile mounting options, the C6015 and C6017 IPCs are ideally suited for connection to an EJ system.

In combination with the ZS5000-0003 mounting set, it is possible to place the C6015 and C6017 IPCs compactly on the signal distribution board.

The EJ system is optimally connected to the IPC via the corresponding EtherCAT Cable (see following Fig. [A]).

The IPC can be supplied directly via the signal distribution board using the enclosed power plug (see Fig. [B] below).

NOTICE**Positioning on the signal distribution board**

The dimensions and distances for placement and other details can be found in the Design Guide and the documentation for the individual components.

The figure below shows the connection of a C6015 IPC to an EJ system as an example. The components shown are schematic, to illustrate the functionality.



Fig. 27: Example for the connection of a C6015 IPC to an EJ system

5.9 Disassembly of the signal distribution board

WARNING

Risk of injury through electric shock and damage to the device!

Bring the module system into a safe, de-energized state before starting installation, disassembly or wiring of the modules.

Each module is secured through latching on the distribution board, which has to be released for disassembly.

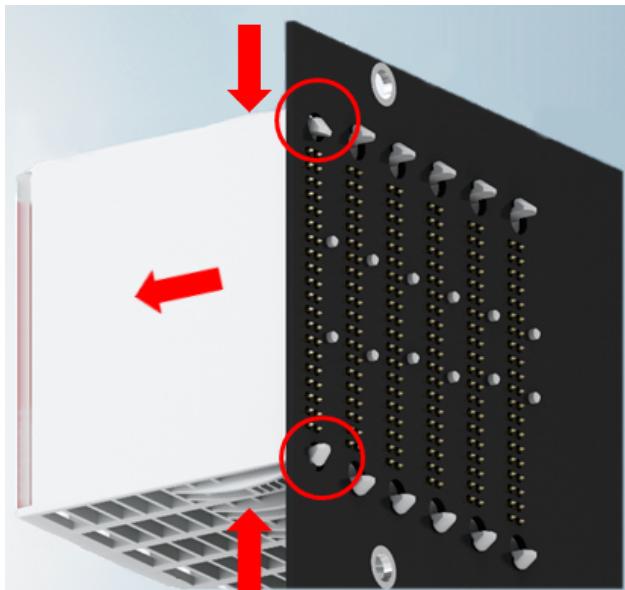


Fig. 28: Disassembly of EJ modules

To disassemble the module from the signal distribution board proceed as follows:

1. Before disassembly, ensure that the signal distribution board is securely connected to the mounting surface. Disassembly of an unsecured signal distribution board may result in damage to the board.
2. Press the upper and lower mounting tabs simultaneously and pull the module from board while gently moving it up and down.

5.10 Disposal



Products marked with a crossed-out wheeled bin shall not be discarded with the normal waste stream. The device is considered as waste electrical and electronic equipment. The national regulations for the disposal of waste electrical and electronic equipment must be observed.

6 EtherCAT basics

Please refer to the [EtherCAT System Documentation](#) for the EtherCAT fieldbus basics.

7 Commissioning

7.1 Note on EL70x1 documentation

A detailed documentation for the commissioning of the EJ70x1 modules is in preparation.

NOTICE



Damage to devices or loss of data

The descriptions and instructions for commissioning the EL70x1 EtherCAT Terminals can be transferred to the EJ70x1 EtherCAT plug-in modules.

Before commissioning, read the detailed description of the process data, operation modes and parameterization in the [EL70x1 documentation](#).

7.2 EJ7031 - Object description and parameterization



EtherCAT XML Device Description

The display matches that of the CoE objects from the EtherCAT [XML Device Description](#). We recommend downloading the latest XML file from the download area of the Beckhoff website and installing it according to installation instructions.

NOTICE



Parameterization via the CoE list (CAN over EtherCAT)

The EtherCAT device is parameterized via the CoE - Online tab (with a double click on the respective object) or via the Process Data tab (assignment of PDOs). A detailed description can be found in the EtherCAT System-Documentation in chapter "[EtherCAT subscriber configuration](#)".

Please note the general CoE notes in the EtherCAT System Documentation in chapter "[CoE-interface](#)" when using/manipulating the CoE parameters:

- Keep a startup list if components have to be replaced
- Differentiation between online/offline dictionary,
- existence of current XML description
- use "CoE reload" for resetting changes

NOTICE

Risk of damage to the device!

We strongly advise not to change settings in the CoE objects while the axis is active, since this could impair the control.

Introduction

The CoE overview contains objects for different intended applications:

- Objects required for parameterization during commissioning:
 - [Restore \[▶ 42\]](#) object index 0x1011
 - [Configuration \[▶ 42\]](#) data index 0x80nn
 - [Configuration data \(vendor-specific\) \[▶ 70\]](#) Index 0xF80F
- Profile-specific objects:
 - [Input data \[▶ 47\]](#) index 0x60n0
 - [Output data \[▶ 48\]](#) index 0x70nn
 - [Information and diagnostic data Index \[▶ 52\]](#) 0x9010... 0xF008, 0xF900
 - [Command object \[▶ 47\]](#) index 0xFB00

- Standard objects [▶ 54]

The following section first describes the objects required for normal operation, followed by a complete overview of missing objects.

7.2.1 Restore object

Index 1011 Restore default parameters

Index (hex)	Name	Meaning	Data type	Flags	Default
1011:0	Restore default parameters	Restore default parameters	UINT8	RO	0x01 (1 _{dec})
1011:01	SubIndex 001	If this object is set to “0x64616F6C” in the set value dialog, all backup objects are reset to their delivery state.	UINT32	RW	0x00000000 (0 _{dec})

7.2.2 Configuration data

Index 8000 ENC Settings Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
8000:0	ENC Settings Ch.1	Length of this object	UINT8	RO	0x0E (14 _{dec})
8000:0E	Reversion of rotation	Enables Reversion of rotation of the encoder.	BOOLEAN	RW	0x00 (0 _{dec})

Index 8010 STM Motor Settings Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
8010:0	STM Motor Settings Ch.1	Length of this object	UINT8	RO	0x11 (17 _{dec})
8010:01	Maximal current	Maximum permanent motor coil current Unit : 1 mA	UINT16	RW	0x05DC (1500 _{dec})
8010:02	Reduced current	Reduced coil current Unit : 1 mA.	UINT16	RW	0x01F4 (500 _{dec})
8010:03	Nominal voltage	Nominal voltage (supply voltage) of the motor Unit : 1 mV	UINT16	RW	0x5DC0 (24000 _{ddec})
8010:04	Motor coil resistance	Internal resistance of a coil Unit : 10 mOhm	UINT16	RW	0x0064 (100 _{dec})
8010:05	Motor EMF	Motor countervoltage Unit : 1 mV / (rad/s)	UINT16	RW	0x0000 (0 _{dec})
8010:06	Motor fullsteps	Motor full steps per revolution	UINT16	RW	0x00C8 (200 _{dec})
8010:09	Start velocity	Maximum possible start velocity of the motor	UINT16	RW	0x0000 (0 _{dec})
8010:10	Drive on delay time	Switch-on delay of the driver stage	UINT16	RW	0x0064 (100 _{dec})
8010:11	Drive off delay time	Switch-off delay of the driver stage	UINT16	RW	0x0096 (150 _{dec})

Index 8011 STM Controller Settings Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
8011:0	STM Controller Settings Ch.1	Maximum subindex	UINT8	RO	0x08 (8 _{dec})
8011:01	Kp factor (curr.)	Kp control factor (proportional component) for the current controller Unit: 0.001	UINT16	RW	0x0190 (400 _{dec})
8011:02	Ki factor (curr.)	Ki control factor (integral component) for the current controller Unit: 0.001	UINT16	RW	0x0004 (4 _{dec})
8011:03	Inner window (curr.)	Inner window for the I component of the current controller Unit : 1 %	UINT8	RW	0x00 (0 _{dec})
8011:05	Outer window (curr.)	Outer window for the I component of the current controller Unit : 1 %	UINT8	RW	0x00 (0 _{dec})
8011:06	Filter cut off frequency (curr.)	Filter limit frequency of the current controller (low-pass) Unit : 1 Hz	UINT16	RW	0x0000 (0 _{dec})
8011:07	Ka factor (curr.)	Ka control factor (acceleration component) for the current controller Unit: 0.001	UINT16	RW	0x0064 (100 _{dec})
8011:08	Kd factor (curr.)	Kd control factor (acceleration component) for the current controller Unit: 0.001	UINT16	RW	0x0064 (100 _{dec})

Index 8012 STM Features Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
8012:0	STM Features Ch.1	Maximum subindex	UINT8	RO	0x36 (54 _{dec})
8012:01	Operation mode	permitted values: 0: Automatic 1: Velocity direct 2: Velocity controller 3: Position controller	BIT4	RW	0x00 (0 _{dec})
8012:05	Speed range	Permitted values: 0: 1000 Fullsteps / s 1: 2000 Fullsteps / s 2: 4000 Fullsteps / s 3: 8000 Fullsteps / s 4: 16000 Fullsteps / s 5: 32000 Fullsteps / s	BIT3	RW	0x01 (1 _{dec})
8012:09	Invert motor polarity	Activates reversal of the motor rotation direction.	BOOLEAN	RW	0x00 (0 _{dec})
8012:11	Select info data 1	Permitted values: 0: Status word 1: Motor coil voltage A (Unit: 1 mV) 2: Motor coil voltage B (Unit: 1 mV) 3: Motor coil current A (Unit: 1 mA) 4: Motor coil current B (Unit: 1 mA) 5: Duty cycle A (Unit: 1 %) 6: Duty cycle B (Unit: 1 %) 7: Motor velocity (value range: ± 10000) 101: Internal temperature 103: Control voltage 104: Motor supply voltage 150: Drive - Status word 151: Drive - State 152: Drive - Position lag (low word) 153: Drive - Position lag (high word)	UINT8	RW	0x03 (3 _{dec})
8012:19	Select info data 2	Permitted values: 0: Status word 1: Motor coil voltage A (Unit: 1 mV) 2: Motor coil voltage B (Unit: 1 mV) 3: Motor coil current A (Unit: 1 mA) 4: Motor coil current B (Unit: 1 mA) 5: Duty cycle A (Unit: 1 %) 6: Duty cycle B (Unit: 1 %) 7: Motor velocity (value range: ± 10000) 101: Internal temperature 103: Control voltage 104: Motor supply voltage 150: Drive - Status word 151: Drive - State 152: Drive - Position lag (low word) 153: Drive - Position lag (high word)	UINT8	RW	0x04 (4 _{dec})
8012:30	Invert digital input 1	Inversion of digital input 1	BOOLEAN	RW	0x00 (0 _{dec})
8012:31	Invert digital input 2	Inversion of digital input 2	BOOLEAN	RW	0x00 (0 _{dec})
8012:32	Function for input 1	Permitted values: 0: Normal input 1: Hardware enable 2: PLC cam 3: Auto start	BIT4	RW	0x02 (2 _{dec})
8012:36	Function for input 2	Permitted values: 0: Normal input 1: Hardware enable 2: PLC cam 3: Auto start	BIT4	RW	0x02 (2 _{dec})

Index 8013 STM Controller Settings 2 Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
8013:0	STM Controller Settings 2 Ch.1	Maximum subindex	UINT8	RO	0x08 (8 _{dec})
8013:01	Kp factor (velo./pos.)	Kp control factor (proportional component) for the velocity controller Unit: 0.001	UINT16	RW	0x03E8 (1000 _{dec})
8013:02	Ki factor (velo./pos.)	Ki control factor (integral component) for the velocity controller Unit: 0.001	UINT16	RW	0x0000 (0 _{dec})
8013:03	Inner window (velo./pos.)	Inner window for the I component of the velocity controller Unit : 1 %	UINT8	RW	0x00 (0 _{dec})
8013:05	Outer window (velo./pos.)	Outer window for the I component of the velocity controller Unit : 1 %	UINT8	RW	0x00 (0 _{dec})
8013:06	Filter cut off frequency (velo./pos.)	Filter limit frequency of the velocity controller (low-pass) Unit : 1 Hz	UINT16	RW	0x0000 (0 _{dec})
8013:07	Ka factor (velo./pos.)	Ka control factor (acceleration component) for the velocity controller Unit: 0.001	UINT16	RW	0x0000 (0 _{dec})
8013:08	Kd factor (velo./pos.)	Kd control factor (acceleration component) for the velocity controller Unit: 0.001	UINT16	RW	0x0000 (0 _{dec})

Index 8020 POS Settings Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
8020:0	POS Settings Ch.1	Maximum subindex	UINT8	RO	0x11 (17 _{dec})
8020:01	Velocity min.	Minimum set velocity (range: 0-10000)	INT16	RW	0x0064 (100 _{dec})
8020:02	Velocity max.	Maximum set velocity (range: 0-10000)	INT16	RW	0x2710 (10000 _{dec})
8020:03	Acceleration pos.	Acceleration time in positive direction of rotation Unit : 1 ms	UINT16	RW	0x03E8 (1000 _{dec})
8020:04	Acceleration neg.	Acceleration time in negative direction of rotation Unit : 1 ms	UINT16	RW	0x03E8 (1000 _{dec})
8020:05	Deceleration pos.	Deceleration time in positive direction of rotation Unit : 1 ms	UINT16	RW	0x03E8 (1000 _{dec})
8020:06	Deceleration neg.	Deceleration time in negative direction of rotation Unit : 1 ms	UINT16	RW	0x03E8 (1000 _{dec})
8020:07	Emergency deceleration	Emergency deceleration time (both directions of rotation) Unit : 1 ms	UINT16	RW	0x0064 (100 _{dec})
8020:08	Calibration postion	Calibration position	UINT32	RW	0x00000000 (0 _{dec})
8020:09	Calibration velocity (towards plc cam)	Calibration velocity towards the cam (range: 0-10000)	INT16	RW	0x0064 (100 _{dec})
8020:0A	Calibration velocity (off plc cam)	Calibration velocity away from the cam (range: 0-10000)	INT16	RW	0x000A (10 _{dec})
8020:0B	Target window	Target window	UINT16	RW	0x000A (10 _{dec})
8020:0C	In-Target timeout	Timeout at target position Unit : 1 ms	UINT16	RW	0x03E8 (1000 _{dec})
8020:0D	Dead time compensation	Dead time compensation Unit : 1 μ s	INT16	RW	0x0032 (50 _{dec})
8020:0E	Modulo factor	Modulo factor/position	UINT32	RW	0x00000000 (0 _{dec})
8020:0F	Modulo tolerance window	Tolerance window for modulo positioning	UINT32	RW	0x00000000 (0 _{dec})
8020:10	Position lag max.	maximum position lag	UINT16	RW	0x0000 (0 _{dec})
8020:11	Calibration acceleration (around plc cam)	Acceleration and braking ramps for homing runs	UINT16	RW	0x0000 (0 _{dec})

Index 8021 POS Features Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
8021:0	POS Features Ch.1	Maximum subindex	UINT8	RO	0x16 (22 _{dec})
8021:01	Start type	permitted values: 0: Idle 1: Absolute 2: Relative 3: Endless plus 4: Endless minus 6: Additive 24832: Calibration (Hardware sync) 2457: Calibration (Plc cam) 28416: Calibration (Clear manual) 28160: Calibration (Set manual) 28161: Calibration (Set manual auto) 1029: Modulo current 773: Modulo minus 517: Modulo plus 261: Modulo short	UINT16	RW	0x0001 (1 _{dec})
8021:11	Time information	permitted values: 0: Elapsed time current drive time since start of the travel command	BIT2	RW	0x00 (0 _{dec})
8021:13	Invert calibration cam search direction	Inversion of the direction of rotation towards the cam	BOOLEAN	RW	0x01 (1 _{dec})
8021:14	Invert sync impulse search direction	Inversion of the direction of rotation away from the cam	BOOLEAN	RW	0x00 (0 _{dec})
8021:15	Emergency stop on position lag error	Triggers an emergency stop if the maximum following error is exceeded	BOOLEAN	RW	0x00 (0 _{dec})
8021:16	Enhanced diag history	Provides detailed messages about the status of the positioning interface in the diag history	BOOLEAN	RW	0x00 (0 _{dec})

7.2.3 Vendor configuration data (device-specific)**Index F80F STM Vendor data**

Index (hex)	Name	Meaning	Data type	Flags	Default
F80F:0	STM Vendor data	Maximum subindex	UINT8	RO	0x08 (8 _{dec})
F80F:01	PWM Frequency	DC link frequency Unit: 1°Hz	UINT16	RW	0x7D00 (32000 _{dec})
F80F:02	Deadtime	Dead time for pulse width modulation	UINT16	RW	0x0604 (1540 _{dec})
F80F:03	Deadtime space	Duty cycle limitation	UINT16	RW	0x0014 (20 _{dec})
F80F:04	Warning temperature	Threshold for temperature warning Unit: 1°C, (see subindex 0xA010:02 [▶ 53])	INT8	RW	0x50 (80 _{dec})
F80F:05	Switch off temperature	Switch-off temperature Unit: 1°C	INT8	RW	0x64 (100 _{dec})
F80F:06	Analog trigger point	Trigger point for AD conversion	UINT16	RW	0x000A (10 _{dec})
F80F:07	Calibration offset A	Current measurement offset compensation for coil A (set by the manufacturer)	INT16	RW	0x0000 (0 _{dec})
F80F:08	Calibration offset B	Current measurement offset compensation for coil B (set by the manufacturer)	INT16	RW	0x0000 (0 _{dec})

7.2.4 Command object

Index FB00 STM Command

Index (hex)	Name	Meaning	Data type	Flags	Default
FB00:0	STM Command	Maximum subindex	UINT8	RO	0x03 (3 _{dez})
FB00:01	Request	Requesting a command 0x8000: Software-Reset	OCTET-STRING[2]	RW	{0}
FB00:02	Status	Status of the command: 0: No error, without return value 1: No error, with return value 2: With error, without return value 3: With error, with return value reserved 255: Command execution active	UINT8	RO	0x00 (0 _{dez})
FB00:03	Response	Return value of the executed command	OCTET-STRING[4]	RO	{0}

7.2.5 Input data

Index 6000 ENC Inputs Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
6000:0	ENC Inputs Ch.1	Length of this object	UINT8	RO	0x16 (22 _{dec})
6000:02	Latch extern valid	The counter value was stored via the external latch.	BOOLEAN	RO	0x00 (0 _{dec})
6000:03	Set counter done	The counter was set.	BOOLEAN	RO	0x00 (0 _{dec})
6000:04	Counter underflow	Counter underflow.	BOOLEAN	RO	0x00 (0 _{dec})
6000:05	Counter overflow	Counter overflow.	BOOLEAN	RO	0x00 (0 _{dec})
6000:0D	Status of extern latch	Status of the ext. latch input.	BOOLEAN	RO	0x00 (0 _{dec})
6000:0E	Sync error	The Sync error bit is only required for DC mode. It indicates whether a synchronization error has occurred during the previous cycle.	BOOLEAN	RO	0x00 (0 _{dec})
6000:10	TxPDO Toggle	The TxPDO toggle is toggled by the slave when the data of the associated TxPDO is updated.	BOOLEAN	RO	0x00 (0 _{dec})
6000:11	Counter value	The counter value.	UINT32	RO	0x00000000 (0 _{dec})
6000:12	Latch value	The latch value.	UINT32	RO	0x00000000 (0 _{dec})
6000:16	Timestamp	Time stamp of the last counter change.	UINT32	RO	0x00000000 (0 _{dec})

Index 6010 STM Inputs Ch. 1

Index (hex)	Name	Meaning	Data type	Flags	Default
6010:0	STM Inputs Ch. 1	Length of this object	UINT8	RO	0x15 (21 _{dec})
6010:01	Ready to enable	Driver stage is ready for enabling	BOOLEAN	RO	0x00 (0 _{dec})
6010:02	Ready	Driver stage is ready for operation	BOOLEAN	RO	0x00 (0 _{dec})
6010:03	Warning	A warning has occurred (see index 0xA010 [▶ 53]).	BOOLEAN	RO	0x00 (0 _{dec})
6010:04	Error	An error has occurred (see index 0xA010 [▶ 53]).	BOOLEAN	RO	0x00 (0 _{dec})
6010:05	Moving positive	Motor turns in positive direction	BOOLEAN	RO	0x00 (0 _{dec})
6010:06	Moving negative	Motor turns in negative direction	BOOLEAN	RO	0x00 (0 _{dec})
6010:07	Torque reduced	Reduced torque is active	BOOLEAN	RO	0x00 (0 _{dec})
6010:0C	Digital input 1	digital Input 1	BOOLEAN	RO	0x00 (0 _{dec})
6010:0D	Digital input 2	digital Input 2	BOOLEAN	RO	0x00 (0 _{dec})
6010:0E	Sync error	The Sync error bit is only required for DC mode. It indicates whether a synchronization error has occurred during the previous cycle.	BOOLEAN	RO	0x00 (0 _{dec})
6010:10	TxDPO Toggle	The TxPDO toggle is toggled by the slave when the data of the associated TxPDO is updated.	BOOLEAN	RO	0x00 (0 _{dec})
6010:11	Info data 1	Synchronous information (selection via subindex 0x8012:11 [▶ 44])	UINT16	RO	0x0000 (0 _{dec})
6010:12	Info data 2	Synchronous information (selection via subindex 0x8012:19 [▶ 44])	UINT16	RO	0x0000 (0 _{dec})
6010:14	Internal position	internal microstep position	UINT32	RO	0x00000000 (0 _{dec})
6010:15	External position	Encoder position	UINT32	RO	0x00000000 (0 _{dec})

Index 6020 POS Inputs Ch. 1

Index (hex)	Name	Meaning	Data type	Flags	Default
6020:0	POS Inputs Ch. 1	Length of this object	UINT8	RO	0x23 (35 _{dec})
6020:01	Busy	A current travel command is active.	BOOLEAN	RO	0x00 (0 _{dec})
6020:02	In-Target	Motor has arrived at target.	BOOLEAN	RO	0x00 (0 _{dec})
6020:03	Warning	eine Warnung ist aufgetreten	BOOLEAN	RO	0x00 (0 _{dec})
6020:04	Error	A warning has occurred.	BOOLEAN	RO	0x00 (0 _{dec})
6020:05	Calibrated	Motor is calibrated.	BOOLEAN	RO	0x00 (0 _{dec})
6020:06	Accelerate	Motor is in the acceleration phase.	BOOLEAN	RO	0x00 (0 _{dec})
6020:07	Decelerate	Motor is in the deceleration phase.	BOOLEAN	RO	0x00 (0 _{dec})
6020:08	Ready to execute	ready for driving job	BOOLEAN	RO	0x00 (0 _{dec})
6020:11	Actual position	Current target position of the travel command generator	UINT32	RO	0x00000000 (0 _{dec})
6020:21	Actual velocity	Current set velocity of the travel command generator	INT16	RO	0x0000 (0 _{dec})
6020:22	Actual drive time	Travel command time information (see subindex 0x8021:11 [▶ 46])	UINT32	RO	0x00000000 (0 _{dec})
6020:23	Actual position lag	Position lag	INT32	RO	0x00000000 (0 _{dec})

7.2.6 Output data**Index 7000 ENC Outputs Ch.1**

Index (hex)	Name	Meaning	Data type	Flags	Default
7000:0	ENC Outputs Ch	Length of this object	UINT8	RO	0x11 (17 _{dec})
7000:02	Enable latch extern on positive edge	Activate external latch with positive edge.	BOOLEAN	RO	0x00 (0 _{dec})
7000:03	Set counter	Set the counter value.	BOOLEAN	RO	0x00 (0 _{dec})
7000:04	Enable latch extern on negative edge	Activate external latch with negative edge.	BOOLEAN	RO	0x00 (0 _{dec})
7000:11	Set counter value	This is the counter value to be set via "Set counter". (Index 0x7000:03)	UINT32	RO	0x00000000 (0 _{dec})

Index 7010 STM Outputs Ch. 1

Index (hex)	Name	Meaning	Data type	Flags	Default
7010:0	STM Outputs Ch. 1	Length of this object	UINT8	RO	0x21 (33 _{dec})
7010:01	Enable	activates the output stage	BOOLEAN	RO	0x00 (0 _{dec})
7010:02	Reset	all errors that may have occurred are reset by setting this bit (rising edge)	BOOLEAN	RO	0x00 (0 _{dec})
7010:03	Reduce torque	Activation of reduced torque (coil current) (see subindex 0x8010:02 [▶ 42])	BOOLEAN	RO	0x00 (0 _{dec})
7010:11	Position	Set position	UINT32	RO	0x00000000 (0 _{dec})
7010:21	Velocity	Set velocity	INT16	RO	0x0000 (0 _{dec})

Index 7020 POS Outputs Ch. 1

Index (hex)	Name	Meaning	Data type	Flags	Default
7020:0	POS Outputs Ch. 1	Length of this object	UINT8	RO	0x24 (36 _{dec})
7020:01	Execute	Start travel command (rising edge), or prematurely abort travel command (falling edge)	BOOLEAN	RO	0x00 (0 _{dec})
7020:02	Emergency stop	Prematurely abort travel command with an emergency ramp (rising edge)	BOOLEAN	RO	0x00 (0 _{dec})
7020:11	Target positon	Specification of the target position	UINT32	RO	0x00000000 (0 _{dec})
7020:21	Velocity	Specification of the maximum set velocity	INT16	RO	0x0000 (0 _{dec})
7020:22	Start type	No travel command is being executed	UINT16	RO	0x0000 (0 _{dec})
	0x0001 Absolute	Absolute target position			
	0x0002 Relative	Target position relative to the start position			
	0x0003 Endless plus	Endless driving in positive direction of rotation			
	0x0004 Endless minus	Endless driving in negative direction of rotation			
	0x0105 Modulo short	Shortest distance to the next modulo position			
	0x0115 Modulo short extended	Shortest distance to the next modulo position (without modulo window)			
	0x0205 Modulo plus	Drive in positive direction of rotation to the next modulo position			
	0x0215 Modulo plus extended	Drive in positive direction of rotation to the next modulo position (without modulo window)			
	0x0305 Modulo minus	Drive in negative direction of rotation to the next modulo position			
	0x0315 Modulo minus extended	Drive in negative direction of rotation to the next modulo position (without modulo window)			
	0x0405 Modulo current	Drive in the last implemented direction of rotation to the next modulo position			
	0x0415 Modulo current extended	Drive in the last implemented direction of rotation to the next modulo position (without modulo window)			
	0x0006 Additive	New target position relative/additive to the last target position			
	0x6000 Calibration, PLC cam	Calibration with cam			
	0x6100 Calibration, HW sync	Calibration with cam and C-track			
	0x6E00 Calibration, set manual	Set calibration manually			
	0x6E01 Calibration, set manual auto	Set calibration automatically			
	0x6F00 Calibration, clear manual	Clear calibration manually			
7020:23	Acceleration	Acceleration specification	UINT16	RO	0x0000 (0 _{dec})
7020:24	Deceleration	Deceleration specification	UINT16	RO	0x0000 (0 _{dec})

Index 7021 POS Outputs 2 Ch. 1

Index (hex)	Name	Meaning	Data type	Flags	Default
7021:0	POS Outputs 2 Ch. 1	Length of this object	UINT8	RO	0x24 (36 _{dec})
7021:03	Enable auto start	Enable auto start	BOOLEAN	RO	0x00 (0 _{dec})
7021:11	Target positon	Specification of the target position	UINT32	RO	0x00000000 (0 _{dec})
7021:21	Velocity	Specification of the maximum set velocity	INT16	RO	0x0000 (0 _{dec})
7021:22	Start type	0x0000 Idle 0x0001 Absolute 0x0002 Relative 0x0003 Endless plus 0x0004 Endless minus 0x1001 Absolute (change) 0x1002 Relative (change) 0x0105 Modulo short 0x0115 Modulo short extended 0x0205 Modulo plus 0x0215 Modulo plus extended 0x0305 Modulo minus 0x0315 Modulo minus extended 0x0405 Modulo current 0x0415 Modulo current extended 0x0006 Additive 0x1006 Additive (Change) 0x6000 Calibration, PLC cam 0x6100 Calibration, HW sync 0x6E00 Calibration, set manual 0x6E01 Calibration, set manual auto 0x6F00 Calibration, clear manual	UINT16	RO	0x0000 (0 _{dec})
7021:23	Acceleration	Acceleration specification	UINT16	RO	0x0000 (0 _{dec})
7021:24	Deceleration	Deceleration specification	UINT16	RO	0x0000 (0 _{dec})

7.2.7 Information and diagnostic data

Channel specific:

Index 9010 STM Info data Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
9010:0	STM Info data Ch.1	General information for the modular device profile	UINT8	RO	0x13 (19 _{dec})
9010:01	Status word	Status-word (see index 0xA010 [▶ 53])	UINT16	RO	0x0000 (0 _{dec})
9010:02	Motor coil voltage A	Motor voltage coil A Unit 1 mV	UINT16	RO	0x0000 (0 _{dec})
9010:03	Motor coil voltage B	Motor voltage coil B Unit 1 mV	UINT16	RO	0x0000 (0 _{dec})
9010:04	Motor coil current A	Motor current coil A Unit 1 mA	UINT16	RO	0x0000 (0 _{dec})
9010:05	Motor coil current B	Motor current coil B Unit 1 mA	UINT16	RO	0x0000 (0 _{dec})
9010:06	Duty cycle A	Duty-Cycle coil A Unit 1 %	UINT16	RO	0x0000 (0 _{dec})
9010:07	Duty cycle B	Duty-Cycle coil B Unit 1 %	UINT16	RO	0x0000 (0 _{dec})
9010:08	Motor velocity	Current velocity (value range +/- 10000)	INT16	RO	0x0000 (0 _{dec})
9010:09	Internal position	internal position	UINT32	RO	0x00000000 (0 _{dec})
9010:13	External position	External position (connected encoder)	UINT32	RO	0x00000000 (0 _{dec})

Index 9020 POS Info data Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
9020:0	POS Info data Ch.1	General information for the modular device profile	UINT8	RO	0x04 (4 _{dec})
9020:01	Status word	Status word	UINT16	RO	0x0000 (0 _{dec})
9020:03	State (drive controller)	Permitted values: 0: Init 1: Idle 272: Go cam 273: On cam 16: Start 17: Acceleration 18: Constant 19: Deceleration 288: Go sync impulse 289: Leave cam 4096: Pre target 4097: In target 32: Emergency stop 33: Normal stop 304: Calibration stop 8192: Drive end 8192: Wait for init 320: Is calibrated 321: Not calibrated 16384: Drive warning 32768: Error 65535: Undefined 256: Calibration start	UINT16	RO	0x0000 (0 _{dec})
9020:04	Actual position lag	Current step error	INT32	RO	0x00000000 (0 _{dec})

Index A010 STM Diag data Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
A010:0	STM Diag data Ch.1	General information for the modular device profile	UINT8	RO	0x11 (17 _{dec})
A010:01	Saturated	Driver stage operates with maximum duty cycle	BOOLEAN	RO	0x00 (0 _{dec})
A010:02	Over temperature	Internal module temperature is higher than 80°C	BOOLEAN	RO	0x00 (0 _{dec})
A010:03	Torque overload	Motor current is higher than the rated current	BOOLEAN	RO	0x00 (0 _{dec})
A010:04	Under voltage	Motor supply voltage is 20% lower than the configured nominal voltage (warning), or Motor supply voltage is less than 8 V (error, see 0xA010:09)	BOOLEAN	RO	0x00 (0 _{dec})
A010:05	Over voltage	Motor supply voltage is 10% higher than the configured nominal voltage (see index 0x8010:03 [▶ 42])	BOOLEAN	RO	0x00 (0 _{dec})
A010:06	Short circuit A	Short circuit in motor coil A	BOOLEAN	RO	0x00 (0 _{dec})
A010:07	Short circuit B	Short circuit in motor coil B	BOOLEAN	RO	0x00 (0 _{dec})
A010:08	No control power	The control voltage at the Up-contacts is lower than 12 V	BOOLEAN	RO	0x00 (0 _{dec})
A010:09	Misc error	<ul style="list-style-type: none"> • Module initialization failed or • Supply voltage is lower than 8 V or • Internal temperature of the Module is higher than 100°C (see index 0xF80F:05 [▶ 46]) 	BOOLEAN	RO	0x00 (0 _{dec})
A010:0A	Configuration	CoE change has not yet been adopted into the current configuration	BOOLEAN	RO	0x00 (0 _{dec})
A010:11	Actual operation mode	Current operation mode (relevant for activated automatic, see 0x8012:01 [▶ 44]) permitted values: 0: Automatic 1: Velocity direct 2: Velocity controller 3: Position controller	BIT4	RO	0x00 (0 _{dec})

Index A020 POS Diag data Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
A020:0	POS Diag data Ch.1	General information for the modular device profile	UINT8	RO	0x06 (6 _{dec})
A020:01	Command rejected	Travel command was rejected.	BOOLEAN	RO	0x00 (0 _{dec})
A020:02	Command aborted	Travel command was aborted.	BOOLEAN	RO	0x00 (0 _{dec})
A020:03	Target overrun	Target position was overrun in the opposite direction.	BOOLEAN	RO	0x00 (0 _{dec})
A020:04	Target timeout	The target window was not reached within the in-target timeout	BOOLEAN	RO	0x00 (0 _{dec})
A020:05	Position lag	The maximum following error was exceeded.	BOOLEAN	RO	0x00 (0 _{dec})
A020:06	Emergency stop	An emergency stop was triggered (automatic or manual)	BOOLEAN	RO	0x00 (0 _{dec})

Device specific:**Index 10F3 Diagnosis History**

Index (hex)	Name	Meaning	Data type	Flags	Default
10F3:0	Diagnosis History	Max. Subindex	UINT8	RO	0x37 (55 _{dec})
10F3:01	Maximum Messages	Maximum number of stored messages. A maximum of 50 messages can be stored	UINT8	RO	0x00 (0 _{dec})
10F3:02	Newest Message	Subindex of the latest message	UINT8	RO	0x00 0 _{dec})
10F3:03	Newest Acknowledged Message	Subindex of the last confirmed message	UINT8	RO	0x00 (0 _{dec})
10F3:04	New Message available	Indicates that a new message is available	BOOLEAN	RO	0x00 (0 _{dec})
10F3:05	Flags	not used	UINT16	RO	0x0000 (0 _{dec})
10F3:06	Diagnosis Message 001	Message 1	OCTET-STRING[28]	RO	{0}
...
10F3:37	Diagnosis Message 050	Message 50	OCTET-STRING[28]	RO	{0}

Index F000 Modular device profile

Index (hex)	Name	Meaning	Data type	Flags	Default
F000:0	Modular device profile	General information for the modular device profile	UINT8	RO	0x02 (2 _{dec})
F000:01	Module index distance	Index distance of the objects of the individual channels	UINT16	RO	0x0010 (16 _{dec})
F000:02	Maximum number of modules	Number of channels	UINT16	RO	0x0003 (3 _{dec})

Index F008 Code word

Index (hex)	Name	Meaning	Data type	Flags	Default
F008:0	Code word	reserved	UINT32	RW	0x00000000 (0 _{dec})

Index F010 Module list

Index (hex)	Name	Meaning	Data type	Flags	Default
F010:0	Module list	Length of this object	UINT8	RW	0x03 (3 _{dec})
F010:01	SubIndex 001	-	UINT32	RW	0x00001FF (511 _{dec})
F010:02	SubIndex 002	-	UINT32	RW	0x00002BF (703 _{dec})
F010:03	SubIndex 003	-	UINT32	RW	0x00002C0 (704 _{dec})

Index F081 Download revision

Index (hex)	Name	Meaning	Data type	Flags	Default
F081:0	Download revision	Max. Subindex	UINT8	RO	0x01 (1 _{dec})
F081:01	Revision number	The subindex 0xF081:01 (Download revision) describes the revision level of the module.	UINT32	RW	0x00000000 (0 _{dec})

Index F900 STM Info data

Index (hex)	Name	Meaning	Data type	Flags	Default
F900:0	STM Info data	Max. Subindex	UINT8	RO	0x06 (6 _{dec})
F900:01	Software version (driver)	Software version of the driver card	STRING	RO	
F900:02	Internal temperature	Internal module temperature Unit: 1°C	INT8	RO	0x00 (0 _{dec})
F900:04	Control voltage	Control voltage Unit: 1 mV,	UINT16	RO	0x0000 (0 _{dec})
F900:05	Motor supply voltage	Motor supply voltage Unit: 1 mV	UINT16	RO	0x0000 (0 _{dec})
F900:06	Cycle time	Measured cycle time Unit: 1 µs	UINT16	RO	0x0000 (0 _{dec})

7.2.8 Standard objects (0x1000-0x1FFF)

The standard objects have the same meaning for all EtherCAT slaves.

Index 1000 Device type

Index (hex)	Name	Meaning	Data type	Flags	Default
1000:0	Device type	Device type of the EtherCAT slave: The Lo-Word contains the CoE profile used (5001). The Hi-Word contains the module profile according to the modular device profile.	UINT32	RO	0x00001389 (5001 _{dec})

Index 1008 Device name

Index (hex)	Name	Meaning	Data type	Flags	Default
1008:0	Device name	Device name of the EtherCAT slave	STRING	RO	EJ7031

Index 1009 Hardware version

Index (hex)	Name	Meaning	Data type	Flags	Default
1009:0	Hardware version	Hardware version of the EtherCAT slave	STRING	RO	00

Index 100A Software version

Index (hex)	Name	Meaning	Data type	Flags	Default
100A:0	Software version	Firmware version of the EtherCAT slave	STRING	RO	01

Index 1018 Identity

Index (hex)	Name	Meaning	Data type	Flags	Default
1018:0	Identity	Information for identifying the slave	UINT8	RO	0x04 (4 _{dec})
1018:01	Vendor ID	Vendor ID of the EtherCAT slave	UINT32	RO	0x00000002 (2 _{dec})
1018:02	Product code	Product code of the EtherCAT slave	UINT32	RO	0x1B772852 (460793938 _{dec})
1018:03	Revision	Revision number of the EtherCAT slave; the Low Word (bit 0-15) indicates the special module number, the High Word (bit 16-31) refers to the device description	UINT32	RO	0x00000000 (0 _{dec})
1018:04	Serial number	Serial number of the EtherCAT slave; the Low Byte (bit 0-7) of the Low Word contains the year of production, the High Byte (bit 8-15) of the Low Word contains the week of production, the High Word (bit 16-31) is 0	UINT32	RO	0x00000000 (0 _{dec})

Index 10F0 Backup parameter handling

Index (hex)	Name	Meaning	Data type	Flags	Default
10F0:0	Backup parameter handling	Information for standardized loading and saving of backup entries	UINT8	RO	0x01 (1 _{dec})
10F0:01	Checksum	Checksum across all backup entries of the EtherCAT slave	UINT32	RO	0x00000000 (0 _{dec})

Index 10F8 Actual Time Stamp

Index (hex)	Name	Meaning	Data type	Flags	Default
10F8:0	Actual Time Stamp	Timestamp	UINT64	RO	

Index 1400 ENC RxPDO-Par Control compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1400:0	ENC RxPDO-Par Control compact	PDO Parameter RxPDO 1	UINT8	RO	0x06 (6 _{dec})
1400:06	Exclude RxPDOs	Specifies the RxPDOs (index of RxPDO mapping objects) that must not be transferred together with RxPDO 1.	OCTET-STRING[6]	RO	01 16 00 00 00 00

Index 1401 ENC RxPDO-Par Control

Index (hex)	Name	Meaning	Data type	Flags	Default
1401:0	ENC RxPDO-Par Control	PDO Parameter RxPDO 2	UINT8	RO	0x06 (6 _{dec})
1401:06	Exclude RxPDOs	Specifies the RxPDOs (index of RxPDO mapping objects) that must not be transferred together with RxPDO 2.	OCTET-STRING[6]	RO	00 16 00 00 00 00

Index 1403 STM RxPDO-Par Position

Index (hex)	Name	Meaning	Data type	Flags	Default
1403:0	STM RxPDO-Par Position	PDO Parameter RxPDO 4	UINT8	RO	0x06 (6 _{dec})
1403:06	Exclude RxPDOs	Specifies the RxPDOs (index of RxPDO mapping objects) that must not be transferred together with RxPDO 4.	OCTET-STRING[6]	RO	04 16 05 16 06 16

Index 1404 STM RxPDO-Par Velocity

Index (hex)	Name	Meaning	Data type	Flags	Default
1404:0	STM RxPDO-Par Velocity	PDO Parameter RxPDO 5	UINT8	RO	0x06 (6 _{dec})
1404:06	Exclude RxPDOs	Specifies the RxPDOs (index of RxPDO mapping objects) that must not be transferred together with RxPDO 5.	OCTET-STRING[6]	RO	03 16 05 16 06 16

Index 1405 POS RxPDO-Par Control compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1405:0	POS RxPDO-Par Control compact	PDO Parameter RxPDO 6	UINT8	RO	0x06 (6 _{dec})
1405:06	Exclude RxPDOs	Specifies the RxPDOs (index of RxPDO mapping objects) that must not be transferred together with RxPDO 6.	OCTET-STRING[6]	RO	03 16 04 16 06 16

Index 1406 POS RxPDO-Par Control

Index (hex)	Name	Meaning	Data type	Flags	Default
1406:0	POS RxPDO-Par Control	PDO Parameter RxPDO 7	UINT8	RO	0x06 (6 _{dec})
1406:06	Exclude RxPDOs	Specifies the RxPDOs (index of RxPDO mapping objects) that must not be transferred together with RxPDO 7.	OCTET-STRING[6]	RO	03 16 04 16 05 16

Index 1407 POS RxPDO-Par Control 2

Index (hex)	Name	Meaning	Data type	Flags	Default
1407:0	POS RxPDO-Par Control 2	PDO Parameter RxPDO 8	UINT8	RO	0x06 (6 _{dec})
1407:06	Exclude RxPDOs	Specifies the RxPDOs (index of RxPDO mapping objects) that must not be transferred together with RxPDO 8	OCTET-STRING[6]	RO	03 16 04 16 05 16

Index 1600 ENC RxPDO-Map Control compact

Index (hex)	Name	Meaning	Data type	Flags	Default value
1600:0	ENC RxPDO-Map Control compact	PDO Mapping RxPDO 1	UINT8	RO	0x07 (7 _{dec})
1600:01	SubIndex 001	1. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1600:02	SubIndex 002	2. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x02 (Enable latch extern on positive edge))	UINT32	RO	0x7000:02, 1
1600:03	SubIndex 003	3. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x03 (Set counter))	UINT32	RO	0x7000:03, 1
1600:04	SubIndex 004	4. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x04 (Enable latch extern on negative edge))	UINT32	RO	0x7000:04, 1
1600:05	SubIndex 005	5. PDO Mapping entry (4 bits align)	UINT32	RO	0x0000:00, 4
1600:06	SubIndex 006	6. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8
1600:07	SubIndex 007	7. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x11 (Set counter value))	UINT32	RO	0x7000:11, 16

Index 1601 ENC RxPDO-Map Control

Index (hex)	Name	Meaning	Data type	Flags	Default
1601:0	ENC RxPDO-Map Control	PDO Mapping RxPDO 2	UINT8	RO	0x07 (7 _{dec})
1601:01	SubIndex 001	1. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1601:02	SubIndex 002	2. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x02 (Enable latch extern on positive edge))	UINT32	RO	0x7000:02, 1
1601:03	SubIndex 003	3. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x03 (Set counter))	UINT32	RO	0x7000:03, 1
1601:04	SubIndex 004	4. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x04 (Enable latch extern on negative edge))	UINT32	RO	0x7000:04, 1
1601:05	SubIndex 005	5. PDO Mapping entry (4 bits align)	UINT32	RO	0x0000:00, 4
1601:06	SubIndex 006	6. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8
1601:07	SubIndex 007	7. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x11 (Set counter value))	UINT32	RO	0x7000:11, 32

Index 1602 STM RxPDO-Map Control

Index (hex)	Name	Meaning	Data type	Flags	Default
1602:0	STM RxPDO-Map Control	PDO Mapping RxPDO 3	UINT8	RO	0x05 (5 _{dec})
1602:01	SubIndex 001	1. PDO Mapping entry (object 0x7010 (STM Outputs Ch.1), entry 0x01 (Enable))	UINT32	RO	0x7010:01, 1
1602:02	SubIndex 002	2. PDO Mapping entry (object 0x7010 (STM Outputs Ch.1), entry 0x02 (Reset))	UINT32	RO	0x7010:02, 1
1602:03	SubIndex 003	3. PDO Mapping entry (object 0x7010 (STM Outputs Ch.1), entry 0x03 (Reduce torque))	UINT32	RO	0x7010:03, 1
1602:04	SubIndex 004	4. PDO Mapping entry (5 bits align)	UINT32	RO	0x0000:00, 5
1602:05	SubIndex 005	5. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8

Index 1603 STM RxPDO-Map Position

Index (hex)	Name	Meaning	Data type	Flags	Default
1603:0	STM RxPDO-Map Position	PDO Mapping RxPDO 4	UINT8	RO	0x01 (1 _{dec})
1603:01	SubIndex 001	1. PDO Mapping entry (object 0x7010 (STM Outputs Ch.1), entry 0x11 (Position))	UINT32	RO	0x7010:11, 32

Index 1604 STM RxPDO-Map Velocity

Index (hex)	Name	Meaning	Data type	Flags	Default
1604:0	STM RxPDO-Map Velocity	PDO Mapping RxPDO 5	UINT8	RO	0x01 (1 _{dec})
1604:01	SubIndex 001	1. PDO Mapping entry (object 0x7010 (STM Outputs Ch.1), entry 0x21 (Velocity))	UINT32	RO	0x7010:21, 16

Index 1605 POS RxPDO-Map Control compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1605:0	POS RxPDO-Map Control compact	PDO Mapping RxPDO 6	UINT8	RO	0x05 (5 _{dec})
1605:01	SubIndex 001	1. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x01 (Execute))	UINT32	RO	0x7020:01, 1
1605:02	SubIndex 002	2. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x02 (Emergency stop))	UINT32	RO	0x7020:02, 1
1605:03	SubIndex 003	3. PDO Mapping entry (6 bits align)	UINT32	RO	0x0000:00, 6
1605:04	SubIndex 004	4. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8
1605:05	SubIndex 005	5. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x11 (Target position))	UINT32	RO	0x7020:11, 32

Index 1606 POS RxPDO-Map Control

Index (hex)	Name	Meaning	Data type	Flags	Default
1606:0	POS RxPDO-Map Control	PDO Mapping RxPDO 7	UINT8	RO	0x09 (9 _{dec})
1606:01	SubIndex 001	1. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x01 (Execute))	UINT32	RO	0x7020:01, 1
1606:02	SubIndex 002	2. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x02 (Emergency stop))	UINT32	RO	0x7020:02, 1
1606:03	SubIndex 003	3. PDO Mapping entry (6 bits align)	UINT32	RO	0x0000:00, 6
1606:04	SubIndex 004	3. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8
1606:05	SubIndex 005	5. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x11 (Target position))	UINT32	RO	0x7020:11, 32
1606:06	SubIndex 006	6. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x21 (Velocity))	UINT32	RO	0x7020:21, 16
1606:07	SubIndex 007	7. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x22 (Start type))	UINT32	RO	0x7020:22, 16
1606:08	SubIndex 008	8. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x23 (Acceleration))	UINT32	RO	0x7020:23, 16
1606:09	SubIndex 009	9. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x24 (Deceleration))	UINT32	RO	0x7020:24, 16

Index 1607 POS RxPDO-Map Control 2

Index (hex)	Name	Meaning	Data type	Flags	Default
1606:0	POS RxPDO-Map Control	PDO Mapping RxPDO 8	UINT8	RO	0x09 (9 _{dec})
1607:01	SubIndex 001	1. PDO Mapping entry (2 bits align)	UINT32	RO	0x0000:00,2
1607:02	SubIndex 002	2. PDO Mapping entry (object 0x7021 (POS Outputs 2 Ch.1), entry 0x03 (Enable auto start))	UINT32	RO	0x7021:03, 1
1607:03	SubIndex 003	3. PDO Mapping entry (5 bits align)	UINT32	RO	0x0000:00, 5
1607:04	SubIndex 004	4. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8
1607:05	SubIndex 005	5. PDO Mapping entry (object 0x7021 (POS Outputs 2 Ch.1), entry 0x11 (Target position))	UINT32	RO	0x7021:11, 32
1607:06	SubIndex 006	6. PDO Mapping entry (object 0x7021 (POS Outputs 2 Ch.1), entry 0x21 (Velocity))	UINT32	RO	0x7021:21, 16
1607:07	SubIndex 007	7. PDO Mapping entry (object 0x7021 (POS Outputs 2 Ch.1), entry 0x22 (Start type))	UINT32	RO	0x7021:22, 16
1607:08	SubIndex 008	8. PDO Mapping entry (object 0x7021 (POS Outputs 2 Ch.1), entry 0x23 (Acceleration))	UINT32	RO	0x7021:23, 16
1607:09	SubIndex 009	9. PDO Mapping entry (object 0x7021 (POS Outputs 2 Ch.1), entry 0x24 (Deceleration))	UINT32	RO	0x7021:24, 16

Index 1800 ENC TxPDO-Par Status compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1800:0	ENC TxPDO-Par Status compact	PDO parameter TxPDO 1	UINT8	RO	0x06 (6 _{dec})
1800:06	Exclude TxPDOs	Specifies the TxPDOs (index of TxPDO mapping objects) that must not be transferred together with TxPDO 1.	OCTET-STRING[2]	RO	01 1A

Index 1801 ENC TxPDO-Par Status

Index (hex)	Name	Meaning	Data type	Flags	Default
1801:0	ENC TxPDO-Par Status	PDO parameter TxPDO 2	UINT8	RO	0x06 (6 _{dec})
1801:06	Exclude TxPDOs	Specifies the TxPDOs (index of TxPDO mapping objects) that must not be transferred together with TxPDO 2.	OCTET-STRING[2]	RO	00 1A

Index 1805 POS TxPDO-Par Status compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1807:0	POS TxPDO-Par Status compact	PDO parameter TxPDO 3	UINT8	RO	0x06 (6 _{dec})
1807:06	Exclude TxPDOs	Specifies the TxPDOs (index of TxPDO mapping objects) that must not be transferred together with TxPDO 3.	OCTET-STRING[2]	RO	06 1A

Index 1806 POS TxPDO-Par Status compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1806:0	POS TxPDO-Par Status compact	PDO parameter TxPDO 4	UINT8	RO	0x06 (6 _{dec})
1806:06	Exclude TxPDOs	Specifies the TxPDOs (index of TxPDO mapping objects) that must not be transferred together with TxPDO 4.	OCTET-STRING[2]	RO	05 1A

Index 1A00 ENC TxPDO-Map Status compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1A00:0	ENC TxPDO-Map Status compact	PDO Mapping TxPDO 1	UINT8	RO	0x0D (13 _{dec})
1A00:01	SubIndex 001	1. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1A00:02	SubIndex 002	2. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x02 (Latch extern valid))	UINT32	RO	0x6000:02, 1
1A00:03	SubIndex 003	3. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x03 (Set counter done))	UINT32	RO	0x6000:03, 1
1A00:04	SubIndex 004	4. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x04 (Counter underflow))	UINT32	RO	0x6000:04, 1
1A00:05	SubIndex 005	5. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x05 (Counter overflow))	UINT32	RO	0x6000:05, 1
1A00:06	SubIndex 006	6. PDO Mapping entry (3 bits align)	UINT32	RO	0x0000:00, 3
1A00:07	SubIndex 007	7. PDO Mapping entry (4 bits align)	UINT32	RO	0x0000:00, 4
1A00:08	SubIndex 008	8. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x0D (Status of extern latch))	UINT32	RO	0x6000:0D, 1
1A00:09	SubIndex 009	9. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x0E) (Sync error))	UINT32	RO	0x6000:0E, 1
1A00:0A	SubIndex 010	10. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1A00:0B	SubIndex 011	11. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x10) (TxPDO Toggle))	UINT32	RO	0x6000:10, 1
1A00:0C	SubIndex 012	12. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x11 (Counter value))	UINT32	RO	0x6000:11, 16
1A00:0D	SubIndex 013	13. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x12 (Latch value))	UINT32	RO	0x6000:12, 16

Index 1A01 ENC TxPDO-Map Status

Index (hex)	Name	Meaning	Data type	Flags	Default
1A01:0	ENC TxPDO-Map Status	PDO Mapping TxPDO 2	UINT8	RO	0x0D (13 _{dec})
1A01:01	SubIndex 001	1. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1A01:02	SubIndex 002	2. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x02 (Latch extern valid))	UINT32	RO	0x6000:02, 1
1A01:03	SubIndex 003	3. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x03 (Set counter done))	UINT32	RO	0x6000:03, 1
1A01:04	SubIndex 004	4. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x04 (Counter underflow))	UINT32	RO	0x6000:04, 1
1A01:05	SubIndex 005	5. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x05 (Counter overflow))	UINT32	RO	0x6000:05, 1
1A01:06	SubIndex 006	6. PDO Mapping entry (3 bits align)	UINT32	RO	0x0000:00, 3
1A01:07	SubIndex 007	7. PDO Mapping entry (4 bits align)	UINT32	RO	0x0000:00, 4
1A01:08	SubIndex 008	8. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x0D (Status of extern latch))	UINT32	RO	0x6000:0D, 1
1A01:09	SubIndex 009	9. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x0E) (Sync error))	UINT32	RO	0x6000:0E, 1
1A01:0A	SubIndex 010	10. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1A01:0B	SubIndex 011	11. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x10) (TxPDO Toggle))	UINT32	RO	0x6000:10, 1
1A01:0C	SubIndex 012	12. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x11 (Counter value))	UINT32	RO	0x6000:11, 32
1A01:0D	SubIndex 013	13. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x12 (Latch value))	UINT32	RO	0x6000:12, 32

Index 1A02 ENC TxPDO-Map Timest. compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1A02:0	ENC TxPDO-Map Timest. compact	PDO Mapping TxPDO 3	UINT8	RO	0x01 (1 _{dec})
1A02:01	SubIndex 001	1. PDO Mapping entry (object 0x6000 (ENC Inputs Ch.1), entry 0x16 (Timestamp))	UINT32	RO	0x6000:16, 32

Index 1A03 STM TxPDO-Map Status

Index (hex)	Name	Meaning	Data type	Flags	Default
1A03:0	STM TxPDO-Map Status	PDO Mapping TxPDO 4	UINT8	RO	0x0E (14 _{dec})
1A03:01	SubIndex 001	1. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x01 (Ready to enable))	UINT32	RO	0x6010:01, 1
1A03:02	SubIndex 002	2. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x02 (Ready))	UINT32	RO	0x6010:02, 1
1A03:03	SubIndex 003	3. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x03 (Warning))	UINT32	RO	0x6010:03, 1
1A03:04	SubIndex 004	4. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x04 (Error))	UINT32	RO	0x6010:04, 1
1A03:05	SubIndex 005	5. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x05 (Moving positive))	UINT32	RO	0x6010:05, 1
1A03:06	SubIndex 006	6. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x06 (Moving negative))	UINT32	RO	0x6010:06, 1
1A03:07	SubIndex 007	7. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x07 (Torque reduced))	UINT32	RO	0x6010:07, 1
1A03:08	SubIndex 008	8. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1A03:09	SubIndex 009	9. PDO Mapping entry (3 bits align)	UINT32	RO	0x0000:00, 3
1A03:0A	SubIndex 010	10. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x0E (Sync error))	UINT32	RO	0x6010:0C, 1
1A03:0B	SubIndex 011	11. PDO Mapping entry (1 bit align)	UINT32	RO	0x6010:0D, 1
1A03:0C	SubIndex 012	12. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x10 (TxPDO Toggle))	UINT32	RO	0x6010:0E, 1
1A03:0D	SubIndex 013	13. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1A03:0E	SubIndex 014	14. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x10 (TxPDO Toggle))	UINT32	RO	0x6010:10, 1

Index 1A04 STM TxPDO-Map Synchron info data

Index (hex)	Name	Meaning	Data type	Flags	Default
1A04:0	STM TxPDO-Map Synchron info data	PDO Mapping TxPDO 5	UINT8	RO	0x02 (2 _{dec})
1A04:01	SubIndex 001	1. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x11 (Info data 1))	UINT32	RO	0x6010:11, 16
1A04:02	SubIndex 002	2. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x12 (Info data 2))	UINT32	RO	0x6010:12, 16

Index 1A05 POS TxPDO-Map Status compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1A05:0	POS TxPDO-Map Status compact	PDO Mapping TxPDO 6	UINT8	RO	0x09 (9 _{dec})
1A05:01	SubIndex 001	1. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x01 (Busy))	UINT32	RO	0x6020:01, 1
1A05:02	SubIndex 002	2. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x02 (In-Target))	UINT32	RO	0x6020:02, 1
1A05:03	SubIndex 003	3. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x03 (Warning))	UINT32	RO	0x6020:03, 1
1A05:04	SubIndex 004	4. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x04 (Error))	UINT32	RO	0x6020:04, 1
1A05:05	SubIndex 005	5. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x05 (Calibrated))	UINT32	RO	0x6020:05, 1
1A05:06	SubIndex 006	6. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x06 (Accelerate))	UINT32	RO	0x6020:06, 1
1A05:07	SubIndex 007	7. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x07 (Decelerate))	UINT32	RO	0x6020:07, 1
1A05:08	SubIndex 008	8. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x08 (Ready to execute))	UINT32	RO	0x6020:08, 1
1A05:09	SubIndex 009	9. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8

Index 1A06 POS TxPDO-Map Status

Index (hex)	Name	Meaning	Data type	Flags	Default
1A06:0	POS TxPDO-Map Status	PDO Mapping TxPDO 7	UINT8	RO	0x0C (12 _{dec})
1A06:01	SubIndex 001	1. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x01 (Busy))	UINT32	RO	0x6020:01, 1
1A06:02	SubIndex 002	2. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x02 (In-Target))	UINT32	RO	0x6020:02, 1
1A06:03	SubIndex 003	3. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x03 (Warning))	UINT32	RO	0x6020:03, 1
1A06:04	SubIndex 004	4. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x04 (Error))	UINT32	RO	0x6020:04, 1
1A06:05	SubIndex 005	5. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x05 (Calibrated))	UINT32	RO	0x6020:05, 1
1A06:06	SubIndex 006	6. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x06 (Accelerate))	UINT32	RO	0x6020:06, 1
1A06:07	SubIndex 007	7. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x07 (Decelerate))	UINT32	RO	0x6020:07, 1
1A06:08	SubIndex 008	8. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x08 (Ready to execute))	UINT32	RO	0x6020:08, 1
1A06:09	SubIndex 009	9. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8
1A06:0A	SubIndex 010	10. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x11 (Actual position))	UINT32	RO	0x6020:11, 32
1A06:0B	SubIndex 011	11. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x21 (Actual velocity))	UINT32	RO	0x6020:21, 16
1A06:0C	SubIndex 012	12. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x22 (Actual drive time))	UINT32	RO	0x6020:22, 32

Index 1A07 STM TxPDO-Map Internal position

Index (hex)	Name	Meaning	Data type	Flags	Default
1A07:0	STM TxPDO-Map Internal position	PDO Mapping TxPDO 8	UINT8	RO	0x01 (1 _{dec})
1A07:01	SubIndex 001	1. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x14 (Internal Positon))	UINT32	RO	0x6010:14, 32

Index 1A08 STM TxPDO-Map External position

Index (hex)	Name	Meaning	Data type	Flags	Default
1A08:0	STM TxPDO-Map External position	PDO Mapping TxPDO 9	UINT8	RO	0x01 (1 _{dec})
1A08:01	SubIndex 001	1. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x15 (External position))	UINT32	RO	0x6010:15, 32

Index 1A09 POS TxPDO-Actual position lag

Index (hex)	Name	Meaning	Data type	Flags	Default
1A09:0	POS TxPDO-Actual position lag	PDO Mapping TxPDO 10	UINT8	RO	0x01 (1 _{dec})
1A09:01	SubIndex 001	1. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x23 (Actual positon lag))	UINT32	RO	0x6020:23, 32

Index 1C00 Sync manager type

Index (hex)	Name	Meaning	Data type	Flags	Default
1C00:0	Sync manager type	Using the Sync Managers	UINT8	RO	0x04 (4 _{dec})
1C00:01	SubIndex 001	Sync-Manager Type Channel 1: Mailbox Write	UINT8	RO	0x01 (1 _{dec})
1C00:02	SubIndex 002	Sync-Manager Type Channel 2: Mailbox Read	UINT8	RO	0x02 (2 _{dec})
1C00:03	SubIndex 003	Sync-Manager Type Channel 3: Process Data Write (Outputs)	UINT8	RO	0x03 (3 _{dec})
1C00:04	SubIndex 004	Sync-Manager Type Channel 4: Process Data Read (Inputs)	UINT8	RO	0x04 (4 _{dec})

Index 1C12 RxPDO assign

Index (hex)	Name	Meaning	Data type	Flags	Default
1C12:0	RxPDO assign	PDO Assign Outputs	UINT8	RW	0x03 (3 _{dec})
1C12:01	SubIndex 001	1. zugeordnete RxPDO (enthält den Index des zugehörigen RxPDO Mapping Objekts)	UINT16	RW	0x1600 (5632 _{dec})
1C12:02	SubIndex 002	2. zugeordnete RxPDO (enthält den Index des zugehörigen RxPDO Mapping Objekts)	UINT16	RW	0x1602 (5634 _{dec})
1C12:03	SubIndex 003	3. zugeordnete RxPDO (enthält den Index des zugehörigen RxPDO Mapping Objekts)	UINT16	RW	0x1604 (5636 _{dec})

Index 1C13 TxPDO assign

Index (hex)	Name	Meaning	Data type	Flags	Default
1C13:0	TxPDO assign	PDO Assign Inputs	UINT8	RO	0x02 (2 _{dec})
1C13:01	SubIndex 001	1. allocated TxPDO (contains the index of the associated TxPDO mapping object)	UINT16	RO	0x1A00 (6656 _{dec})
1C13:02	SubIndex 002	2. allocated TxPDO (contains the index of the associated TxPDO mapping object)	UINT16	RO	0x1A03 (6659 _{dec})

Index 1C32 SM output parameter

Index (hex)	Name	Meaning	Data type	Flags	Default
1C32:0	SM output parameter	Synchronization parameters for the outputs	UINT8	RO	0x20 (32 _{dec})
1C32:01	Sync mode	Current synchronization mode: • 0: Free Run • 1: Synchronous with SM 2 event • 2: DC-Mode - Synchronous with SYNC0 Event • 3: DC-Mode - Synchronous with SYNC1 event	UINT16	RW	0x0001 (1 _{dec})
1C32:02	Cycle time	Cycle time (in ns): • Free Run: Cycle time of the local timer • Synchronous with SM 2 event: Master cycle time • DC-Mode: SYNC0/SYNC1 Cycle Time	UINT32	RW	0x000F4240 (1000000 _{dec})
1C32:03	Shift time	Time between SYNC0 event and output of the outputs (in ns, DC mode only)	UINT32	RO	0x00000000 (0 _{dec})
1C32:04	Sync modes supported	Supported synchronization modes: • Bit 0 = 1: free run is supported • Bit 1 = 1: Synchronous with SM 2 event is supported • Bit 2-3 = 01: DC mode is supported • Bit 4-5 = 10: Output shift with SYNC1 event (only DC mode) • Bit 14 = 1: dynamic times (measurement through writing of 0x1C32:08)	UINT16	RO	0xC007 (491599 _{dec})
1C32:05	Minimum cycle time	Minimum cycle time (in ns)	UINT32	RO	0x0003D090 (250000 _{dec})
1C32:06	Calc and copy time	Minimum time between SYNC0 and SYNC1 event (in ns, DC mode only)	UINT32	RO	0x00000000 (0 _{dec})
1C32:07	Minimum delay time	Min. time between SYNC1 event and output of the outputs (in ns, DC mode only)	UINT32	RO	0x00000000 (0 _{dec})
1C32:08	Command	• 0: Measurement of the local cycle time is stopped • 1: Measurement of the local cycle time is started The entries 1C32:03, 1C32:05, 1C32:06, 1C32:07, 1C32:09, 1C33:03, 1C33:06, and 1C33:09 are updated with the maximum measured values. For a subsequent measurement the measured values are reset	UINT16	RW	0x0000 (0 _{dec})
1C32:09	Maximum delay time	Time between SYNC1 event and output of the outputs (in ns, DC mode only)	UINT32	RO	0x00000000 (0 _{dec})
1C32:0B	SM event missed counter	Number of missed SM events in OPERATIONAL (DC mode only)	UINT16	RO	0x0000 (0 _{dec})
1C32:0C	Cycle exceeded counter	Number of occasions the cycle time was exceeded in OPERATIONAL (cycle was not completed in time or the next cycle began too early)	UINT16	RO	0x0000 (0 _{dec})
1C32:0D	Shift too short counter	Number of occasions that the interval between SYNC0 and SYNC1 event was too short (DC mode only)	UINT16	RO	0x0000 (0 _{dec})
1C32:14	Frame repeat time		UINT32	RW	0x00000000 (0 _{dec})
1C32:20	Sync error	The synchronization was not correct in the last cycle, (outputs were output too late; DC mode only)	BOOLEAN	RO	0x00 (0 _{dec})

Index 1C33 SM input parameter

Index (hex)	Name	Meaning	Data type	Flags	Default
1C33:0	SM input parameter	Synchronization parameters for the inputs	UINT8	RO	0x20 (32 _{dec})
1C33:01	Sync mode	Current synchronization mode: <ul style="list-style-type: none"> • 0: Free Run • 1: Synchron with SM 3 Event (no outputs available) • 2: DC - Synchron with SYNC0 Event • 3: DC - Synchron with SYNC1 Event • 34: Synchron with SM 2 Event (outputs available) 	UINT16	RW	0x0022 (34 _{dec})
1C33:02	Cycle time	Cycle time (in ns): <ul style="list-style-type: none"> • Free Run: Cycle time of the local timer • Synchron with SM 2 Event: Master cycle time • DC mode: SYNC0/SYNC1 Cycle Time 	UINT32	RW	0x000F4240 (1000000 _{dec})
1C33:03	Shift time	Time between SYNC0 event and reading of the inputs (in ns, only DC mode)	UINT32	RO	0x00000000 (0 _{dec})
1C33:04	Sync modes supported	Supported synchronization modes: <ul style="list-style-type: none"> • Bit 0: free run is supported • Bit 1: Synchron with SM 2 Event is supported (outputs available) • Bit 1: Synchron with SM 3 Event is supported (no outputs available) • Bit 2-3 = 01: DC mode is supported • Bit 4-5 = 01: Input Shift through local event (outputs available) • Bit 4-5 = 10: Input Shift with SYNC1 Event (no outputs available) • Bit 14 = 1: dynamic times (measurement through writing of 0x1C33:08) 	UINT16	RO	0xC007 (49159 _{dec})
1C33:05	Minimum cycle time	Minimum cycle time (in ns)	UINT32	RO	0x000249F0 (150000 _{dec})
1C33:06	Calc and copy time	Time between reading of the inputs and availability of the inputs for the master (in ns, only DC mode)	UINT32	RO	0x00000000 (0 _{dec})
1C33:07	Minimum delay time	Minimum time between Sync-1 Event and reading of the inputs (in ns, only DC mode)	UINT32	RO	0x00000000 (0 _{dec})
1C33:08	Command	With this entry the real required process data provision time can be measured. <ul style="list-style-type: none"> • 0: Measurement of the local cycle time is stopped • 1: Measurement of the local cycle time is started <p>The entries 0x1C33:03, 0x1C33:06, 0x1C33:09 are updated with the maximum measured values. For a subsequent measurement the measured values are reset</p>	UINT16	RW	0x0000 (0 _{dec})
1C33:09	Maximum Delay time	Time between SYNC1 event and reading of the inputs (in ns, only DC mode)	UINT32	RO	0x00000000 (0 _{dec})
1C33:0B	SM event missed counter	Number of missed SM events in OPERATIONAL (DC mode only)	UINT16	RO	0x0000 (0 _{dec})
1C33:0C	Cycle exceeded counter	Number of occasions the cycle time was exceeded in OPERATIONAL (cycle was not completed in time or the next cycle began too early)	UINT16	RO	0x0000 (0 _{dec})
1C33:0D	Shift too short counter	Number of occasions that the interval between SYNC0 and SYNC1 event was too short (DC mode only)	UINT16	RO	0x0000 (0 _{dec})
1C33:20	Sync error	The synchronization was not correct in the last cycle (outputs were output too late; DC mode only)	BOOLEAN	RO	0x00 (0 _{dec})

7.3 EJ7041-0052 - Object description and parameterization



EtherCAT XML Device Description

The display matches that of the CoE objects from the EtherCAT XML Device Description. We recommend downloading the latest XML file from the download area of the Beckhoff website and installing it according to installation instructions.

NOTICE



Parameterization via the CoE list (CAN over EtherCAT)

The EtherCAT device is parameterized via the CoE - Online tab (with a double click on the respective object) or via the Process Data tab (assignment of PDOs). A detailed description can be found in the EtherCAT System-Documentation in chapter "[EtherCAT subscriber configuration](#)"

Please note the general CoE notes in the EtherCAT System Documentation in chapter "[CoE-interface](#)" when using/manipulating the CoE parameters:

- Keep a startup list if components have to be replaced
- Differentiation between online/offline dictionary,
- existence of current XML description
- use "CoE reload" for resetting changes

NOTICE

Risk of damage to the device!

We strongly advise not to change settings in the CoE objects while the axis is active, since this could impair the control.

Introduction

The CoE overview contains objects for different intended applications:

- Objects required for parameterization during commissioning:
 - [Restore](#) [▶ 66] object index 0x1011
 - [Configuration](#) [▶ 67] data index 0x80nn
 - [Configuration data \(vendor-specific\)](#) [▶ 70] Index 0xF80F
- Profile-specific objects:
 - [Input data](#) [▶ 71] index 0x60n0
 - [Output data](#) [▶ 72] index 0x70nn
 - [Information and diagnostic data Index](#) [▶ 76] 0x9010... 0xF008, 0xF900
 - [Command object](#) [▶ 71] index 0xFB00
- [Standard objects](#) [▶ 79]

The following section first describes the objects required for normal operation, followed by a complete overview of missing objects.

7.3.1 Restore object

Index 1011 Restore default parameters

Index (hex)	Name	Meaning	Data type	Flags	Default
1011:0	Restore default parameters	Restore default parameters	UINT8	RO	0x01 (1 _{dec})
1011:01	SubIndex 001	If this object is set to “ 0x64616F6C ” in the set value dialog, all backup objects are reset to their delivery state.	UINT32	RW	0x00000000 (0 _{dec})

7.3.2 Configuration data

Index 8000 ENC Settings Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
8000:0	ENC Settings Ch.1	Length of this object	UINT8	RO	0x0E (14 _{dec})
8000:0E	Reversion of rotation	Enables Reversion of rotation of the encoder.	BOOLEAN	RW	0x00 (0 _{dec})

Index 8010 STM Motor Settings Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
8010:0	STM Motor Settings Ch.1	Length of this object	UINT8	RO	0x11 (17 _{dec})
8010:01	Maximal current	Maximum permanent motor coil current Unit : 1 mA	UINT16	RW	0x1388 (5000 _{dec})
8010:02	Reduced current	Reduced coil current Unit : 1 mA.	UINT16	RW	0x09C4 (2500 _{dec})
8010:03	Nominal voltage	Nominal voltage (supply voltage) of the motor Unit : 1 mV	UINT16	RW	0xC350 (50000 _{ddec})
8010:04	Motor coil resistance	Internal resistance of a coil Unit : 10 mOhm	UINT16	RW	0x0064 (100 _{dec})
8010:05	Motor EMF	Motor countervoltage Unit : 1 mV / (rad/s)	UINT16	RW	0x0000 (0 _{dec})
8010:06	Motor fullsteps	Motor full steps per revolution	UINT16	RW	0x00C8 (200 _{dec})
8010:09	Start velocity	Maximum possible start velocity of the motor Unit : 10000 entspricht 100 %	UINT16	RW	0x0000 (0 _{dec})
8010:10	Drive on delay time	Delay between activation of driver stage and „ready = 1“ Unit : 1 ms	UINT16	RW	0x0064 (100 _{dec})
8010:11	Drive off delay time	Delay between deactivation of driver stage and „ready = 0“ Unit : 1 ms	UINT16	RW	0x0096 (150 _{dec})

Index 8011 STM Controller Settings Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
8011:0	STM Controller Settings Ch.1	Maximum subindex	UINT8	RO	0x08 (8 _{dec})
8011:01	Kp factor (curr.)	Kp control factor (proportional component) for the current controller Unit : 0.001	UINT16	RW	0x0190 (400 _{dec})
8011:02	Ki factor (curr.)	Ki control factor (integral component) for the current controller Unit : 0.001	UINT16	RW	0x0004 (4 _{dec})
8011:03	Inner window (curr.)	Inner window for the I component of the current controller Unit : 1 %	UINT8	RW	0x00 (0 _{dec})
8011:05	Outer window (curr.)	Outer window for the I component of the current controller Unit : 1 %	UINT8	RW	0x00 (0 _{dec})
8011:06	Filter cut off frequency (curr.)	Filter limit frequency of the current controller (low-pass) Unit : 1 Hz	UINT16	RW	0x0000 (0 _{dec})
8011:07	Ka factor (curr.)	Ka control factor (acceleration component) for the current controller Unit : 0.001	UINT16	RW	0x0064 (100 _{dec})
8011:08	Kd factor (curr.)	Kd control factor (acceleration component) for the current controller Unit : 0.001	UINT16	RW	0x0064 (100 _{dec})

Index 8012 STM Features Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
8012:0	STM Features Ch.1	Maximum subindex	UINT8	RO	0x36 (54 _{dec})
8012:01	Operation mode	permitted values: 0: Automatic 1: Velocity direct 2: Velocity controller 3: Position controller	BIT4	RW	0x00 (0 _{dec})
8012:05	Speed range	Permitted values: 0: 1000 Fullsteps / s 1: 2000 Fullsteps / s 2: 4000 Fullsteps / s 3: 8000 Fullsteps / s 4: 16000 Fullsteps / s 5: 32000 Fullsteps / s	BIT3	RW	0x01 (1 _{dec})
8012:09	Invert motor polarity	Activates reversal of the motor rotation direction.	BOOLEAN	RW	0x00 (0 _{dec})
8012:11	Select info data 1	Permitted values: 0: Status word 1: Motor coil voltage A (Unit: 1 mV) 2: Motor coil voltage B (Unit: 1 mV) 3: Motor coil current A (Unit: 1 mA) 4: Motor coil current B (Unit: 1 mA) 5: Duty cycle A (Unit: 1 %) 6: Duty cycle B (Unit: 1 %) 7: Motor velocity (value range: ± 10000) 101: Internal temperature 103: Control voltage 104: Motor supply voltage 150: Drive - Status word 151: Drive - State 152: Drive - Position lag (low word) 153: Drive - Position lag (high word)	UINT8	RW	0x03 (3 _{dec})
8012:19	Select info data 2	Permitted values: 0: Status word 1: Motor coil voltage A (Unit: 1 mV) 2: Motor coil voltage B (Unit: 1 mV) 3: Motor coil current A (Unit: 1 mA) 4: Motor coil current B (Unit: 1 mA) 5: Duty cycle A (Unit: 1 %) 6: Duty cycle B (Unit: 1 %) 7: Motor velocity (value range: ± 10000) 101: Internal temperature 103: Control voltage 104: Motor supply voltage 150: Drive - Status word 151: Drive - State 152: Drive - Position lag (low word) 153: Drive - Position lag (high word)	UINT8	RW	0x04 (4 _{dec})
8012:30	Invert digital input 1	Inversion of digital input 1	BOOLEAN	RW	0x00 (0 _{dec})
8012:31	Invert digital input 2	Inversion of digital input 2	BOOLEAN	RW	0x00 (0 _{dec})
8012:32	Function for input 1	Permitted values: 0: Normal input 1: Hardware enable 2: PLC cam 3: Auto start	BIT4	RW	0x02 (2 _{dec})
8012:36	Function for input 2	Permitted values: 0: Normal input 1: Hardware enable 2: PLC cam 3: Auto start	BIT4	RW	0x00 (0 _{dec})

Index 8013 STM Controller Settings 2 Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
8013:0	STM Controller Settings 2 Ch.1	Maximum subindex	UINT8	RO	0x08 (8 _{dec})
8013:01	Kp factor (velo./pos.)	Kp control factor (proportional component) for the velocity controller Unit: 0.001	UINT16	RW	0x03E8 (1000 _{dec})
8013:02	Ki factor (velo./pos.)	Ki control factor (integral component) for the velocity controller Unit: 0.001	UINT16	RW	0x0000 (0 _{dec})
8013:03	Inner window (velo./pos.)	Inner window for the I component of the velocity controller Unit : 1 %	UINT8	RW	0x00 (0 _{dec})
8013:05	Outer window (velo./pos.)	Outer window for the I component of the velocity controller Unit : 1 %	UINT8	RW	0x00 (0 _{dec})
8013:06	Filter cut off frequency (velo./pos.)	Filter limit frequency of the velocity controller (low-pass) Unit : 1 Hz	UINT16	RW	0x0000 (0 _{dec})
8013:07	Ka factor (velo./pos.)	Ka control factor (acceleration component) for the velocity controller Unit: 0.001	UINT16	RW	0x0000 (0 _{dec})
8013:08	Kd factor (velo./pos.)	Kd control factor (acceleration component) for the velocity controller Unit: 0.001	UINT16	RW	0x0000 (0 _{dec})

Index 8020 POS Settings Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
8020:0	POS Settings Ch.1	Maximum subindex	UINT8	RO	0x11 (17 _{dec})
8020:01	Velocity min.	Minimum set velocity (range: 0-10000)	INT16	RW	0x0064 (100 _{dec})
8020:02	Velocity max.	Maximum set velocity (range: 0-10000)	INT16	RW	0x2710 (10000 _{dec})
8020:03	Acceleration pos.	Acceleration time in positive direction of rotation Unit : 1 ms	UINT16	RW	0x03E8 (1000 _{dec})
8020:04	Acceleration neg.	Acceleration time in negative direction of rotation Unit : 1 ms	UINT16	RW	0x03E8 (1000 _{dec})
8020:05	Deceleration pos.	Deceleration time in positive direction of rotation Unit : 1 ms	UINT16	RW	0x03E8 (1000 _{dec})
8020:06	Deceleration neg.	Deceleration time in negative direction of rotation Unit : 1 ms	UINT16	RW	0x03E8 (1000 _{dec})
8020:07	Emergency deceleration	Emergency deceleration time (both directions of rotation) Unit : 1 ms	UINT16	RW	0x0064 (100 _{dec})
8020:08	Calibration postion	Calibration position	UINT32	RW	0x00000000 (0 _{dec})
8020:09	Calibration velocity (towards plc cam)	Calibration velocity towards the cam (range: 0-10000)	INT16	RW	0x0064 (100 _{dec})
8020:0A	Calibration velocity (off plc cam)	Calibration velocity away from the cam (range: 0-10000)	INT16	RW	0x000A (10 _{dec})
8020:0B	Target window	Target window	UINT16	RW	0x000A (10 _{dec})
8020:0C	In-Target timeout	Timeout at target position Unit : 1 ms	UINT16	RW	0x03E8 (1000 _{dec})
8020:0D	Dead time compensation	Dead time compensation Unit : 1 μ s	INT16	RW	0x0032 (50 _{dec})
8020:0E	Modulo factor	Modulo factor/position	UINT32	RW	0x00000000 (0 _{dec})
8020:0F	Modulo tolerance window	Tolerance window for modulo positioning	UINT32	RW	0x00000000 (0 _{dec})
8020:10	Position lag max.	maximum position lag	UINT16	RW	0x0000 (0 _{dec})
8020:11	Calibration acceleration (around plc cam)	Acceleration and braking ramps for homing runs	UINT16	RW	0x0000 (0 _{dec})

Index 8021 POS Features Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
8021:0	POS Features Ch.1	Maximum subindex	UINT8	RO	0x16 (22 _{dec})
8021:01	Start type	permitted values: 0: Idle 1: Absolute 2: Relative 3: Endless plus 4: Endless minus 6: Additive 24832: Calibration (Hardware sync) 2457: Calibration (Plc cam) 28416: Calibration (Clear manual) 28160: Calibration (Set manual) 28161: Calibration (Set manual auto) 1029: Modulo current 773: Modulo minus 517: Modulo plus 261: Modulo short	UINT16	RW	0x0001 (1 _{dec})
8021:11	Time information	permitted values: 0: Elapsed time current drive time since start of the travel command	BIT2	RW	0x00 (0 _{dec})
8021:13	Invert calibration cam search direction	Inversion of the direction of rotation towards the cam	BOOLEAN	RW	0x01 (1 _{dec})
8021:14	Invert sync impulse search direction	Inversion of the direction of rotation away from the cam	BOOLEAN	RW	0x00 (0 _{dec})
8021:15	Emergency stop on position lag error	Triggers an emergency stop if the maximum following error is exceeded	BOOLEAN	RW	0x00 (0 _{dec})
8021:16	Enhanced diag history	Provides detailed messages about the status of the positioning interface in the diag history	BOOLEAN	RW	0x00 (0 _{dec})

7.3.3 Vendor configuration data (device-specific)**Index F80F STM Vendor data**

Index (hex)	Name	Meaning	Data type	Flags	Default
F80F:0	STM Vendor data	Maximum subindex	UINT8	RO	0x08 (8 _{dec})
F80F:01	PWM Frequency	DC link frequency Unit: 1°Hz	UINT16	RW	0x7D00 (32000 _{dec})
F80F:02	Deadtime	Dead time for pulse width modulation	UINT16	RW	0x0102 (258 _{dec})
F80F:03	Deadtime space	Duty cycle limitation	UINT16	RW	0x0014 (20 _{dec})
F80F:04	Warning temperature	Threshold for temperature warning Unit: 1°C, (see subindex 0xA010:02 [▶ 77])	INT8	RW	0x50 (80 _{dec})
F80F:05	Switch off temperature	Switch-off temperature Unit: 1°C	INT8	RW	0x64 (100 _{dec})
F80F:06	Analog trigger point	Trigger point for AD conversion	UINT16	RW	0x000A (10 _{dec})
F80F:07	Calibration offset A	Current measurement offset compensation for coil A (set by the manufacturer)	INT16	RW	0x0000 (0 _{dec})
F80F:08	Calibration offset B	Current measurement offset compensation for coil B (set by the manufacturer)	INT16	RW	0x0000 (0 _{dec})

7.3.4 Command object

Index FB00 STM Command

Index (hex)	Name	Meaning	Data type	Flags	Default
FB00:0	STM Command	Maximum subindex	UINT8	RO	0x03 (3 _{dez})
FB00:01	Request	Requesting a command 0x8000: Software-Reset	OCTET-STRING[2]	RW	{0}
FB00:02	Status	Status of the command: 0: No error, without return value 1: No error, with return value 2: With error, without return value 3: With error, with return value reserved 255: Command execution active	UINT8	RO	0x00 (0 _{dez})
FB00:03	Response	Return value of the executed command	OCTET-STRING[4]	RO	{0}

7.3.5 Input data

Index 6000 ENC Inputs Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
6000:0	ENC Inputs Ch.1	Length of this object	UINT8	RO	0x16 (22 _{dec})
6000:02	Latch extern valid	The counter value was stored via the external latch.	BOOLEAN	RO	0x00 (0 _{dec})
6000:03	Set counter done	The counter was set.	BOOLEAN	RO	0x00 (0 _{dec})
6000:04	Counter underflow	Counter underflow.	BOOLEAN	RO	0x00 (0 _{dec})
6000:05	Counter overflow	Counter overflow.	BOOLEAN	RO	0x00 (0 _{dec})
6000:0D	Status of extern latch	Status of the ext. latch input.	BOOLEAN	RO	0x00 (0 _{dec})
6000:0E	Sync error	The Sync error bit is only required for DC mode. It indicates whether a synchronization error has occurred during the previous cycle.	BOOLEAN	RO	0x00 (0 _{dec})
6000:10	TxPDO Toggle	The TxPDO toggle is toggled by the slave when the data of the associated TxPDO is updated.	BOOLEAN	RO	0x00 (0 _{dec})
6000:11	Counter value	The counter value.	UINT32	RO	0x00000000 (0 _{dec})
6000:12	Latch value	The latch value.	UINT32	RO	0x00000000 (0 _{dec})
6000:16	Timestamp	Time stamp of the last counter change.	UINT32	RO	0x00000000 (0 _{dec})

Index 6010 STM Inputs Ch. 1

Index (hex)	Name	Meaning	Data type	Flags	Default
6010:0	STM Inputs Ch. 1	Length of this object	UINT8	RO	0x15 (21 _{dec})
6010:01	Ready to enable	Driver stage is ready for enabling	BOOLEAN	RO	0x00 (0 _{dec})
6010:02	Ready	Driver stage is ready for operation	BOOLEAN	RO	0x00 (0 _{dec})
6010:03	Warning	A warning has occurred (see index 0xA010 [▶ 53]).	BOOLEAN	RO	0x00 (0 _{dec})
6010:04	Error	An error has occurred (see index 0xA010 [▶ 53]).	BOOLEAN	RO	0x00 (0 _{dec})
6010:05	Moving positive	Motor turns in positive direction	BOOLEAN	RO	0x00 (0 _{dec})
6010:06	Moving negative	Motor turns in negative direction	BOOLEAN	RO	0x00 (0 _{dec})
6010:07	Torque reduced	Reduced torque is active	BOOLEAN	RO	0x00 (0 _{dec})
6010:0C	Digital input 1	digital Input 1	BOOLEAN	RO	0x00 (0 _{dec})
6010:0D	Digital input 2	digital Input 2	BOOLEAN	RO	0x00 (0 _{dec})
6010:0E	Sync error	The Sync error bit is only required for DC mode. It indicates whether a synchronization error has occurred during the previous cycle.	BOOLEAN	RO	0x00 (0 _{dec})
6010:10	TxDPO Toggle	The TxPDO toggle is toggled by the slave when the data of the associated TxPDO is updated.	BOOLEAN	RO	0x00 (0 _{dec})
6010:11	Info data 1	Synchronous information (selection via subindex 0x8012:11 [▶ 44])	UINT16	RO	0x0000 (0 _{dec})
6010:12	Info data 2	Synchronous information (selection via subindex 0x8012:19 [▶ 44])	UINT16	RO	0x0000 (0 _{dec})
6010:14	Internal position	internal microstep position	UINT32	RO	0x00000000 (0 _{dec})
6010:15	External position	Encoder position	UINT32	RO	0x00000000 (0 _{dec})

Index 6020 POS Inputs Ch. 1

Index (hex)	Name	Meaning	Data type	Flags	Default
6020:0	POS Inputs Ch. 1	Length of this object	UINT8	RO	0x23 (35 _{dec})
6020:01	Busy	A current travel command is active.	BOOLEAN	RO	0x00 (0 _{dec})
6020:02	In-Target	Motor has arrived at target.	BOOLEAN	RO	0x00 (0 _{dec})
6020:03	Warning	eine Warnung ist aufgetreten	BOOLEAN	RO	0x00 (0 _{dec})
6020:04	Error	A warning has occurred.	BOOLEAN	RO	0x00 (0 _{dec})
6020:05	Calibrated	Motor is calibrated.	BOOLEAN	RO	0x00 (0 _{dec})
6020:06	Accelerate	Motor is in the acceleration phase.	BOOLEAN	RO	0x00 (0 _{dec})
6020:07	Decelerate	Motor is in the deceleration phase.	BOOLEAN	RO	0x00 (0 _{dec})
6020:08	Ready to execute	ready for driving job	BOOLEAN	RO	0x00 (0 _{dec})
6020:11	Actual position	Current target position of the travel command generator	UINT32	RO	0x00000000 (0 _{dec})
6020:21	Actual velocity	Current set velocity of the travel command generator	INT16	RO	0x0000 (0 _{dec})
6020:22	Actual drive time	Travel command time information (see subindex 0x8021:11 [▶ 70])	UINT32	RO	0x00000000 (0 _{dec})
6020:23	Actual position lag	Position lag	INT32	RO	0x00000000 (0 _{dec})

7.3.6 Output data**Index 7000 ENC Outputs Ch.1**

Index (hex)	Name	Meaning	Data type	Flags	Default
7000:0	ENC Outputs Ch	Length of this object	UINT8	RO	0x11 (17 _{dec})
7000:02	Enable latch extern on positive edge	Activate external latch with positive edge.	BOOLEAN	RO	0x00 (0 _{dec})
7000:03	Set counter	Set the counter value.	BOOLEAN	RO	0x00 (0 _{dec})
7000:04	Enable latch extern on negative edge	Activate external latch with negative edge.	BOOLEAN	RO	0x00 (0 _{dec})
7000:11	Set counter value	This is the counter value to be set via "Set counter". (Index 0x7000:03)	UINT32	RO	0x00000000 (0 _{dec})

Index 7010 STM Outputs Ch. 1

Index (hex)	Name	Meaning	Data type	Flags	Default
7010:0	STM Outputs Ch. 1	Length of this object	UINT8	RO	0x21 (33 _{dec})
7010:01	Enable	activates the output stage	BOOLEAN	RO	0x00 (0 _{dec})
7010:02	Reset	all errors that may have occurred are reset by setting this bit (rising edge)	BOOLEAN	RO	0x00 (0 _{dec})
7010:03	Reduce torque	Activation of reduced torque (coil current) (see subindex 0x8010:02 [▶ 42])	BOOLEAN	RO	0x00 (0 _{dec})
7010:11	Position	Set position	UINT32	RO	0x00000000 (0 _{dec})
7010:21	Velocity	Set velocity	INT16	RO	0x0000 (0 _{dec})

Index 7020 POS Outputs Ch. 1

Index (hex)	Name	Meaning	Data type	Flags	Default
7020:0	POS Outputs Ch. 1	Length of this object	UINT8	RO	0x24 (36 _{dec})
7020:01	Execute	Start travel command (rising edge), or prematurely abort travel command (falling edge)	BOOLEAN	RO	0x00 (0 _{dec})
7020:02	Emergency stop	Prematurely abort travel command with an emergency ramp (rising edge)	BOOLEAN	RO	0x00 (0 _{dec})
7020:11	Target positon	Specification of the target position	UINT32	RO	0x00000000 (0 _{dec})
7020:21	Velocity	Specification of the maximum set velocity	INT16	RO	0x0000 (0 _{dec})
7020:22	Start type	No travel command is being executed	UINT16	RO	0x0000 (0 _{dec})
	0x0001 Absolute	Absolute target position			
	0x0002 Relative	Target position relative to the start position			
	0x0003 Endless plus	Endless driving in positive direction of rotation			
	0x0004 Endless minus	Endless driving in negative direction of rotation			
	0x0105 Modulo short	Shortest distance to the next modulo position			
	0x0115 Modulo short extended	Shortest distance to the next modulo position (without modulo window)			
	0x0205 Modulo plus	Drive in positive direction of rotation to the next modulo position			
	0x0215 Modulo plus extended	Drive in positive direction of rotation to the next modulo position (without modulo window)			
	0x0305 Modulo minus	Drive in negative direction of rotation to the next modulo position			
	0x0315 Modulo minus extended	Drive in negative direction of rotation to the next modulo position (without modulo window)			
	0x0405 Modulo current	Drive in the last implemented direction of rotation to the next modulo position			
	0x0415 Modulo current extended	Drive in the last implemented direction of rotation to the next modulo position (without modulo window)			
	0x0006 Additive	New target position relative/additive to the last target position			
	0x6000 Calibration, PLC cam	Calibration with cam			
	0x6100 Calibration, HW sync	Calibration with cam and C-track			
	0x6E00 Calibration, set manual	Set calibration manually			
	0x6E01 Calibration, set manual auto	Set calibration automatically			
	0x6F00 Calibration, clear manual	Clear calibration manually			
7020:23	Acceleration	Acceleration specification	UINT16	RO	0x0000 (0 _{dec})
7020:24	Deceleration	Deceleration specification	UINT16	RO	0x0000 (0 _{dec})

Index 7021 POS Outputs 2 Ch. 1

Index (hex)	Name	Meaning	Data type	Flags	Default
7021:0	POS Outputs 2 Ch. 1	Length of this object	UINT8	RO	0x24 (36 _{dec})
7021:03	Enable auto start	Enable auto start	BOOLEAN	RO	0x00 (0 _{dec})
7021:11	Target positon	Specification of the target position	UINT32	RO	0x00000000 (0 _{dec})
7021:21	Velocity	Specification of the maximum set velocity	INT16	RO	0x0000 (0 _{dec})
7021:22	Start type	0x0000 Idle 0x0001 Absolute 0x0002 Relative 0x0003 Endless plus 0x0004 Endless minus 0x1001 Absolute (change) 0x1002 Relative (change) 0x0105 Modulo short 0x0115 Modulo short extended 0x0205 Modulo plus 0x0215 Modulo plus extended 0x0305 Modulo minus 0x0315 Modulo minus extended 0x0405 Modulo current 0x0415 Modulo current extended 0x0006 Additive 0x1006 Additive (Change) 0x6000 Calibration, PLC cam 0x6100 Calibration, HW sync 0x6E00 Calibration, set manual 0x6E01 Calibration, set manual auto 0x6F00 Calibration, clear manual	UINT16	RO	0x0000 (0 _{dec})
7021:23	Acceleration	Acceleration specification	UINT16	RO	0x0000 (0 _{dec})
7021:24	Deceleration	Deceleration specification	UINT16	RO	0x0000 (0 _{dec})

7.3.7 Information and diagnostic data

Channel specific

Index 9010 STM Info data Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
9010:0	STM Info data Ch.1	General information for the modular device profile	UINT8	RO	0x13 (19 _{dec})
9010:01	Status word	Status-word (see index 0xA010 [▶ 77])	UINT16	RO	0x0000 (0 _{dec})
9010:02	Motor coil voltage A	Motor voltage coil A Unit 1 mV	UINT16	RO	0x0000 (0 _{dec})
9010:03	Motor coil voltage B	Motor voltage coil B Unit 1 mV	UINT16	RO	0x0000 (0 _{dec})
9010:04	Motor coil current A	Motor current coil A Unit 1 mA	UINT16	RO	0x0000 (0 _{dec})
9010:05	Motor coil current B	Motor current coil B Unit 1 mA	UINT16	RO	0x0000 (0 _{dec})
9010:06	Duty cycle A	Duty-Cycle coil A Unit 1 %	UINT16	RO	0x0000 (0 _{dec})
9010:07	Duty cycle B	Duty-Cycle coil B Unit 1 %	UINT16	RO	0x0000 (0 _{dec})
9010:08	Motor velocity	Current velocity (value range +/- 10000)	INT16	RO	0x0000 (0 _{dec})
9010:09	Internal position	internal position	UINT32	RO	0x00000000 (0 _{dec})
9010:13	External position	External position (connected encoder)	UINT32	RO	0x00000000 (0 _{dec})

Index 9020 POS Info data Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
9020:0	POS Info data Ch.1	General information for the modular device profile	UINT8	RO	0x04 (4 _{dec})
9020:01	Status word	Status word	UINT16	RO	0x0000 (0 _{dec})
9020:03	State (drive controller)	Permitted values: 0: Init 1: Idle 272: Go cam 273: On cam 16: Start 17: Acceleration 18: Constant 19: Deceleration 288: Go sync impulse 289: Leave cam 4096: Pre target 4097: In target 32: Emergency stop 33: Normal stop 304: Calibration stop 8192: Drive end 8192: Wait for init 320: Is calibrated 321: Not calibrated 16384: Drive warning 32768: Error 65535: Undefined 256: Calibration start	UINT16	RO	0x0000 (0 _{dec})
9020:04	Actual position lag	Current step error	INT32	RO	0x00000000 (0 _{dec})

Index A010 STM Diag data Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
A010:0	STM Diag data Ch.1	General information for the modular device profile	UINT8	RO	0x11 (17 _{dec})
A010:01	Saturated	Driver stage operates with maximum duty cycle	BOOLEAN	RO	0x00 (0 _{dec})
A010:02	Over temperature	Internal module temperature is higher than 80°C	BOOLEAN	RO	0x00 (0 _{dec})
A010:03	Torque overload	Motor current is higher than the rated current	BOOLEAN	RO	0x00 (0 _{dec})
A010:04	Under voltage	Motor supply voltage is 20% lower than the configured nominal voltage (warning), or Motor supply voltage is less than 8 V (error, see 0xA010:09)	BOOLEAN	RO	0x00 (0 _{dec})
A010:05	Over voltage	Motor supply voltage is 10% higher than the configured nominal voltage (see index 0x8010:03 [▶ 67])	BOOLEAN	RO	0x00 (0 _{dec})
A010:06	Short circuit A	Short circuit in motor coil A	BOOLEAN	RO	0x00 (0 _{dec})
A010:07	Short circuit B	Short circuit in motor coil B	BOOLEAN	RO	0x00 (0 _{dec})
A010:08	No control power	The control voltage at the Up-contacts is lower than 12 V	BOOLEAN	RO	0x00 (0 _{dec})
A010:09	Misc error	<ul style="list-style-type: none"> • Module initialization failed or • Supply voltage is lower than 8 V or • Internal temperature of the Module is higher than 100°C (see index 0xF80F:05 [▶ 70]) 	BOOLEAN	RO	0x00 (0 _{dec})
A010:0A	Configuration	CoE change has not yet been adopted into the current configuration	BOOLEAN	RO	0x00 (0 _{dec})
A010:0C	Open load A	Open load, bridge A (the terminal switches the motor off automatically). ATTENTION: This error message must be acknowledged by the user (index 0x7010:02 [▶ 73])!	BOOLEAN	RO	0x00 (0 _{dec})
A010:0C	Open load A	Open load, bridge B (the terminal switches the motor off automatically). ATTENTION: This error message must be acknowledged by the user (index 0x7010:02 [▶ 73])!	BOOLEAN	RO	0x00 (0 _{dec})
A010:11	Actual operation mode	Current operation mode (relevant for activated automatic, see 0x8012:01 [▶ 68]) permitted values: 0: Automatic 1: Velocity direct 2: Velocity controller 3: Position controller	BIT4	RO	0x00 (0 _{dec})

Index A020 POS Diag data Ch.1

Index (hex)	Name	Meaning	Data type	Flags	Default
A020:0	POS Diag data Ch.1	General information for the modular device profile	UINT8	RO	0x06 (6 _{dec})
A020:01	Command rejected	Travel command was rejected.	BOOLEAN	RO	0x00 (0 _{dec})
A020:02	Command aborted	Travel command was aborted.	BOOLEAN	RO	0x00 (0 _{dec})
A020:03	Target overrun	Target position was overrun in the opposite direction.	BOOLEAN	RO	0x00 (0 _{dec})
A020:04	Target timeout	The target window was not reached within the in-target timeout	BOOLEAN	RO	0x00 (0 _{dec})
A020:05	Position lag	The maximum following error was exceeded.	BOOLEAN	RO	0x00 (0 _{dec})
A020:06	Emergency stop	An emergency stop was triggered (automatic or manual)	BOOLEAN	RO	0x00 (0 _{dec})

Device specific**Index 10F3 Diagnosis History**

Index (hex)	Name	Meaning	Data type	Flags	Default
10F3:0	Diagnosis History	Max. Subindex	UINT8	RO	0x37 (55 _{dec})
10F3:01	Maximum Messages	Maximum number of stored messages. A maximum of 50 messages can be stored	UINT8	RO	0x00 (0 _{dec})
10F3:02	Newest Message	Subindex of the latest message	UINT8	RO	0x00 0 _{dec})
10F3:03	Newest Acknowledged Message	Subindex of the last confirmed message	UINT8	RO	0x00 (0 _{dec})
10F3:04	New Message available	Indicates that a new message is available	BOOLEAN	RO	0x00 (0 _{dec})
10F3:05	Flags	not used	UINT16	RO	0x0000 (0 _{dec})
10F3:06	Diagnosis Message 001	Message 1	OCTET-STRING[28]	RO	{0}
...
10F3:37	Diagnosis Message 050	Message 50	OCTET-STRING[28]	RO	{0}

Index F000 Modular device profile

Index (hex)	Name	Meaning	Data type	Flags	Default
F000:0	Modular device profile	General information for the modular device profile	UINT8	RO	0x02 (2 _{dec})
F000:01	Module index distance	Index distance of the objects of the individual channels	UINT16	RO	0x0010 (16 _{dec})
F000:02	Maximum number of modules	Number of channels	UINT16	RO	0x0003 (3 _{dec})

Index F008 Code word

Index (hex)	Name	Meaning	Data type	Flags	Default
F008:0	Code word	reserved	UINT32	RW	0x00000000 (0 _{dec})

Index F010 Module list

Index (hex)	Name	Meaning	Data type	Flags	Default
F010:0	Module list	Length of this object	UINT8	RW	0x03 (3 _{dec})
F010:01	SubIndex 001	-	UINT32	RW	0x00001FF (511 _{dec})
F010:02	SubIndex 002	-	UINT32	RW	0x00002BF (703 _{dec})
F010:03	SubIndex 003	-	UINT32	RW	0x00002C0 (704 _{dec})

Index F081 Download revision

Index (hex)	Name	Meaning	Data type	Flags	Default
F081:0	Download revision	Max. Subindex	UINT8	RO	0x01 (1 _{dec})
F081:01	Revision number	The subindex 0xF081:01 (Download revision) describes the revision level of the module.	UINT32	RW	0x00000000 (0 _{dec})

Index F900 STM Info data

Index (hex)	Name	Meaning	Data type	Flags	Default
F900:0	STM Info data	Max. Subindex	UINT8	RO	0x06 (6 _{dec})
F900:01	Software version (driver)	Software version of the driver card	STRING	RO	
F900:02	Internal temperature	Internal module temperature Unit: 1°C	INT8	RO	0x00 (0 _{dec})
F900:04	Control voltage	Control voltage Unit: 1 mV,	UINT16	RO	0x0000 (0 _{dec})
F900:05	Motor supply voltage	Motor supply voltage Unit: 1 mV	UINT16	RO	0x0000 (0 _{dec})
F900:06	Cycle time	Measured cycle time Unit: 1 µs	UINT16	RO	0x0000 (0 _{dec})

7.3.8 Standard objects (0x1000-0x1FF)

The standard objects have the same meaning for all EtherCAT slaves.

Index 1000 Device type

Index (hex)	Name	Meaning	Data type	Flags	Default
1000:0	Device type	Device type of the EtherCAT slave: The Lo-Word contains the CoE profile used (5001). The Hi-Word contains the module profile according to the modular device profile.	UINT32	RO	0x00001389 (5001 _{dec})

Index 1008 Device name

Index (hex)	Name	Meaning	Data type	Flags	Default
1008:0	Device name	Device name of the EtherCAT slave	STRING	RO	EJ7041-0052

Index 1009 Hardware version

Index (hex)	Name	Meaning	Data type	Flags	Default
1009:0	Hardware version	Hardware version of the EtherCAT slave	STRING	RO	00

Index 100A Software version

Index (hex)	Name	Meaning	Data type	Flags	Default
100A:0	Software version	Firmware version of the EtherCAT slave	STRING	RO	01

Index 1018 Identity

Index (hex)	Name	Meaning	Data type	Flags	Default
1018:0	Identity	Information for identifying the slave	UINT8	RO	0x04 (4 _{dec})
1018:01	Vendor ID	Vendor ID of the EtherCAT slave	UINT32	RO	0x00000002 (2 _{dec})
1018:02	Product code	Product code of the EtherCAT slave	UINT32	RO	0x1B812852 (461449298 _{dec})
1018:03	Revision	Revision number of the EtherCAT slave; the Low Word (bit 0-15) indicates the special module number, the High Word (bit 16-31) refers to the device description	UINT32	RO	0x00000000 (0 _{dec})
1018:04	Serial number	Serial number of the EtherCAT slave; the Low Byte (bit 0-7) of the Low Word contains the year of production, the High Byte (bit 8-15) of the Low Word contains the week of production, the High Word (bit 16-31) is 0	UINT32	RO	0x00000000 (0 _{dec})

Index 10F0 Backup parameter handling

Index (hex)	Name	Meaning	Data type	Flags	Default
10F0:0	Backup parameter handling	Information for standardized loading and saving of backup entries	UINT8	RO	0x01 (1 _{dec})
10F0:01	Checksum	Checksum across all backup entries of the EtherCAT slave	UINT32	RO	0x00000000 (0 _{dec})

Index 10F8 Actual Time Stamp

Index (hex)	Name	Meaning	Data type	Flags	Default
10F8:0	Actual Time Stamp	Timestamp	UINT64	RO	

Index 1400 ENC RxPDO-Par Control compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1400:0	ENC RxPDO-Par Control compact	PDO Parameter RxPDO 1	UINT8	RO	0x06 (6 _{dec})
1400:06	Exclude RxPDOs	Specifies the RxPDOs (index of RxPDO mapping objects) that must not be transferred together with RxPDO 1.	OCTET-STRING[6]	RO	01 16 00 00 00 00

Index 1401 ENC RxPDO-Par Control

Index (hex)	Name	Meaning	Data type	Flags	Default
1401:0	ENC RxPDO-Par Control	PDO Parameter RxPDO 2	UINT8	RO	0x06 (6 _{dec})
1401:06	Exclude RxPDOs	Specifies the RxPDOs (index of RxPDO mapping objects) that must not be transferred together with RxPDO 2.	OCTET-STRING[6]	RO	00 16 00 00 00 00

Index 1403 STM RxPDO-Par Position

Index (hex)	Name	Meaning	Data type	Flags	Default
1403:0	STM RxPDO-Par Position	PDO Parameter RxPDO 4	UINT8	RO	0x06 (6 _{dec})
1403:06	Exclude RxPDOs	Specifies the RxPDOs (index of RxPDO mapping objects) that must not be transferred together with RxPDO 4.	OCTET-STRING[6]	RO	04 16 05 16 06 16

Index 1404 STM RxPDO-Par Velocity

Index (hex)	Name	Meaning	Data type	Flags	Default
1404:0	STM RxPDO-Par Velocity	PDO Parameter RxPDO 5	UINT8	RO	0x06 (6 _{dec})
1404:06	Exclude RxPDOs	Specifies the RxPDOs (index of RxPDO mapping objects) that must not be transferred together with RxPDO 5.	OCTET-STRING[6]	RO	03 16 05 16 06 16

Index 1405 POS RxPDO-Par Control compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1405:0	POS RxPDO-Par Control compact	PDO Parameter RxPDO 6	UINT8	RO	0x06 (6 _{dec})
1405:06	Exclude RxPDOs	Specifies the RxPDOs (index of RxPDO mapping objects) that must not be transferred together with RxPDO 6.	OCTET-STRING[6]	RO	03 16 04 16 06 16

Index 1406 POS RxPDO-Par Control

Index (hex)	Name	Meaning	Data type	Flags	Default
1406:0	POS RxPDO-Par Control	PDO Parameter RxPDO 7	UINT8	RO	0x06 (6 _{dec})
1406:06	Exclude RxPDOs	Specifies the RxPDOs (index of RxPDO mapping objects) that must not be transferred together with RxPDO 7.	OCTET-STRING[6]	RO	03 16 04 16 05 16

Index 1407 POS RxPDO-Par Control 2

Index (hex)	Name	Meaning	Data type	Flags	Default
1407:0	POS RxPDO-Par Control 2	PDO Parameter RxPDO 8	UINT8	RO	0x06 (6 _{dec})
1407:06	Exclude RxPDOs	Specifies the RxPDOs (index of RxPDO mapping objects) that must not be transferred together with RxPDO 8	OCTET-STRING[6]	RO	03 16 04 16 05 16

Index 1600 ENC RxPDO-Map Control compact

Index (hex)	Name	Meaning	Data type	Flags	Default value
1600:0	ENC RxPDO-Map Control compact	PDO Mapping RxPDO 1	UINT8	RO	0x07 (7 _{dec})
1600:01	SubIndex 001	1. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1600:02	SubIndex 002	2. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x02 (Enable latch extern on positive edge))	UINT32	RO	0x7000:02, 1
1600:03	SubIndex 003	3. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x03 (Set counter))	UINT32	RO	0x7000:03, 1
1600:04	SubIndex 004	4. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x04 (Enable latch extern on negative edge))	UINT32	RO	0x7000:04, 1
1600:05	SubIndex 005	5. PDO Mapping entry (4 bits align)	UINT32	RO	0x0000:00, 4
1600:06	SubIndex 006	6. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8
1600:07	SubIndex 007	7. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x11 (Set counter value))	UINT32	RO	0x7000:11, 16

Index 1601 ENC RxPDO-Map Control

Index (hex)	Name	Meaning	Data type	Flags	Default
1601:0	ENC RxPDO-Map Control	PDO Mapping RxPDO 2	UINT8	RO	0x07 (7 _{dec})
1601:01	SubIndex 001	1. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1601:02	SubIndex 002	2. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x02 (Enable latch extern on positive edge))	UINT32	RO	0x7000:02, 1
1601:03	SubIndex 003	3. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x03 (Set counter))	UINT32	RO	0x7000:03, 1
1601:04	SubIndex 004	4. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x04 (Enable latch extern on negative edge))	UINT32	RO	0x7000:04, 1
1601:05	SubIndex 005	5. PDO Mapping entry (4 bits align)	UINT32	RO	0x0000:00, 4
1601:06	SubIndex 006	6. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8
1601:07	SubIndex 007	7. PDO Mapping entry (object 0x7000 (ENC Outputs Ch.1), entry 0x11 (Set counter value))	UINT32	RO	0x7000:11, 32

Index 1602 STM RxPDO-Map Control

Index (hex)	Name	Meaning	Data type	Flags	Default
1602:0	STM RxPDO-Map Control	PDO Mapping RxPDO 3	UINT8	RO	0x05 (5 _{dec})
1602:01	SubIndex 001	1. PDO Mapping entry (object 0x7010 (STM Outputs Ch.1), entry 0x01 (Enable))	UINT32	RO	0x7010:01, 1
1602:02	SubIndex 002	2. PDO Mapping entry (object 0x7010 (STM Outputs Ch.1), entry 0x02 (Reset))	UINT32	RO	0x7010:02, 1
1602:03	SubIndex 003	3. PDO Mapping entry (object 0x7010 (STM Outputs Ch.1), entry 0x03 (Reduce torque))	UINT32	RO	0x7010:03, 1
1602:04	SubIndex 004	4. PDO Mapping entry (5 bits align)	UINT32	RO	0x0000:00, 5
1602:05	SubIndex 005	5. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8

Index 1603 STM RxPDO-Map Position

Index (hex)	Name	Meaning	Data type	Flags	Default
1603:0	STM RxPDO-Map Position	PDO Mapping RxPDO 4	UINT8	RO	0x01 (1 _{dec})
1603:01	SubIndex 001	1. PDO Mapping entry (object 0x7010 (STM Outputs Ch.1), entry 0x11 (Position))	UINT32	RO	0x7010:11, 32

Index 1604 STM RxPDO-Map Velocity

Index (hex)	Name	Meaning	Data type	Flags	Default
1604:0	STM RxPDO-Map Velocity	PDO Mapping RxPDO 5	UINT8	RO	0x01 (1 _{dec})
1604:01	SubIndex 001	1. PDO Mapping entry (object 0x7010 (STM Outputs Ch.1), entry 0x21 (Velocity))	UINT32	RO	0x7010:21, 16

Index 1605 POS RxPDO-Map Control compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1605:0	POS RxPDO-Map Control compact	PDO Mapping RxPDO 6	UINT8	RO	0x05 (5 _{dec})
1605:01	SubIndex 001	1. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x01 (Execute))	UINT32	RO	0x7020:01, 1
1605:02	SubIndex 002	2. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x02 (Emergency stop))	UINT32	RO	0x7020:02, 1
1605:03	SubIndex 003	3. PDO Mapping entry (6 bits align)	UINT32	RO	0x0000:00, 6
1605:04	SubIndex 004	4. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8
1605:05	SubIndex 005	5. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x11 (Target position))	UINT32	RO	0x7020:11, 32

Index 1606 POS RxPDO-Map Control

Index (hex)	Name	Meaning	Data type	Flags	Default
1606:0	POS RxPDO-Map Control	PDO Mapping RxPDO 7	UINT8	RO	0x09 (9 _{dec})
1606:01	SubIndex 001	1. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x01 (Execute))	UINT32	RO	0x7020:01, 1
1606:02	SubIndex 002	2. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x02 (Emergency stop))	UINT32	RO	0x7020:02, 1
1606:03	SubIndex 003	3. PDO Mapping entry (6 bits align)	UINT32	RO	0x0000:00, 6
1606:04	SubIndex 004	3. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8
1606:05	SubIndex 005	5. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x11 (Target position))	UINT32	RO	0x7020:11, 32
1606:06	SubIndex 006	6. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x21 (Velocity))	UINT32	RO	0x7020:21, 16
1606:07	SubIndex 007	7. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x22 (Start type))	UINT32	RO	0x7020:22, 16
1606:08	SubIndex 008	8. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x23 (Acceleration))	UINT32	RO	0x7020:23, 16
1606:09	SubIndex 009	9. PDO Mapping entry (object 0x7020 (POS Outputs Ch.1), entry 0x24 (Deceleration))	UINT32	RO	0x7020:24, 16

Index 1607 POS RxPDO-Map Control 2

Index (hex)	Name	Meaning	Data type	Flags	Default
1606:0	POS RxPDO-Map Control	PDO Mapping RxPDO 8	UINT8	RO	0x09 (9 _{dec})
1607:01	SubIndex 001	1. PDO Mapping entry (2 bits align)	UINT32	RO	0x0000:00,2
1607:02	SubIndex 002	2. PDO Mapping entry (object 0x7021 (POS Outputs 2 Ch.1), entry 0x03 (Enable auto start))	UINT32	RO	0x7021:03, 1
1607:03	SubIndex 003	3. PDO Mapping entry (5 bits align)	UINT32	RO	0x0000:00, 5
1607:04	SubIndex 004	4. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8
1607:05	SubIndex 005	5. PDO Mapping entry (object 0x7021 (POS Outputs 2 Ch.1), entry 0x11 (Target position))	UINT32	RO	0x7021:11, 32
1607:06	SubIndex 006	6. PDO Mapping entry (object 0x7021 (POS Outputs 2 Ch.1), entry 0x21 (Velocity))	UINT32	RO	0x7021:21, 16
1607:07	SubIndex 007	7. PDO Mapping entry (object 0x7021 (POS Outputs 2 Ch.1), entry 0x22 (Start type))	UINT32	RO	0x7021:22, 16
1607:08	SubIndex 008	8. PDO Mapping entry (object 0x7021 (POS Outputs 2 Ch.1), entry 0x23 (Acceleration))	UINT32	RO	0x7021:23, 16
1607:09	SubIndex 009	9. PDO Mapping entry (object 0x7021 (POS Outputs 2 Ch.1), entry 0x24 (Deceleration))	UINT32	RO	0x7021:24, 16

Index 1800 ENC TxPDO-Par Status compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1800:0	ENC TxPDO-Par Status compact	PDO parameter TxPDO 1	UINT8	RO	0x06 (6 _{dec})
1800:06	Exclude TxPDOs	Specifies the TxPDOs (index of TxPDO mapping objects) that must not be transferred together with TxPDO 1.	OCTET-STRING[2]	RO	01 1A

Index 1801 ENC TxPDO-Par Status

Index (hex)	Name	Meaning	Data type	Flags	Default
1801:0	ENC TxPDO-Par Status	PDO parameter TxPDO 2	UINT8	RO	0x06 (6 _{dec})
1801:06	Exclude TxPDOs	Specifies the TxPDOs (index of TxPDO mapping objects) that must not be transferred together with TxPDO 2.	OCTET-STRING[2]	RO	00 1A

Index 1805 POS TxPDO-Par Status compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1807:0	POS TxPDO-Par Status compact	PDO parameter TxPDO 3	UINT8	RO	0x06 (6 _{dec})
1807:06	Exclude TxPDOs	Specifies the TxPDOs (index of TxPDO mapping objects) that must not be transferred together with TxPDO 3.	OCTET-STRING[2]	RO	06 1A

Index 1806 POS TxPDO-Par Status compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1806:0	POS TxPDO-Par Status compact	PDO parameter TxPDO 4	UINT8	RO	0x06 (6 _{dec})
1806:06	Exclude TxPDOs	Specifies the TxPDOs (index of TxPDO mapping objects) that must not be transferred together with TxPDO 4.	OCTET-STRING[2]	RO	05 1A

Index 1A00 ENC TxPDO-Map Status compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1A00:0	ENC TxPDO-Map Status compact	PDO Mapping TxPDO 1	UINT8	RO	0x0D (13 _{dec})
1A00:01	SubIndex 001	1. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1A00:02	SubIndex 002	2. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x02 (Latch extern valid))	UINT32	RO	0x6000:02, 1
1A00:03	SubIndex 003	3. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x03 (Set counter done))	UINT32	RO	0x6000:03, 1
1A00:04	SubIndex 004	4. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x04 (Counter underflow))	UINT32	RO	0x6000:04, 1
1A00:05	SubIndex 005	5. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x05 (Counter overflow))	UINT32	RO	0x6000:05, 1
1A00:06	SubIndex 006	6. PDO Mapping entry (3 bits align)	UINT32	RO	0x0000:00, 3
1A00:07	SubIndex 007	7. PDO Mapping entry (4 bits align)	UINT32	RO	0x0000:00, 4
1A00:08	SubIndex 008	8. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x0D (Status of extern latch))	UINT32	RO	0x6000:0D, 1
1A00:09	SubIndex 009	9. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x0E) (Sync error))	UINT32	RO	0x6000:0E, 1
1A00:0A	SubIndex 010	10. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1A00:0B	SubIndex 011	11. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x10) (TxPDO Toggle))	UINT32	RO	0x6000:10, 1
1A00:0C	SubIndex 012	12. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x11 (Counter value))	UINT32	RO	0x6000:11, 16
1A00:0D	SubIndex 013	13. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x12 (Latch value))	UINT32	RO	0x6000:12, 16

Index 1A01 ENC TxPDO-Map Status

Index (hex)	Name	Meaning	Data type	Flags	Default
1A01:0	ENC TxPDO-Map Status	PDO Mapping TxPDO 2	UINT8	RO	0x0D (13 _{dec})
1A01:01	SubIndex 001	1. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1A01:02	SubIndex 002	2. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x02 (Latch extern valid))	UINT32	RO	0x6000:02, 1
1A01:03	SubIndex 003	3. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x03 (Set counter done))	UINT32	RO	0x6000:03, 1
1A01:04	SubIndex 004	4. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x04 (Counter underflow))	UINT32	RO	0x6000:04, 1
1A01:05	SubIndex 005	5. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x05 (Counter overflow))	UINT32	RO	0x6000:05, 1
1A01:06	SubIndex 006	6. PDO Mapping entry (3 bits align)	UINT32	RO	0x0000:00, 3
1A01:07	SubIndex 007	7. PDO Mapping entry (4 bits align)	UINT32	RO	0x0000:00, 4
1A01:08	SubIndex 008	8. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x0D (Status of extern latch))	UINT32	RO	0x6000:0D, 1
1A01:09	SubIndex 009	9. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x0E) (Sync error))	UINT32	RO	0x6000:0E, 1
1A01:0A	SubIndex 010	10. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1A01:0B	SubIndex 011	11. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x10) (TxPDO Toggle))	UINT32	RO	0x6000:10, 1
1A01:0C	SubIndex 012	12. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x11 (Counter value))	UINT32	RO	0x6000:11, 32
1A01:0D	SubIndex 013	13. PDO Mapping entry (object 0x6000 (ENC Inputs Ch. 1), entry 0x12 (Latch value))	UINT32	RO	0x6000:12, 32

Index 1A02 ENC TxPDO-Map Timest. compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1A02:0	ENC TxPDO-Map Timest. compact	PDO Mapping TxPDO 3	UINT8	RO	0x01 (1 _{dec})
1A02:01	SubIndex 001	1. PDO Mapping entry (object 0x6000 (ENC Inputs Ch.1), entry 0x16 (Timestamp))	UINT32	RO	0x6000:16, 32

Index 1A03 STM TxPDO-Map Status

Index (hex)	Name	Meaning	Data type	Flags	Default
1A03:0	STM TxPDO-Map Status	PDO Mapping TxPDO 4	UINT8	RO	0x0E (14 _{dec})
1A03:01	SubIndex 001	1. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x01 (Ready to enable))	UINT32	RO	0x6010:01, 1
1A03:02	SubIndex 002	2. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x02 (Ready))	UINT32	RO	0x6010:02, 1
1A03:03	SubIndex 003	3. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x03 (Warning))	UINT32	RO	0x6010:03, 1
1A03:04	SubIndex 004	4. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x04 (Error))	UINT32	RO	0x6010:04, 1
1A03:05	SubIndex 005	5. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x05 (Moving positive))	UINT32	RO	0x6010:05, 1
1A03:06	SubIndex 006	6. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x06 (Moving negative))	UINT32	RO	0x6010:06, 1
1A03:07	SubIndex 007	7. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x07 (Torque reduced))	UINT32	RO	0x6010:07, 1
1A03:08	SubIndex 008	8. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1A03:09	SubIndex 009	9. PDO Mapping entry (3 bits align)	UINT32	RO	0x0000:00, 3
1A03:0A	SubIndex 010	10. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x0E (Sync error))	UINT32	RO	0x6010:0C, 1
1A03:0B	SubIndex 011	11. PDO Mapping entry (1 bit align)	UINT32	RO	0x6010:0D, 1
1A03:0C	SubIndex 012	12. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x10 (TxPDO Toggle))	UINT32	RO	0x6010:0E, 1
1A03:0D	SubIndex 013	13. PDO Mapping entry (1 bit align)	UINT32	RO	0x0000:00, 1
1A03:0E	SubIndex 014	14. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x10 (TxPDO Toggle))	UINT32	RO	0x6010:10, 1

Index 1A04 STM TxPDO-Map Synchron info data

Index (hex)	Name	Meaning	Data type	Flags	Default
1A04:0	STM TxPDO-Map Synchron info data	PDO Mapping TxPDO 5	UINT8	RO	0x02 (2 _{dec})
1A04:01	SubIndex 001	1. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x11 (Info data 1))	UINT32	RO	0x6010:11, 16
1A04:02	SubIndex 002	2. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x12 (Info data 2))	UINT32	RO	0x6010:12, 16

Index 1A05 POS TxPDO-Map Status compact

Index (hex)	Name	Meaning	Data type	Flags	Default
1A05:0	POS TxPDO-Map Status compact	PDO Mapping TxPDO 6	UINT8	RO	0x09 (9 _{dec})
1A05:01	SubIndex 001	1. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x01 (Busy))	UINT32	RO	0x6020:01, 1
1A05:02	SubIndex 002	2. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x02 (In-Target))	UINT32	RO	0x6020:02, 1
1A05:03	SubIndex 003	3. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x03 (Warning))	UINT32	RO	0x6020:03, 1
1A05:04	SubIndex 004	4. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x04 (Error))	UINT32	RO	0x6020:04, 1
1A05:05	SubIndex 005	5. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x05 (Calibrated))	UINT32	RO	0x6020:05, 1
1A05:06	SubIndex 006	6. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x06 (Accelerate))	UINT32	RO	0x6020:06, 1
1A05:07	SubIndex 007	7. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x07 (Decelerate))	UINT32	RO	0x6020:07, 1
1A05:08	SubIndex 008	8. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x08 (Ready to execute))	UINT32	RO	0x6020:08, 1
1A05:09	SubIndex 009	9. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8

Index 1A06 POS TxPDO-Map Status

Index (hex)	Name	Meaning	Data type	Flags	Default
1A06:0	POS TxPDO-Map Status	PDO Mapping TxPDO 7	UINT8	RO	0x0C (12 _{dec})
1A06:01	SubIndex 001	1. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x01 (Busy))	UINT32	RO	0x6020:01, 1
1A06:02	SubIndex 002	2. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x02 (In-Target))	UINT32	RO	0x6020:02, 1
1A06:03	SubIndex 003	3. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x03 (Warning))	UINT32	RO	0x6020:03, 1
1A06:04	SubIndex 004	4. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x04 (Error))	UINT32	RO	0x6020:04, 1
1A06:05	SubIndex 005	5. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x05 (Calibrated))	UINT32	RO	0x6020:05, 1
1A06:06	SubIndex 006	6. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x06 (Accelerate))	UINT32	RO	0x6020:06, 1
1A06:07	SubIndex 007	7. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x07 (Decelerate))	UINT32	RO	0x6020:07, 1
1A06:08	SubIndex 008	8. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x08 (Ready to execute))	UINT32	RO	0x6020:08, 1
1A06:09	SubIndex 009	9. PDO Mapping entry (8 bits align)	UINT32	RO	0x0000:00, 8
1A06:0A	SubIndex 010	10. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x11 (Actual position))	UINT32	RO	0x6020:11, 32
1A06:0B	SubIndex 011	11. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x21 (Actual velocity))	UINT32	RO	0x6020:21, 16
1A06:0C	SubIndex 012	12. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x22 (Actual drive time))	UINT32	RO	0x6020:22, 32

Index 1A07 STM TxPDO-Map Internal position

Index (hex)	Name	Meaning	Data type	Flags	Default
1A07:0	STM TxPDO-Map Internal position	PDO Mapping TxPDO 8	UINT8	RO	0x01 (1 _{dec})
1A07:01	SubIndex 001	1. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x14 (Internal Positon))	UINT32	RO	0x6010:14, 32

Index 1A08 STM TxPDO-Map External position

Index (hex)	Name	Meaning	Data type	Flags	Default
1A08:0	STM TxPDO-Map External position	PDO Mapping TxPDO 9	UINT8	RO	0x01 (1 _{dec})
1A08:01	SubIndex 001	1. PDO Mapping entry (object 0x6010 (STM Inputs Ch.1), entry 0x15 (External position))	UINT32	RO	0x6010:15, 32

Index 1A09 POS TxPDO-Actual position lag

Index (hex)	Name	Meaning	Data type	Flags	Default
1A09:0	POS TxPDO-Actual position lag	PDO Mapping TxPDO 10	UINT8	RO	0x01 (1 _{dec})
1A09:01	SubIndex 001	1. PDO Mapping entry (object 0x6020 (POS Inputs Ch.1), entry 0x23 (Actual positon lag))	UINT32	RO	0x6020:23, 32

Index 1C00 Sync manager type

Index (hex)	Name	Meaning	Data type	Flags	Default
1C00:0	Sync manager type	Using the Sync Managers	UINT8	RO	0x04 (4 _{dec})
1C00:01	SubIndex 001	Sync-Manager Type Channel 1: Mailbox Write	UINT8	RO	0x01 (1 _{dec})
1C00:02	SubIndex 002	Sync-Manager Type Channel 2: Mailbox Read	UINT8	RO	0x02 (2 _{dec})
1C00:03	SubIndex 003	Sync-Manager Type Channel 3: Process Data Write (Outputs)	UINT8	RO	0x03 (3 _{dec})
1C00:04	SubIndex 004	Sync-Manager Type Channel 4: Process Data Read (Inputs)	UINT8	RO	0x04 (4 _{dec})

Index 1C12 RxPDO assign

Index (hex)	Name	Meaning	Data type	Flags	Default
1C12:0	RxPDO assign	PDO Assign Outputs	UINT8	RW	0x03 (3 _{dec})
1C12:01	SubIndex 001	1. zugeordnete RxPDO (enthält den Index des zugehörigen RxPDO Mapping Objekts)	UINT16	RW	0x1600 (5632 _{dec})
1C12:02	SubIndex 002	2. zugeordnete RxPDO (enthält den Index des zugehörigen RxPDO Mapping Objekts)	UINT16	RW	0x1602 (5634 _{dec})
1C12:03	SubIndex 003	3. zugeordnete RxPDO (enthält den Index des zugehörigen RxPDO Mapping Objekts)	UINT16	RW	0x1604 (5636 _{dec})

Index 1C13 TxPDO assign

Index (hex)	Name	Meaning	Data type	Flags	Default
1C13:0	TxPDO assign	PDO Assign Inputs	UINT8	RO	0x02 (2 _{dec})
1C13:01	SubIndex 001	1. allocated TxPDO (contains the index of the associated TxPDO mapping object)	UINT16	RO	0x1A00 (6656 _{dec})
1C13:02	SubIndex 002	2. allocated TxPDO (contains the index of the associated TxPDO mapping object)	UINT16	RO	0x1A03 (6659 _{dec})

Index 1C32 SM output parameter

Index (hex)	Name	Meaning	Data type	Flags	Default
1C32:0	SM output parameter	Synchronization parameters for the outputs	UINT8	RO	0x20 (32 _{dec})
1C32:01	Sync mode	Current synchronization mode: • 0: Free Run • 1: Synchronous with SM 2 event • 2: DC-Mode - Synchronous with SYNC0 Event • 3: DC-Mode - Synchronous with SYNC1 event	UINT16	RW	0x0001 (1 _{dec})
1C32:02	Cycle time	Cycle time (in ns): • Free Run: Cycle time of the local timer • Synchronous with SM 2 event: Master cycle time • DC-Mode: SYNC0/SYNC1 Cycle Time	UINT32	RW	0x000F4240 (1000000 _{dec})
1C32:03	Shift time	Time between SYNC0 event and output of the outputs (in ns, DC mode only)	UINT32	RO	0x00000000 (0 _{dec})
1C32:04	Sync modes supported	Supported synchronization modes: • Bit 0 = 1: free run is supported • Bit 1 = 1: Synchronous with SM 2 event is supported • Bit 2-3 = 01: DC mode is supported • Bit 4-5 = 10: Output shift with SYNC1 event (only DC mode) • Bit 14 = 1: dynamic times (measurement through writing of 0x1C32:08)	UINT16	RO	0xC007 (491599 _{dec})
1C32:05	Minimum cycle time	Minimum cycle time (in ns)	UINT32	RO	0x0003D090 (250000 _{dec})
1C32:06	Calc and copy time	Minimum time between SYNC0 and SYNC1 event (in ns, DC mode only)	UINT32	RO	0x00000000 (0 _{dec})
1C32:07	Minimum delay time	Min. time between SYNC1 event and output of the outputs (in ns, DC mode only)	UINT32	RO	0x00000000 (0 _{dec})
1C32:08	Command	• 0: Measurement of the local cycle time is stopped • 1: Measurement of the local cycle time is started The entries 1C32:03, 1C32:05, 1C32:06, 1C32:07, 1C32:09, 1C33:03, 1C33:06, and 1C33:09 are updated with the maximum measured values. For a subsequent measurement the measured values are reset	UINT16	RW	0x0000 (0 _{dec})
1C32:09	Maximum delay time	Time between SYNC1 event and output of the outputs (in ns, DC mode only)	UINT32	RO	0x00000000 (0 _{dec})
1C32:0B	SM event missed counter	Number of missed SM events in OPERATIONAL (DC mode only)	UINT16	RO	0x0000 (0 _{dec})
1C32:0C	Cycle exceeded counter	Number of occasions the cycle time was exceeded in OPERATIONAL (cycle was not completed in time or the next cycle began too early)	UINT16	RO	0x0000 (0 _{dec})
1C32:0D	Shift too short counter	Number of occasions that the interval between SYNC0 and SYNC1 event was too short (DC mode only)	UINT16	RO	0x0000 (0 _{dec})
1C32:14	Frame repeat time		UINT32	RW	0x00000000 (0 _{dec})
1C32:20	Sync error	The synchronization was not correct in the last cycle, (outputs were output too late; DC mode only)	BOOLEAN	RO	0x00 (0 _{dec})

Index 1C33 SM input parameter

Index (hex)	Name	Meaning	Data type	Flags	Default
1C33:0	SM input parameter	Synchronization parameters for the inputs	UINT8	RO	0x20 (32 _{dec})
1C33:01	Sync mode	Current synchronization mode: <ul style="list-style-type: none"> • 0: Free Run • 1: Synchron with SM 3 Event (no outputs available) • 2: DC - Synchron with SYNC0 Event • 3: DC - Synchron with SYNC1 Event • 34: Synchron with SM 2 Event (outputs available) 	UINT16	RW	0x0022 (34 _{dec})
1C33:02	Cycle time	Cycle time (in ns): <ul style="list-style-type: none"> • Free Run: Cycle time of the local timer • Synchron with SM 2 Event: Master cycle time • DC mode: SYNC0/SYNC1 Cycle Time 	UINT32	RW	0x000F4240 (1000000 _{dec})
1C33:03	Shift time	Time between SYNC0 event and reading of the inputs (in ns, only DC mode)	UINT32	RO	0x00000000 (0 _{dec})
1C33:04	Sync modes supported	Supported synchronization modes: <ul style="list-style-type: none"> • Bit 0: free run is supported • Bit 1: Synchron with SM 2 Event is supported (outputs available) • Bit 1: Synchron with SM 3 Event is supported (no outputs available) • Bit 2-3 = 01: DC mode is supported • Bit 4-5 = 01: Input Shift through local event (outputs available) • Bit 4-5 = 10: Input Shift with SYNC1 Event (no outputs available) • Bit 14 = 1: dynamic times (measurement through writing of 0x1C33:08) 	UINT16	RO	0xC007 (49159 _{dec})
1C33:05	Minimum cycle time	Minimum cycle time (in ns)	UINT32	RO	0x000249F0 (150000 _{dec})
1C33:06	Calc and copy time	Time between reading of the inputs and availability of the inputs for the master (in ns, only DC mode)	UINT32	RO	0x00000000 (0 _{dec})
1C33:07	Minimum delay time	Minimum time between Sync-1 Event and reading of the inputs (in ns, only DC mode)	UINT32	RO	0x00000000 (0 _{dec})
1C33:08	Command	With this entry the real required process data provision time can be measured. <ul style="list-style-type: none"> • 0: Measurement of the local cycle time is stopped • 1: Measurement of the local cycle time is started <p>The entries 0x1C33:03, 0x1C33:06, 0x1C33:09 are updated with the maximum measured values. For a subsequent measurement the measured values are reset</p>	UINT16	RW	0x0000 (0 _{dec})
1C33:09	Maximum Delay time	Time between SYNC1 event and reading of the inputs (in ns, only DC mode)	UINT32	RO	0x00000000 (0 _{dec})
1C33:0B	SM event missed counter	Number of missed SM events in OPERATIONAL (DC mode only)	UINT16	RO	0x0000 (0 _{dec})
1C33:0C	Cycle exceeded counter	Number of occasions the cycle time was exceeded in OPERATIONAL (cycle was not completed in time or the next cycle began too early)	UINT16	RO	0x0000 (0 _{dec})
1C33:0D	Shift too short counter	Number of occasions that the interval between SYNC0 and SYNC1 event was too short (DC mode only)	UINT16	RO	0x0000 (0 _{dec})
1C33:20	Sync error	The synchronization was not correct in the last cycle (outputs were output too late; DC mode only)	BOOLEAN	RO	0x00 (0 _{dec})

8 Appendix

8.1 Support and Service

Beckhoff and their partners around the world offer comprehensive support and service, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

Beckhoff's branch offices and representatives

Please contact your Beckhoff branch office or representative for local support and service on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on her internet pages: www.beckhoff.com

You will also find further documentation for Beckhoff components there.

Support

The Beckhoff Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- support
- design, programming and commissioning of complex automation systems
- and extensive training program for Beckhoff system components

Hotline: +49 5246 963 157

e-mail: support@beckhoff.com

web: www.beckhoff.com/support

Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: +49 5246 963 460

e-mail: service@beckhoff.com

web: www.beckhoff.com/service

Headquarters Germany

Beckhoff Automation GmbH & Co. KG

Hülshorstweg 20
33415 Verl
Germany

Phone: +49 5246 963 0
e-mail: info@beckhoff.com
web: www.beckhoff.com

More Information:
www.beckhoff.com/ej7xxx

Beckhoff Automation GmbH & Co. KG
Hülsorstweg 20
33415 Verl
Germany
Phone: +49 5246 9630
info@beckhoff.com
www.beckhoff.com

