



Installation and Operating instructions for
**Control Cabinet Industrial PC
C6640/ C6650 up to -0030**

Version: 1.6
Date: 2018-01-24

BECKHOFF

Table of contents

1. Foreword	3
Notes on the Documentation	3
Liability Conditions	3
Trademarks	3
Patent Pending	3
Copyright	3
State at Delivery	3
Delivery conditions	3
Description of safety symbols	4
Basic safety measures	5
Operator's obligation to exercise diligence	6
Operator requirements	6
2. Product Description	7
Appropriate Use	7
Opening the Housing	7
Configuration with 100-240 V _{AC} Full Range Power Supply	9
Interfaces up to C6640/ C6650-0020	10
PS/2 connections	10
Serial interface	10
Parallel interface	10
VGA connection	10
USB interfaces	10
Network connection 10/100MBit	10
Network connection 1Gbit (optional)	10
Sound-On-Board	10
Additional plug-in cards (optional)	10
Interfaces C6640/ C6650-0030	11
PS/2 connections	11
Serial interface	11
USB interfaces	11
Network connection	11
Sound-On-Board	11
DVI-I (Digital Visual Interface)	11
DVI-D (Digital Visual Interface)	11
DisplayPort	11
Additional plug-in cards (optional)	11
3. Installation Instructions	12
Transport and Unpacking	12
Transport	12
Unpacking	12
Installation of the PC in the control cabinet	13
Earthing measures	13
Power Supply Connection with 100-240 V _{AC} power supply unit	14
Mains Socket	14
Power supply cords	14
Power Supply Connection with 24 V _{DC} power supply unit (optional)	15
Beckhoff power supply technology	15
Electrical Data	16
Pin assignment of the connectors	16
Pin assignment power supply	17
Pin assignment external wiring	17
Fitting the Cables	18
Fitting the connector	18
Connecting 24V _{DC} Power Supply	19
Cable Cross Sections	19
Configuration for shutting down the PC	19
PC_ON and Power Status functions	19
UPS output	19

UPS output function	19
Wiring diagram	20
Connecting devices	21
Connecting cables	21
Check voltage rating and connect.	21
4. Operating Instructions	22
Switching the Industrial PC on and off	22
First switching on and driver installation	22
Servicing and Maintenance	23
Cleaning the Industrial PC	23
Servicing	23
Replacing the battery on the motherboard	23
Replacing the fan	23
Emergency procedures	24
Shutting down	24
Disposal	24
5. UPS Software Components (optional)	24
Installation on the PC	24
Help files	24
6. Troubleshooting	25
Fault correction	25
Beckhoff Support and Service	26
Beckhoff branches and partner companies	26
Beckhoff company headquarters	26
Beckhoff Support	26
Beckhoff Service	26
7. Assembly dimensions	27
C6640, Configuration with 100-240 V _{AC} Power Supply	27
C6640, Configuration with 24 V _{DC} -Power Supply (optional)	28
C6650, Configuration with 100-240 V _{AC} Power Supply	29
C6650, Configuration with 24 V _{DC} -Power Supply (optional)	30
8. Appendix	31
Technical data	31
Approvals	31
FCC: Federal Communications Commission	31
Radio Frequency Interference Statement	31
FCC: Canadian Notice	31

Foreword

Notes on the Documentation

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards. It is essential that the following notes and explanations are followed when installing and commissioning these components.

The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

Liability Conditions

The documentation has been prepared with care. The products described are, however, constantly under development. For that reason the documentation is not in every case checked for consistency with performance data, standards or other characteristics. In the event that it contains technical or editorial errors, we retain the right to make alterations at any time and without warning. No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation.

All pictures shown in the documentation are exemplary. Illustrated configurations can differ from standard.

Trademarks

Beckhoff[®], TwinCAT[®], EtherCAT[®], Safety over EtherCAT[®], TwinSAFE[®] and XFC[®] are registered trademarks of and licensed by Beckhoff Automation GmbH.

Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.

Patent Pending

The EtherCAT Technology is covered, including but not limited to the following patent applications and patents:

EP1590927, EP1789857, DE102004044764, DE102007017835

with corresponding applications or registrations in various other countries.

The TwinCAT Technology is covered, including but not limited to the following patent applications and patents:

EP0851348, US6167425 with corresponding applications or registrations in various other countries.

Copyright

© Beckhoff Automation GmbH & Co.KG.

The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization are prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

State at Delivery






All the components are supplied in particular hardware and software configurations appropriate for the application. Modifications to hardware or software configurations other than those described in the documentation are not permitted, and nullify the liability of Beckhoff Automation GmbH & Co.KG.

Delivery conditions

In addition, the general delivery conditions of the company Beckhoff Automation GmbH & Co.KG apply.

Description of safety symbols

The following safety symbols are used in this operating manual. They are intended to alert the reader to the associated safety instructions.


 <p>DANGER</p>	<p>Acute risk of injury!!</p> <p>If you do not adhere the safety advise adjoining this symbol, there is immediate danger to life and health of individuals!</p>
 <p>WARNING</p>	<p>Risk of injury!</p> <p>If you do not adhere the safety advise adjoining this symbol, there is danger to life and health of individuals!</p>
 <p>CAUTION</p>	<p>Hazard to individuals!</p> <p>If you do not adhere the safety advise adjoining this symbol, there is obvious hazard to individuals!</p>
 <p>Attention</p>	<p>Hazard to devices and environment</p> <p>If you do not adhere the notice adjoining this symbol, there is obvious hazard to materials and environment.</p>
 <p>Note</p>	<p>Note or pointer</p> <p>This symbol indicates information that contributes to better understanding.</p>

Basic safety measures


Only switch the PC off after closing the software


Before the Industrial PC is switched off, software that is running must be properly closed.

Otherwise it is possible that data on the hard disk is lost. Please read the section on [Switching the Industrial PC on and off](#).

 Attention	<p>Switch off all parts of the equipment, then uncouple the fieldbus</p> <p>Before opening the housing of the PC, and whenever the PC is being used for purposes other than plant control, such as during functional tests following repair, all parts of the equipment must first be switched off, after which the Industrial PC can be uncoupled from the plant.</p> <p>Pulling out the fieldbus connection plug uncouples the PC (optional).</p> <p>Items of equipment that have been switched off must be secured against being switched on again.</p>
-------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

The Industrial PC's power supply unit must be supplied with 100 V_{AC} - 240 V_{AC} or 24 V_{DC} (optional).

 DANGER	<p>Do not open the power supply unit while voltage is applied!</p> <p>The supply voltage must be switched off before the power supply unit housing is opened.</p>
----------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------

 Attention	<p>Do not exchange any parts when under power</p> <p>When components are being fitted or removed, the supply voltage must be switched off.</p> <p>Fitting work on the Industrial PC can result in damage:</p> <ul style="list-style-type: none"> • if metal objects such as screws or tools fall onto operating circuit boards. • if connecting cables internal to the PC are removed or inserted during operation. • if plug-in cards are removed or inserted when the PC is switched on.
---------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Operator's obligation to exercise diligence

The operator must ensure that

- the Industrial PC is only used for its intended use (see also [Product Description](#)).
- the Industrial PC is in a sound condition and in working order during operation (see also chapter [Servicing](#)).
- the operation manual is in good condition and complete, and always available for reference at the location of the Industrial PC.
- the Industrial PC is operated, maintained and repaired only by sufficiently qualified and authorized personnel.
- the personnel is instructed regularly about relevant occupational safety and environmental protection aspects, and is familiar with the operating manual and in particular the safety notes contained herein.
- none of the safety and warning notes attached to the Industrial PC are removed, and that all notes remain legible.

National regulations depending on the machine type

Depending on the type of machine and plant in which the Industrial PC is being used, there will be national regulations for the control of such machines and plant that the operator must observe. These regulations cover, amongst other things, the intervals between inspections of the controller.

The operator must initiate such inspections in good time.



Attention

Only trained persons may open the Industrial PC housing!

The operator is responsible for ensuring that only trained electrical staff opens the housing of the Industrial PC.

Procedure in the event of a fault

In the event of a fault in the Industrial PC, appropriate measures can be determined with the aid of the list in the [Fault correction](#) section.

Operator requirements

Read the operating instructions

Every user of the Industrial PC must have read these operating instructions.

Software knowledge

Every user must be familiar with any of the functions of the software installed on the PC that he can reach.

Product Description

Appropriate Use

The C6640 and C6650 Industrial PCs are designed for mounting in control cabinets for machine and plant engineering applications.

Opening the Housing

View of the C6650, configuration with 100-240 V_{AC} power supply



The housing cover is locked by a latch. After pressing the key (1) the cover can be fold up a little in the region of the connectors.

Opening the housing



After folding up the cover as shown, it can be pulled out of the slides in direction of the arrow.

Taking off the housing cover




Now the housing cover can be taken off completely, so providing access to the components.

The reassembly of the cover takes place in reverse order. Ensure that the cover engages into the slides (2).

Configuration with 100-240 V_{AC} Full Range Power Supply


View of the C6650 with 100-240 V_{AC} full range power supply.

Removing the card holder

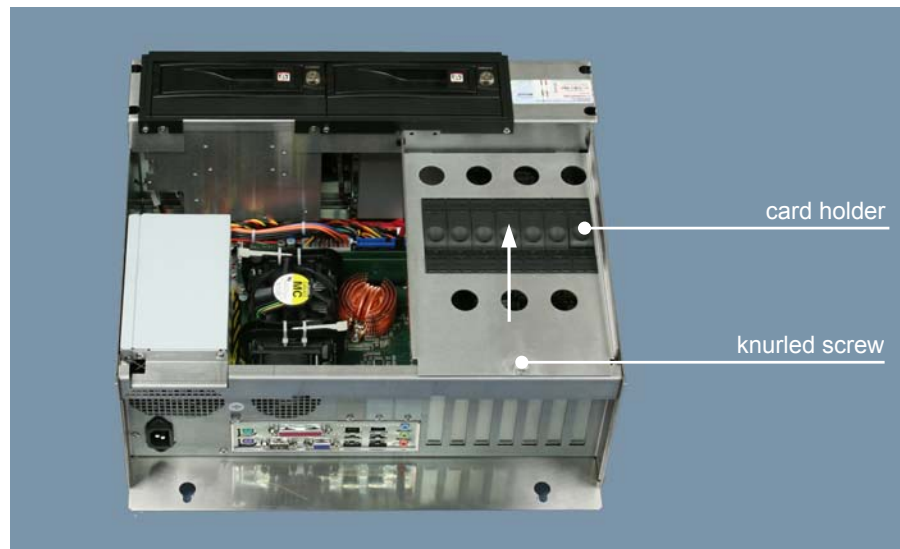

After loosening the knurled screw the card holder can be lifted off (see arrow).

Components of the PCs

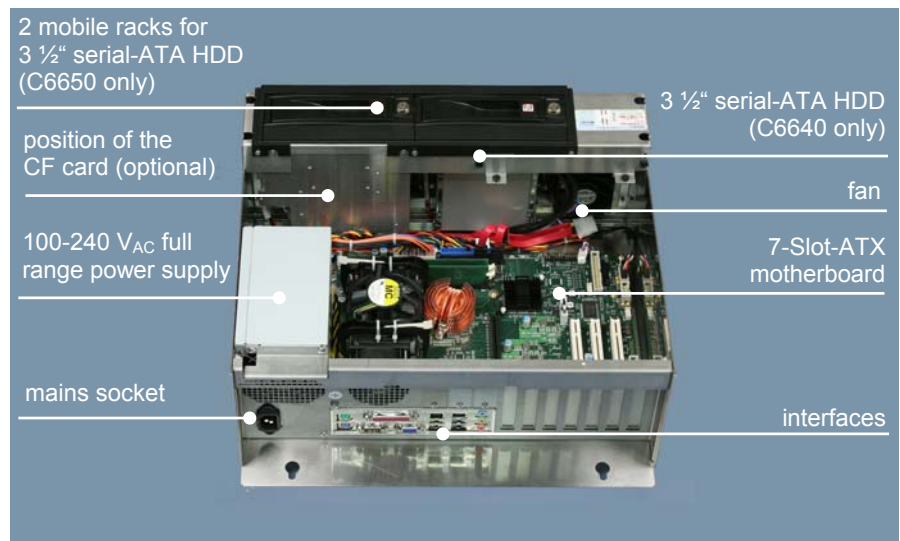


Under the housing cover there is a 7 slot computer core with standard ATX motherboard and different processor configuration.

The connections of the Industrial PC are located on top of the housing.

Interfaces up to C6640/ C6650-0020

ATX motherboard
interfaces

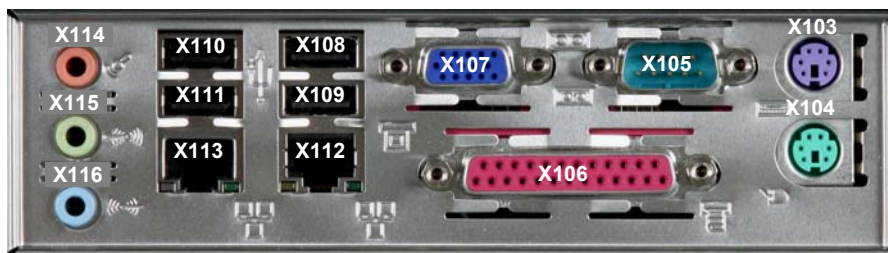

PS/2 connections

PS/2

A PC keyboard can be connected to the upper PS/2 connector (**X103**), while the lower PS/2 connector (**X104**) allows a PS/2 mouse to be used.

Serial interface

RS 232
COM1

The basic version of the Industrial PC has one serial interface COM1, using the type RS232. The interface is brought to a 9 pin SUB-D plug connector (**X105**).

Parallel interface

Printer
LPT1

The parallel interface (**X106**) corresponds to the Centronics standard and is addressed by the software as LPT1.

VGA connection

VGA

A 15-pin SUB-D socket connector (**X107**) allows a VGA monitor to be connected.

USB interfaces

USB1 – USB4

The four USB interfaces (**X108 – X111**) are used to connect peripheral devices with USB connections. The USB2.0 standard is supported.

Network connection 10/100MBit

Network 10/100MBit

The RJ-45 connector (**X112**) allows the PC to be connected to a 10/100MBit Local Area Network (LAN).

Network connection 1Gbit (optional)

Network 1GBit

The RJ-45 connector (**X113**) allows the PC to be connected to a 1GBit Local Area Network (LAN).

Sound-On-Board

Sound

The Industrial PC has a on-board-sound interface with the following connectors:
Microphone jack (**X114**), Line Out jack (**X115**) and Line In jack (**X116**).

Additional plug-in cards (optional)

Type plate

There is a type plate on the top of the Industrial PC which provides information about the hardware configuration of the Industrial PC at the time it was supplied.

Interfaces C6640/ C6650-0030

ATX motherboard
interfaces



PS/2 connections

PS/2

The upper PS/2 connector (**X104**) allows a PS/2 mouse to be used, while a PC keyboard can be connected to the lower PS/2 connector (**X103**).

Serial interface

RS 232
COM1

The basic version of the Industrial PC has one serial interface COM1 (**X105**), using the type RS 232. The interface is brought to a 9 pin SUB-D plug connector.

USB interfaces

USB1 – USB4

The four USB interfaces (**X108 – X111**) are used to connect peripheral devices with USB 2.0 connections.

Network connection

LAN1

The RJ-45 connector (**X112**) allows the PC to be connected to a 10/100/1000BASE-T Local Area Network (LAN).

LAN2

The RJ-45 connector (**X113**) allows the PC to be connected to a 10/100/1000BASE-T Local Area Network (LAN).

Sound-On-Board

Sound

The Industrial PC has a on-board-interface with the following connectors: Line In (**X116**), Line Out (**X115**) and Microphone jack (**X114**).

DVI-I (Digital Visual Interface)

DVI-I out

The DVI connection (**X117**) is used for transferring the video signal. DVI-I standard is supported.

DVI-D (Digital Visual Interface)

DVI-D out

The DVI connection (**X118**) is used for transferring the video signal. DVI-D standard is supported.

DisplayPort

DisplayPort

The DisplayPort (**X119**) is used for transferring the video signal.

Additional plug-in cards (optional)

Type plate

There is a type plate on the top of the Industrial PC which provides information about the hardware configuration of the Industrial PC at the time it was supplied.

Installation Instructions

Please also refer to chapter [Foreword](#).

Transport and Unpacking

The specified storage conditions must be observed (see chapter [Technical data](#)).

Transport

Despite the robust design of the unit, the components are sensitive to strong vibrations and impacts. During transport, your Industrial PC should therefore be protected from excessive mechanical stress. Therefore, please use the original packaging.



Attention

Danger of damage to the unit

If the device is transported in cold weather or is exposed to extreme variations in temperature, make sure that moisture (condensation) does not form on or inside the device.

Prior to operation, the unit must be allowed to slowly adjust to room temperature. Should condensation occur, a delay time of approximately 12 hours must be allowed before the unit is switched on.

Unpacking



Proceed as follows to unpack the unit:

1. Remove packaging.
2. Do not discard the original packaging. Keep it for future relocation.
3. Check the delivery for completeness by comparing it with your order.
4. Please keep the associated paperwork. It contains important information for handling the unit.
5. Check the contents for visible shipping damage.
6. If you notice any shipping damage or inconsistencies between the contents and your order, you should notify Beckhoff Service.

Installation of the PC in the control cabinet

The C6640 and C6650 Industrial PCs are designed for mounting in control cabinets for machine and plant engineering applications.

The ambient conditions specified for operation must be observed (see chapter *Technical data*).

 <p>Note</p>	<p>Circulation of air</p> <p>When the unit is installed in an enclosure, adequate space for ventilation and for opening the PC must be provided.</p> <p>The clearance above and below the housing must be at least 5 cm in order to ensure adequate ventilation of the PC.</p>
 <p>Attention</p>	<p>Avoid extreme environmental conditions</p> <p>Extreme environmental conditions should be avoided as far as possible. Protect the PC from dust, moisture and heat.</p> <p>The ventilation slots of the PC must not be covered.</p>

Earthing measures



Earthing measures

Earthing connections dissipate interference from external power supply cables, signal cables or cables to peripheral equipment.

Establish a low-impedance connection from the earthing point on the PC housing to the central earthing point on the control cabinet wall, in which the computer is being installed.

Power Supply Connection with 100-240 V_{AC} power supply unit

Supplied mains power unit The Industrial PC is serially fitted with a 100-240 V_{AC}, 50-60 Hz full range power supply unit .


Current carrying capacity of the 100-240 V power supply unit

Output voltages from the 100-240 V power supply unit	Current loading maximum
+3.3 V	16 A
+5 V stand by	2 A
+5 V	25 A
-5 V	0.3 A
+12 V	13 A
-12 V	0.8 A

Mains Socket

A mains socket is located on top of the PC housing next to the main switch (C6640 only) in order to connect the power supply.

Mains socket and main switch (C6640 only) at the PC housing

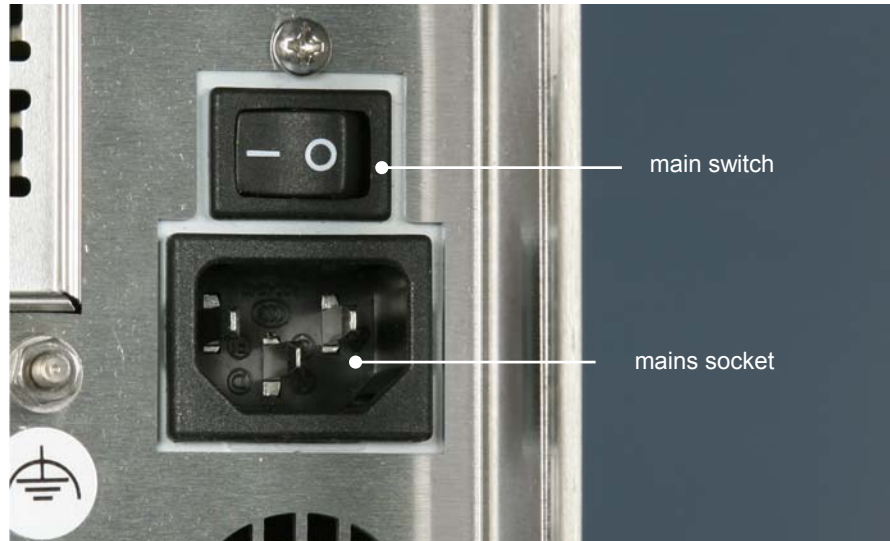

Power supply cords

Power cords Europe

In the area Europe you use the provided cable with inlet connector for non-heating apparatus to connect the Industrial-PC to the power supply.

Power cords USA / Canada



In the area USA / Canada the power supply cable must show the following specifications according to the supply voltage:

Listed, Detachable, maximum 4.5 m (14.76 ft.) long; rated minimum 125 V, 10 A, Type SJT or Type SVT; one end terminates in NEMA 5-15P/-20P grounding-type attachment plug, other end in appliance coupler
or

Listed, Detachable, maximum 4.5 m (14.76 ft.) long; rated minimum 250 V, 10 A, Type SJT or Type SVT; one end terminates in NEMA 6-15P/-20P grounding-type attachment plug, other end in appliance coupler.


Power Supply Connection with 24 V_{DC} power supply unit (optional)

The Industrial PC is optionally fitted with a 24 V_{DC} power supply unit .

 Note	<p>Uninterruptible power supply (UPS)</p> <p>When the Industrial PC is provided with a power supply unit with integrated UPS (order option) you can realize an uninterruptible power supply (UPS) using the battery pack C9900-U330.</p>
 WARNING	<p>Danger of Explosion!</p> <p>Danger of Explosion if using other battery packs!</p>

Beckhoff power supply technology

Schematic diagram of power supply unit wirings

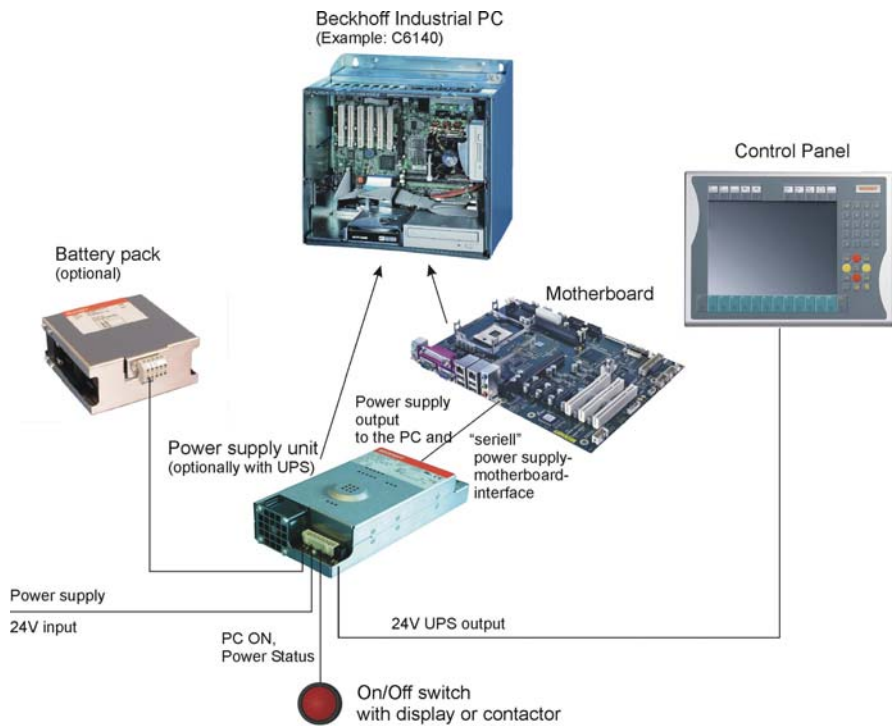

Innovative solution for shutting down Industrial PCs

Industrial PCs equipped with a UPS are in actual use frequently switched off by simply turning off the supply voltage. In this case the PC shuts down via the battery. However, over time this reduces the service life of the battery.

The new Beckhoff power supply technology approach addresses this problem and now offers the user the option of switching the PC off without the need for using the battery, thereby reducing the load on the battery.

In addition to the main switch this innovative solution uses an ON/OFF switch for the machine. Basically, the main switch remains switched on and provides the power supply for the PC during shutdown. Via the PC ON-input of the power supply the PC gets the command to shut down the operating system.

Once the PC has shut down, the PC power supply unit sets the Power Status-output (P-S) to 0, what indicates that the process is complete and that the main voltage can be switched off. This can be done manually via a

signal lamp connection or via a contactor. With this solution the main switch generally only has to be switched off if the control cabinet has to be opened. The battery will only be used in the event of a power failure.

In order to maintain a screen display for the Industrial PC in the event of a power failure, the power supply unit is equipped with a UPS output 27 V / 1.4 A for connecting a Control Panel with a display dimension up to 19 inches. This enables a power failure to be visualized and displayed to the user. Once the PC has shut down, the UPS output is switched off.

For a detailed functional description please refer to section [Connecting 24V DC Power Supply](#).

Electrical Data

Input voltage: 22 – 30 V DC
 Current consumption: 10 A (22 V)
 Output capacity: 150 W (max.)


Current carrying capacity of the 24 V power supply unit

Output voltages from the 24 V power supply unit	Current loading maximum
+ 5 V	14 A
- 5 V	0.3 A
+ 12 V	12 A
- 12 V	0.5 A
+ 3,3 V	12 A
5 V VSB	1.5 A

Pin assignment of the connectors

Two 5-pin plug connectors with CAGE CLAMP connection (see photo) are installed at the PC housing in order to connect the 24 V_{DC} power supply and the external components.


Plug connectors with CAGE CLAMP connection

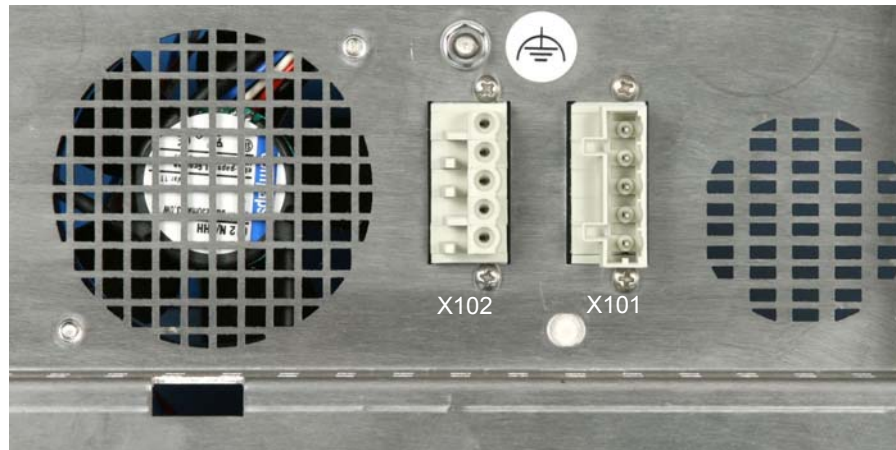

Pin assignment power supply

Pin assignment for connecting the power supply and the battery pack (optional)

X101

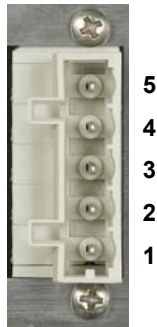


Pin	Function	
1	+	24V _{DC}
2	-	Power Supply
3	⊕	
4	+	Battery Pack (with USV)
5	-	

Pin assignment external wiring

Pin assignment for connecting PC-ON, Power-Status und UPS-Output

X102

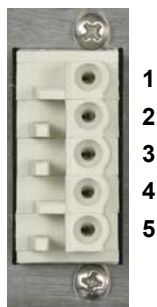

Pin	Function	
1	-	UPS-Output
2	+	
3	Power-Status	
4	PC-ON	
5	24V _{DC} power supply +pole	

Wiring in accordance with wiring diagram

Materials for assembly of the connector


Fitting the Cables

Fit the cables for the power supply of the Industrial PC, the connection of the battery pack as well as the connection of the power-switch in accordance with the wiring diagram, using the included material for assembling the connectors.

The example shows how to fit the 5-pole plug connector:



Female plug connector 5-pole

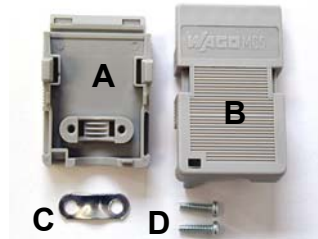

Strain relief housing

Fitting the connector to the cable

Applying the strain relief

Fitting the connector

The plug is fitted to the cable as follows:

1. Strip insulation from the cable ends (insulation length 8 – 9 mm).
2. Push the conductors into their mountings, simply by pushing them in as indicated on the pin assignment label.
3. Push the lower part (part **A**) of the strain relief housing onto the top of the female plug connector until it snaps into place.
4. Relieve the strain on the supply cable by fixing it in place with the cable clamp (part **C**) and fixing screws (part **D**).



Fix the upper part (part **B**) of the strain relief housing by snapping it onto the lower part.

Connecting 24V_{DC} Power Supply

The external wiring consists of the connection of the power supply, the battery pack (optional) and the connection of customized components for shutting down the PC.

Cable Cross Sections

Note cable cross sections, avoid voltage drop!

For the connection of the power supply, wiring with a cable-cross-section of 1.5 mm² must be used.

With bigger distances between voltage source and PC, you take the voltage drop as a function of the cable-cross-section as well as voltage fluctuations of your distribution voltage into account, so that is secured that the voltage doesn't fall under 22 V at the power supply.



Attention

Insert fuse

The power supply must be protected with maximum 16 A.

Configuration for shutting down the PC

The connections for shutting down the Industrial PCs are established via the **PC_ON** input and the **Power Status** output.

PC_ON and Power Status functions

- If the **PC_ON** input is connected to 24 V via a switch, the PC shuts down according to the rules. The **PC_ON** signal is inverted, i.e. the PC shuts down if the 24 V connection is live.
- If the **PC_ON** input is *NOT* connected by the user, the PC can be booted in the familiar way by connecting the supply voltage and shut down via the battery by switching off the supply voltage.



Attention

Service life of the rechargeable battery

This procedure significantly reduces the service life of the rechargeable battery and should therefore not be used.

- Once the PC has shut down, the **Power Status** output is switched from 24 V to 0 V. Via this output a signal lamp can be connected or a contactor for de-energizing the whole system. The maximum load for the **Power Status** output is 0.5 A and a suitable fuse should be provided.

UPS output

In order to maintain a screen display for the PC in the event of a power failure, the power supply unit is equipped with a **UPS output** for connecting a Control Panel. The maximum load for the output is 2.0 A.


UPS output function

- The 24 V DC connection at the UPS output is live even after a power failure. The maximum load is 1.4 A.
- Once the PC has been de-energized via the UPS software, the **UPS output** is switched to 0 V. Any connected panel is thus switched off, and total discharge of the rechargeable battery is prevented.

Wiring diagram

Wiring according to the wiring diagram (the circuit of PC_ON and Power-Status is symbolical):

Wiring diagram power supply and external switch

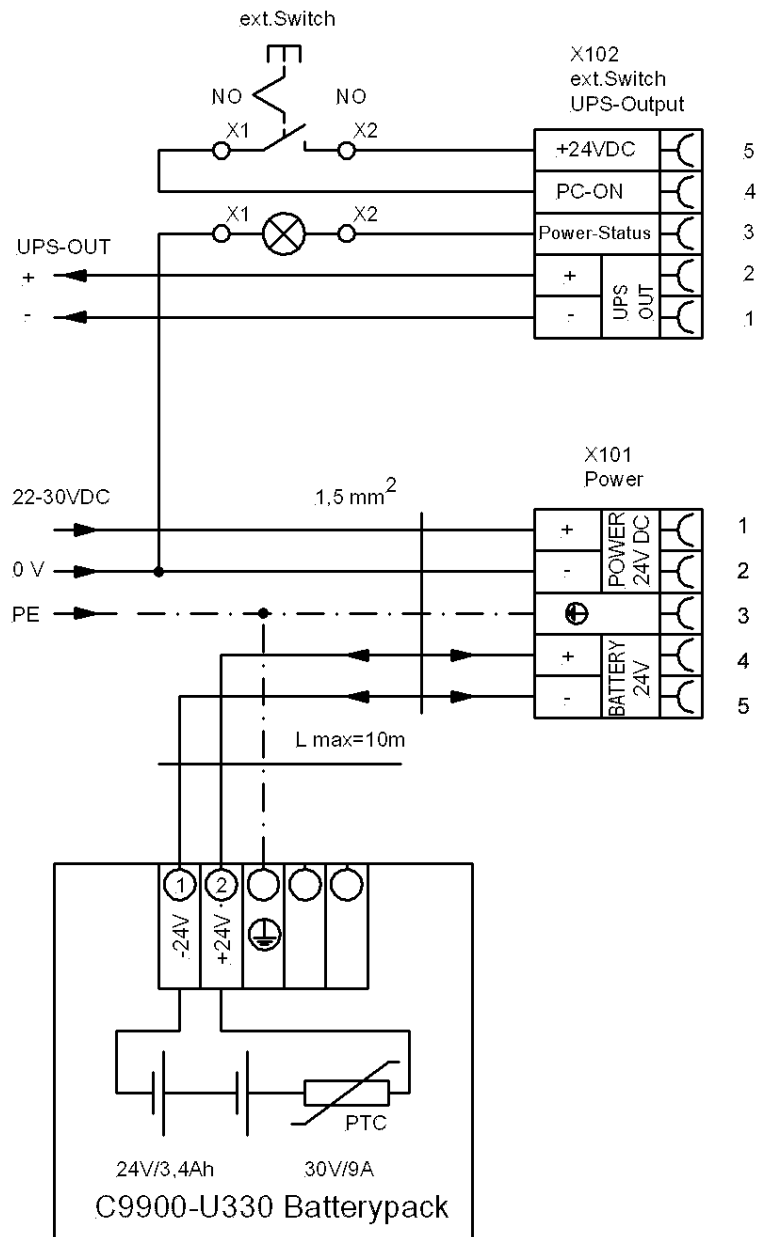


Note

Connection of the Battery Pack and UPS Output

Connection of the Battery Pack and UPS Output only in combination with integrated UPS (order option).

Connecting devices

 Attention	<p>Power supply plug</p> <p>The power supply plug must be withdrawn!</p> <p>Please read the documentation for the external devices prior to connecting them.</p> <p>During thunderstorms, plug connector must neither be inserted nor removed.</p> <p>When disconnecting a plug connector, always handle it at the plug. Do not pull the cable!</p>
-------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Connecting cables

The connections are located at the top of the Industrial PC and are documented in the product description chapter.

When connecting the cables to the Industrial PC, proceed according to the following sequence:

- Switch off all the devices that are to be connected.
- Disconnect all the devices that are to be connected from the power supply.
- Connect all the cables between the Industrial PC and to the devices that are to be connected.
- Connect all data transfer cables (if present) to the appropriate plug-in receptacles of the data/telecommunication networks.
- Reconnect all devices to the power supply.


Check voltage rating and connect.

When fitted with 100-240 V_{AC} 50/60 Hz power supply:

1. Check that the mains voltage is correct.
2. Insert the provided power supply cable into the Industrial PC's power supply socket. Then connect it to a power socket with a grounded earth connection.

When fitted with the (optional) 24 V_{DC} power supply unit:

1. Check that the external power supply is providing the correct voltage.
2. Insert the power supply cable that you have assembled (see the section on [Fitting the Cable](#)) into the Industrial PC's power supply socket. Then connect it to your external 24 V power supply.

 Attention	<p>Use same type of rechargeable battery</p> <p>If a 24 V UPS is installed, the same type of rechargeable battery must be used.</p>
---------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------

Operating Instructions

Please also refer to chapter [Foreword](#).

Switching the Industrial PC on and off



Switch on

- The Industrial PC C6640 is switched on via the main switch beside the mains socket (see chapter [Power Supply Connection with 24 VDC power supply unit](#)).
- The Industrial PC C6650 and the IPCs with 24 V_{DC} power supply equipment (optional) does not have their own mains switch. The Industrial PC will start when the equipment is switched on, or when it is connected to the power supply.

Shutting down and switching off

When the plant is switched off, or when it is disconnected from its power supply, the Industrial PC will be switched off.

Control software such as is typically used on Industrial PCs permits various users to be given different rights. A user who may not close software may also not switch the Industrial PC off, since data can be lost from the hard disk by switching off while software is running.

 <p>Attention</p>	<p>First shut down, then switch off the PC</p> <p>If the Industrial PC is switched off as the software is writing a file to the hard disk, the file will be destroyed. Control software typically writes something to the hard disk every few seconds, so that the probability of causing damage by switching off while the software is running is very high.</p>
 <p>Attention</p>	<p>Switch off power supply</p> <p>When you have shut down the Industrial PC, you have to switch off power supply for at least 10 seconds before rebooting the system. After resetting power supply the PC will start booting automatically.</p>

First switching on and driver installation


When you switch on the Industrial PC for the first time, the pre-installed operating system (optional) will be started. In this case, all the required drivers for any additional, optional hardware components ordered with the PC will already have been installed.

If the PC was ordered without operating system, you have to install the operating system and the driver software for any auxiliary hardware yourself. Please follow the instructions in the documentation for the operating system and the additional devices.

Servicing and Maintenance

Please also refer to chapter *Foreword*.

Cleaning the Industrial PC

 Attention	<p>Disconnect from power supply</p> <p>Switch off the Industrial PC and all connected devices, and disconnect the Industrial PC from the power supply.</p>
-------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------


The Industrial PC can be cleaned with a soft, damp cloth. Do not use any aggressive cleaning materials, thinners, scouring material or hard objects that could cause scratches.

Servicing

The Industrial PC requires no maintenance.


Replacing the battery on the motherboard

A used battery on the motherboard has to be replaced.

 WARNING	<p>Danger of Explosion!</p> <p>Replace battery only with the identical type or an alternative type recommended by the manufacturer. Notice correct polarity!</p>
------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------

The used battery must be disposed of in accordance with national electronics scrap regulations.

Replacing the fan

 Note	<p>Remove the housing cover</p> <p>For exchanging the fan cartridge, it can be necessary to remove the housing cover.</p>
----------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------

Opening the fan cartridge

After loosening the knurled screw (1) the fan cartridge can be folded out in direction of the arrow.



Removing the fan

Disconnect the supply cable from the motherboard. Therefore it can be necessary to remove the housing cover.

After exchanging the fan cartridge the reassembly takes place in reverse order.

**Emergency procedures**

In case of fire, the Industrial PC should be extinguished with powder or nitrogen.

Shutting down**Disposal**

Dismantling the Industrial PC

The device must be fully dismantled in order to dispose of it. The housing can be sent for metal recycling.

Observe national electronics scrap regulations

Electronic parts such as disk drives and circuit boards must be disposed of in accordance with national electronics scrap regulations.

UPS Software Components (optional)

Installing the UPS driver software

For operating the power supply unit as a UPS, the UPS driver software and the associated UPS driver must be installed on the Industrial PC.

On delivery of the Beckhoff Industrial PC with operating system the software is already installed. Should the software not be installed on your PC, the drivers can be installed from the driver CD provided.

Installation on the PC

Installation

To install the UPS driver software, execute file **Beckhoff_UPS_vx.xx.xx.exe** from the subdirectory of **UPS\...** from the CD provided on the Industrial PC (Driver-archive for the Industrial-PC, C9900-S700-xxxx).

The program is self-extracting and will guide the user through the installation routine.

Help files

Beckhoff Information System

The driver software comes with a detailed help function. The help files can be called up either directly from the configuration register by clicking the Help button, or under via *Start > Programs > Beckhoff > UPS software components*.

Troubleshooting

Please also refer to chapter [Foreword](#).

Fault correction

Fault	Cause	Procedure
Nothing happens after the Industrial PC has been switched on	No power supply to the Industrial PC	Check power supply cable
	Other cause	Call Beckhoff Service
The Industrial PC does not boot fully	Setup settings are incorrect	Check the setup settings
	Other cause	Call Beckhoff Service
Computer boots, software starts, but control does not operate correctly	Cause of the fault is either in the software or in parts of the plant outside the Industrial PC	Call the manufacturer of the machine or the software
Memory device access error	Faulty device	Call Beckhoff Service
The Industrial PC functions only partially or only part of the time, e.g. no or dark picture, but disk drive responds when switching on	Defective components in the Industrial PC	Call Beckhoff Service

Beckhoff Support and Service

Beckhoff and their partners around the world offer comprehensive support and service, guaranteeing fast and competent assistance with all questions related to Beckhoff products and system solutions.

Beckhoff branches and partner companies

Please contact your Beckhoff branch office or partner company for [local support and service](#) on Beckhoff products!

The contact addresses for your country can be found in the list of Beckhoff branches and partner companies: www.beckhoff.com

You will also find further [documentation](#) for Beckhoff components there.

Beckhoff company headquarters

Beckhoff Automation GmbH & Co.KG
Huelshorstweg 20
33415 Verl
Germany

Phone: +49(0)5246/963-0
Fax: +49(0)5246/963-198
e-mail: info@beckhoff.com
Web: <http://www.beckhoff.de/>

Beckhoff Support

Beckhoff offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with wide-ranging services:

- worldwide support
- design, programming and commissioning of complex automation systems
- training program for Beckhoff system components

Hotline: +49(0)5246/963-157
Fax: +49(0)5246/963-9157
e-mail: support@beckhoff.com

Beckhoff Service

The Beckhoff service center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service


Hotline: +49(0)5246/963-460
Fax: +49(0)5246/963-479
e-mail: mailto:service@beckhoff.com


Quote the project number If servicing is required, please quote the **project number** of your product.

Assembly dimensions


The following pages show diagrams of the Industrial PC, with dimensions in mm.

C6640, Configuration with 100-240 V_{AC} Power Supply


 <p>Attention</p>	<p>Assembly orientation</p> <p>The assembly of the unit must take place with the orientation diagrammed here.</p>
-----------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------

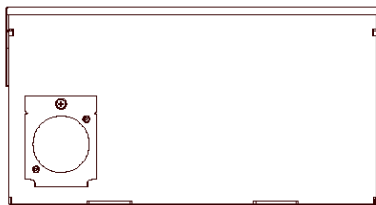


bottom view

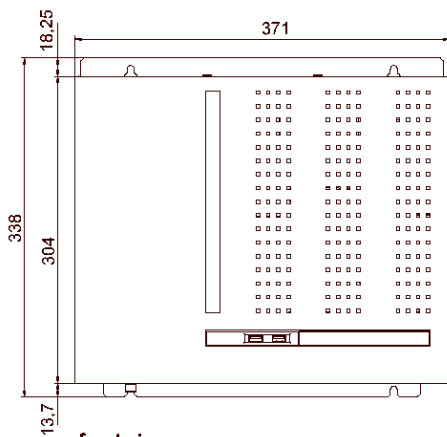


front view

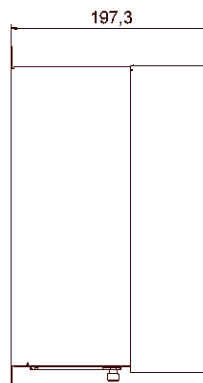

left view

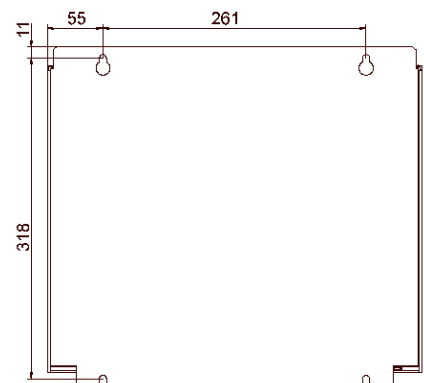


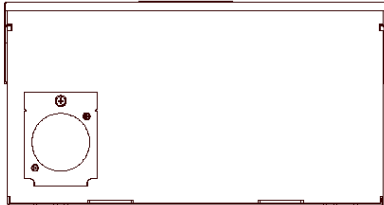
rear view

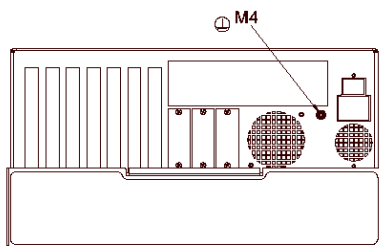


top view

C6640, Configuration with 24 V_{DC}-Power Supply (optional)


 Attention	<p>Assembly orientation</p> <p>The assembly of the unit must take place with the orientation diagrammed here.</p>
-------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------




bottom view

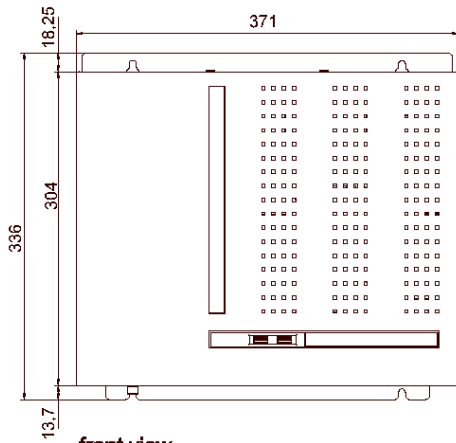


front view

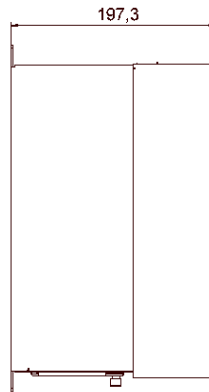

left view

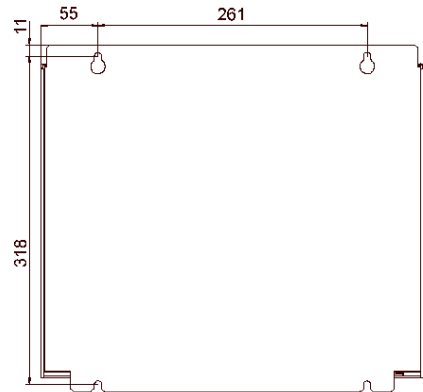


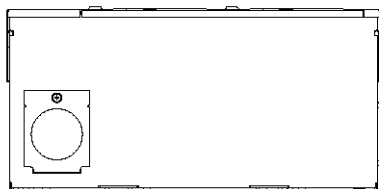
rear view

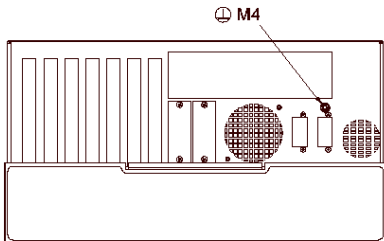


top view

C6650, Configuration with 100-240 V_{AC} Power Supply


 Attention	<p>Assembly orientation</p> <p>The assembly of the unit must take place with the orientation diagrammed here.</p>
-------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------




bottom view

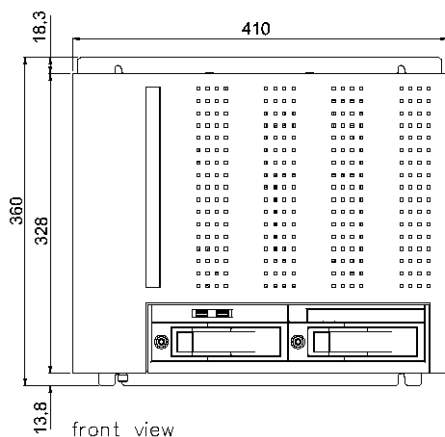


front view

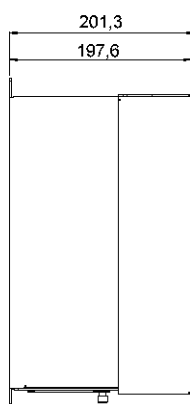

left view

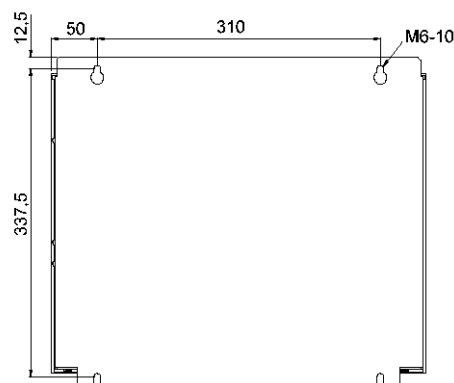


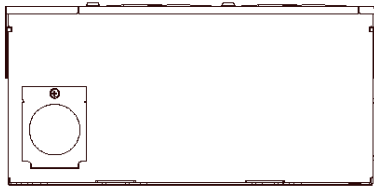
rear view

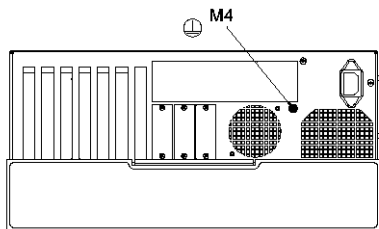


top view

C6650, Configuration with 24 V_{DC}-Power Supply (optional)


 Attention	<p>Assembly orientation</p> <p>The assembly of the unit must take place with the orientation diagrammed here.</p>
-------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------




bottom view

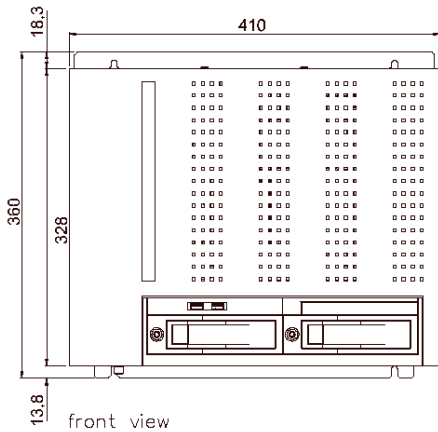


front view

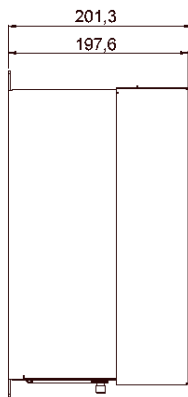

left view

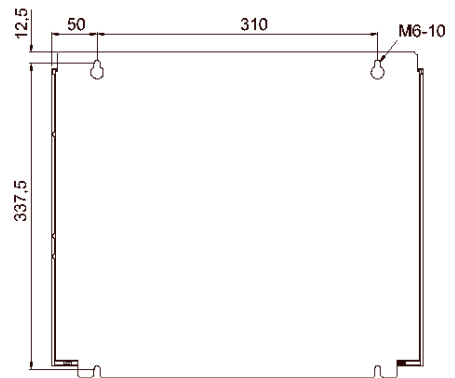

rear view

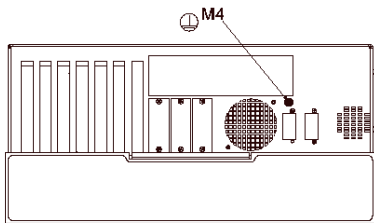

top view

Appendix

Technical data

Industrial PC C6640, C6650	Dimensions (W x H x D):	see chapter Assembly dimensions
	Weight:	C6640: 11 kg (basic configuration) C6650: 12 kg (basic configuration)
Do not use the PC in areas of explosive hazard	The Industrial PC may not be used in areas of explosive hazard.	
	The following conditions must be observed during operation:	
Environmental conditions	Ambient temperature:	0 to 55°C
	Atmospheric humidity:	Maximum 95%, non-condensing
Shock resistance	Sinusoidal vibration:	
	(EN 60068-2-6)	10 to 58 Hz: 0.035 mm 58 to 500 Hz: 0.5 G (~ 5 m/ s ²)
	During reading of CD-ROM:	10 to 58 Hz: 0.019 mm 58 to 500 Hz: 0.25 G (~ 2.5 m/ s ²)
	Impact:	
	(EN 60068-2-27)	5 G (~ 50 m/ s ²), duration: 30 ms
	During reading of CD-ROM:	5 G (~ 50 m/ s ²), duration: 11 ms
Protection class	Protection class:	IP20
Power supply 100-240 V _{AC} power pack	Supply voltage:	100-240 V _{AC} 50-60 Hz
	Power consumption:	C6640: 65 W (for the basic version) C6650: 90 W (for the basic version)
Power supply 24 V _{DC} power pack (optional)	Supply voltage:	22 – 30 V _{DC}
	Power consumption:	C6640: 65 W (for the basic version) C6650: 90 W (for the basic version)
Electromagnetic Compatibility (EMC)	Interference resistance:	according to EN 61000-6-2
	Emitted resistance:	according to EN 61000-6-4
Transport and storage	The same values for atmospheric humidity and shock resistance are to be observed during transport and storage as in operation. The shock resistance during transport can be improved by means of suitably packing the Industrial PC. The ambient temperature during storage and transport must be between -20°C and +65°C.	

Approvals

FCC: Federal Communications Commission

Radio Frequency Interference Statement

FCC Approval for USA

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC: Canadian Notice

CC Approval for Canada

This equipment does not exceed the Class A limits for radiated emissions as described in the Radio Interference Regulations of the Canadian Department of Communications.