

Manual | EN

CP27xx

Panel-PC



Table of contents

1	Notes on the documentation.....	5
2	For your safety	6
2.1	Signal words.....	6
2.2	Intended use	6
2.3	Fundamental safety instructions	8
2.4	Operator's obligation to exercise diligence.....	8
2.5	Notes on information security.....	9
3	Product overview	10
3.1	Structure.....	12
3.2	Interface description	14
3.2.1	DVI	14
3.2.2	USB.....	15
3.2.3	Ethernet RJ45	16
3.2.4	Power supply.....	17
3.3	Optional interfaces	18
3.4	Name plate	18
4	Commissioning	21
4.1	Transport and unpacking	22
4.2	Control cabinet installation	23
4.3	Connecting the Panel PC.....	25
4.3.1	Mounting power supply cable.....	26
4.3.2	Grounding the Panel PC	28
4.3.3	Connecting cables and power supply	29
4.4	Switching the Panel PC on and off.....	32
5	Beckhoff Device Manager	34
6	Decommissioning	37
6.1	Disconnecting the power supply and cables	37
6.2	Disassembly and disposal.....	38
7	Maintenance	39
7.1	Cleaning	39
7.2	Maintenance.....	40
7.2.1	Replacing the battery	43
7.2.2	Replacing the storage media	44
7.2.3	Exchange gasket.....	46
8	Troubleshooting	47
9	Technical data	48
10	Appendix.....	49
10.1	Service and support	49
10.2	Approvals	50

1 Notes on the documentation

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards.

The following instructions and explanations must be followed during installation and commissioning of the components. The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

Disclaimer

The documentation has been prepared with care. The products described are, however, constantly under development. For that reason the documentation is not in every case checked for consistency with performance data, standards or other characteristics. In the event that it contains technical or editorial errors, we retain the right to make alterations at any time and without warning. No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams, and descriptions in this documentation. All illustrations shown are only examples. The configurations depicted may deviate from the standard.

Trademarks

Beckhoff®, TwinCAT®, TwinCAT/BSD®, TC/BSD®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, Safety over EtherCAT®, TwinSAFE®, XFC®, XTS® and XPlanar® are registered and licensed trademarks of Beckhoff Automation GmbH.

Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.

Patents

The EtherCAT Technology is covered, including but not limited to the following patent applications and patents: EP1590927, EP1789857, EP1456722, EP2137893, DE102015105702 and similar applications and registrations in several other countries.

Copyright

© Beckhoff Automation GmbH & Co. KG. Publication of this document on websites other than ours is prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

Delivery state

All the components are supplied in particular hardware and software configurations appropriate for the application. Changes to the hardware or software configuration are permitted, provided they are within the specified limits for power consumption and power loss (please refer to the respective data sheet).

Currentness

Please check whether you are using the current and valid version of this document. The current version is always available for download from the Beckhoff website. In case of doubt, contact Technical Support.

Delivery conditions

In addition, the general delivery conditions of the company Beckhoff Automation GmbH & Co. KG apply.

2 For your safety

The signal words and their meanings are explained in the chapter on safety. They contain fundamental safety instructions that are essential for the avoidance of personal injuries and damage to property.

Exclusion of liability

Beckhoff shall not be liable in the event of non-compliance with this documentation and thus the use of the devices outside the documented operating conditions.

2.1 Signal words

The signal words used in the documentation are classified below.

Warning of personal injuries

 DANGER
Hazard with high risk of death or serious injury.
 WARNING
Hazard with medium risk of death or serious injury.
 CAUTION
There is a low-risk hazard that can result in minor injury.

Warning of property and environmental damage

NOTICE
There is a possibility of damage to the environment, equipment or data.

2.2 Intended use

The the Industrial PC is intended for use as a control system for automation, visualization and communication in machine and system engineering.

The control panel is designed for industrial application in machine and system engineering. It serves as the operating unit of the machine or plant.

The DVI/USB extension technology integrated in the -0000 Control Panel enables the panel to be located up to 50 m away from the PC.

The CP-Link 4 technology integrated in the -0010 Control Panel enables the panel to be located up to 100 m away from the PC via a CP-Link 4 cable with optionally integrated or separate 24 V power supply, depending on the transmitter module.

The DVI/USB extension technology integrated in the CP3921-150x-0000 Control Panel enables the panel to be located up to 50 m away from the PC.

The CP-Link 4 technology integrated in the CP3921-150x-0010 Control Panel enables the panel to be located up to 100 m away from the PC via a CP-Link 4 cable. The 24 V power supply must be provided by a separate cable.

The device has been developed for an IP20 working environment. This involves finger protection and protection against solid foreign objects up to 12.5 mm. There is no protection against water. Operation of the devices in wet and dusty environments is not permitted.

The front of the device is designed for an IP50 working environment. There is complete protection against contact and dust in harmful quantities. It is not protected against water.

The rear of the device is designed for an IP20 working environment. It is protected against the penetration of fingers and solid foreign bodies of 12.5 mm in diameter or larger in size. It is not protected against water. Operation of the device in wet and dusty environments is not permitted. The specified limits for technical data must be adhered to.

The front of the panel PC is designed for an IP54 working environment. There is complete protection against contact and against dust in harmful quantities, as well as protection against splash water on all sides.

The rear side is designed for a working environment that meets the IP20 protection rating. This involves finger protection and protection against solid foreign objects up to 12.5 mm. There is no protection against water. Operation of the device in wet and dusty environments is not permitted. The specified limits for technical data must be adhered to.

The front of the panel PC is designed for an IP65 working environment. It offers full protection against contact and against dust, as well as protection against water jets (nozzle) from any angle.

The rear side is designed for a working environment that meets the IP20 protection rating. It is protected against the penetration of fingers and solid foreign bodies of 12.5 mm in diameter or larger in size. It is not protected against water. Operation of the device in wet and dusty environments is not permitted. The specified limits for technical data must be adhered to.

The device has been developed for an IP65 working environment. It offers full protection against contact (dust-tight) and against water jets (nozzle) from any angle.

The specified limits for technical data must be adhered to.

The device can be used within the documented operating conditions.

Potentially hazardous area

For the operation of the industrial PC in hazardous area Zone 2, the device adaptation by the is required.

The industrial PC is only suitable for the following hazardous areas:

- For Zone 2 where gas is present as a combustible material. Zone 2 means that the environment is usually either not explosive or only for a short period of time.

The industrial PC must be installed in a housing with an IP54 protection rating for gas according to EN 60079-7 or IEC 60079-7.

Improper use

Do not use the device outside the documented operating conditions.

The industrial PC is not suitable for use in the following environments:

- The industrial PC may only be used in Zone 2 and only with a suitable housing.
- The industrial PC is not suitable for use in aggressive environments, for example with aggressive gases or chemicals.
- The industrial PC is not suitable for residential areas. Relevant standards regarding interference emissions must be observed. The device must be installed in a housing or a control cabinet with suitable shielding.

2.3 Fundamental safety instructions

The following safety instructions must be observed when handling the the Industrial PC.

Application conditions

- Do not use the device under extreme environmental conditions.
- Only use the device in hazardous areas if it is explicitly designed for this purpose.
- Do not carry out any work on the device while it is live. Always switch off the supply voltage for the device before mounting it, replacing device components or rectifying malfunctions. This does not apply to the replacement of hard disks in a RAID configuration.
- Do not carry out any work on the device while it is live. Always switch off the supply voltage for the device before mounting it, replacing device components or rectifying malfunctions.
- Never plug or unplug connectors during thunderstorms. There is a risk of electric shock.
- Ensure that the device has a protective and functional earth connection.
- Observe hot surfaces when using the device. There is a risk of burns.

Damage to property, loss of data and impairment of functions

- If you change the hardware and software configurations, you must keep within the specified limits of power consumption and power loss (please refer to the respective data sheet).
- Ensure that only trained specialists with a control and automation engineering background, operate the device. Use by unauthorized persons can lead to damage to property and loss of data.
- In the case of a 24 V DC power supply unit, fuse the power supply line according to its cross-section to protect the supply line in the event of a short circuit.
- In case of fire, extinguish the device with powder or nitrogen.

2.4 Operator's obligation to exercise diligence

The operator must ensure that

- the products are used only for their intended purpose (see Chapter 2.2 [Intended use](#) [► 6]).
- the products are only operated in sound condition and in working order.
- the products are operated only by suitably qualified and authorized personnel.
- the personnel is instructed regularly about relevant occupational safety and environmental protection aspects, and is familiar with the operating instructions and in particular the safety instructions contained herein.
- the operating instructions are in good condition and complete, and always available for reference at the location where the products are used.

2.5 Notes on information security

The products of Beckhoff Automation GmbH & Co. KG (Beckhoff), insofar as they can be accessed online, are equipped with security functions that support the secure operation of plants, systems, machines and networks. Despite the security functions, the creation, implementation and constant updating of a holistic security concept for the operation are necessary to protect the respective plant, system, machine and networks against cyber threats. The products sold by Beckhoff are only part of the overall security concept. The customer is responsible for preventing unauthorized access by third parties to its equipment, systems, machines and networks. The latter should be connected to the corporate network or the Internet only if appropriate protective measures have been set up.

In addition, the recommendations from Beckhoff regarding appropriate protective measures should be observed. Further information regarding information security and industrial security can be found in our <https://www.beckhoff.com/secguide>.

Beckhoff products and solutions undergo continuous further development. This also applies to security functions. In light of this continuous further development, Beckhoff expressly recommends that the products are kept up to date at all times and that updates are installed for the products once they have been made available. Using outdated or unsupported product versions can increase the risk of cyber threats.

To stay informed about information security for Beckhoff products, subscribe to the RSS feed at <https://www.beckhoff.com/secinfo>.

3 Product overview

The CP27xx built-in Panel PC is designed for installation in the front of a control cabinet and represents a powerful platform for use in machine and system engineering.

Thanks to its processors, you can use the panel PC for the following applications, among others:

- diverse automation and visualization tasks
- wide range of IoT tasks with data preprocessing
- HMI applications
- axis control
- short cycle times
- high-volume data handling
- other PC applications

The panel PC is available in the following eight display sizes, with corresponding resolutions:

- 12-inch (800 x 600)
- 12.1-inch (1280 x 800)
- 15-inch (1024 x 768)
- 15.6-inch (1366 x 768)
- 18.5-inch (1366 x 768)
- 19-inch (1280 x 1024)
- 21.5-inch (1920 x 1080)
- 24-inch (1920 x 1080)

The device has a multi-finger touch screen and an aluminum housing with glass front with IP65 on the front side and IP20 on the rear side.

In its basic configuration, the CP27xx includes the following features:

- 3½-inch motherboard
- Intel® processor
- CFast
- 2 slots for CFast
- 24 V DC power supply unit

Push button extension

The following panel PCs are optionally available ex factory with a corresponding C9900-G0xx push button extension:

- CP2712 (C9900-G002)
- CP2713 (C9900-G009)
- CP2715 (C9900-G003)
- CP2716 (C9900-G004)
- CP2718 (C9900-G005)
- CP2719 (C9900-G006)
- CP2721 (C9900-G008)
- CP2724 (C9900-G007)

For explanations of the push button extension and the functions, refer to the [C9900-G0xx](#) manual. Figure 1 shows an example of a panel PC without (1) and with (2) push button extension.

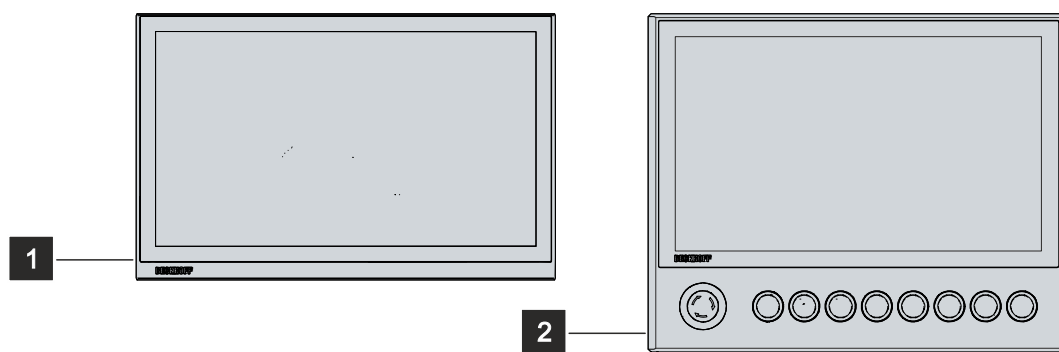


Fig. 1: CP27xx_without and with push button extension

3.1 Structure

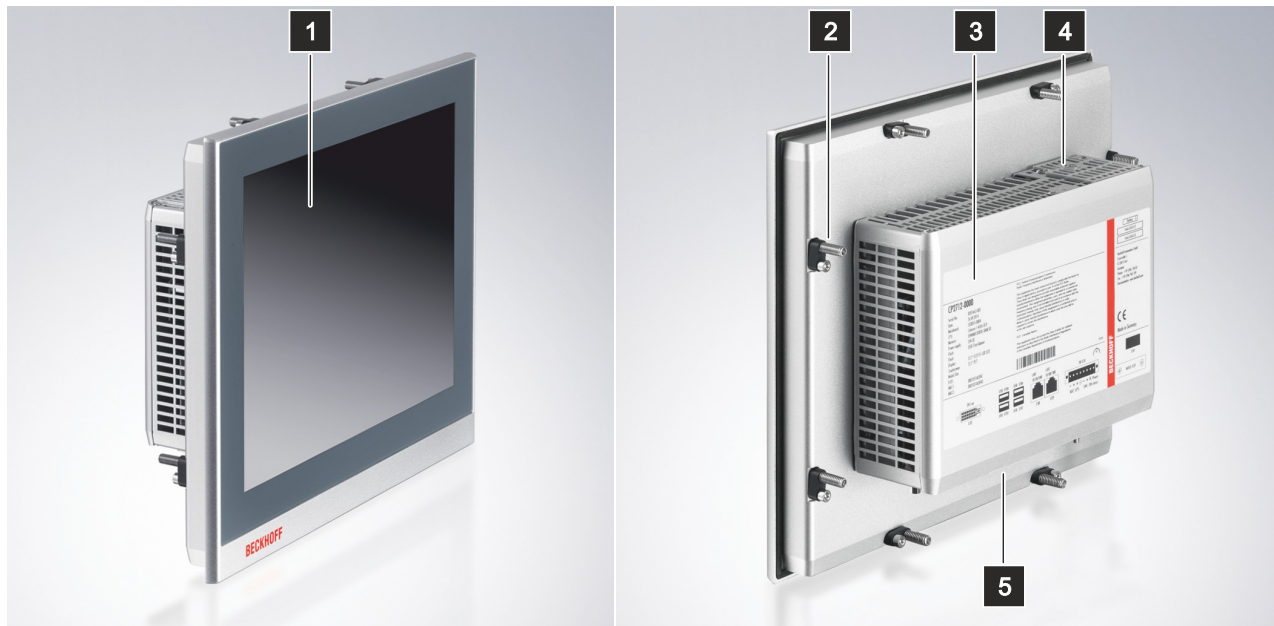


Fig. 2: CP27xx_structure

Table 1: Legend CP27xx structure

No.	Component	Description
1	Display and touch screen glass	Operation of the panel PC
2	Clamping lever	Mounting the panel PC in the panel of the control cabinet
3	Name plate	Information on the equipment of the panel PC
4	Access to battery and storage media	Battery and storage media behind cover
5	Access to interfaces	Interfaces on the underside

Optionally, you can order the following devices with a stainless steel front instead of an aluminum front. For this you need to order the device itself and the ordering option below:

- CP2713 (ordering option stainless steel front: C9900-F942)
- CP2716 (ordering option stainless steel front: C9900-F945)
- CP2718 (ordering option stainless steel front: C9900-F946)
- CP2721 (ordering option stainless steel front: C9900-F948)

The following figure shows the structure of a stainless steel device.



Fig. 3: CP27xx_structure stainless steel device

Table 2: Legend structure CP27xx stainless steel device

No.	Component	Description
1	Clamping lever	Mounting the panel PC in the panel of the control cabinet
2	Silicone seal	Protection of the connection section from moisture
3	Name plate	Information on the equipment of the panel PC
4	Access to battery and storage media	Battery and storage media behind cover
5	Access to interfaces	Interfaces on the underside
6	Display and touch screen glass	Operation of the panel PC
7	Stainless steel front	Use in environments with higher hygiene requirements

3.2 Interface description

In the basic configuration, the panel PC includes the following interfaces:

- DVI (X103)
- USB (X104 - X107)
- Ethernet RJ45 (X108, X109)
- Power supply (X110)

The interfaces are located on the rear side of the panel PC at the bottom in the connection section.

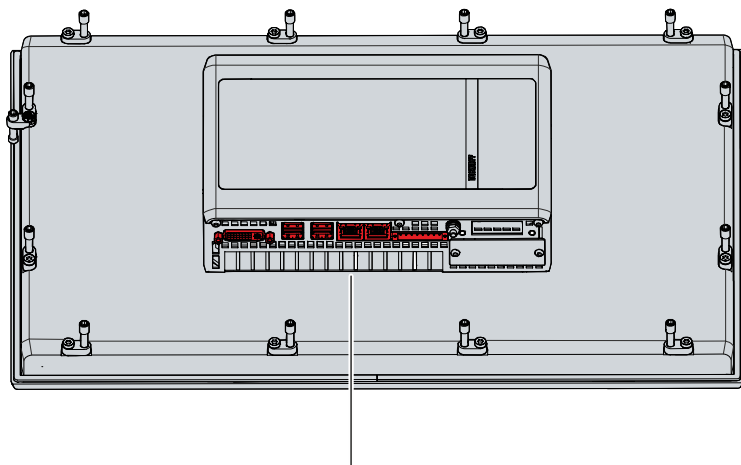


Fig. 4: CP27xx_connection section

3.2.1 DVI

The panel PC is equipped with a DVI connector (X103), to which a DVI-capable monitor can be connected. Only digital signals are transmitted.

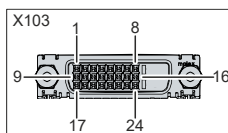


Fig. 5: CP27xx_DVI port pin numbering

Table 3: DVI interface pin assignment

Pin	Connection	Pin	Connection	Pin	Connection
1	TMDS Data 2 +	9	TMDS Data 1 -	17	TMDS Data 0 -
2	TMDS Data 2 +	10	TMDS Data 1 +	18	TMDS Data 0 +
3	TMDS Data 2/4 Shield	11	TMDS Data 1/3 Shield	19	TMDS Data 0/5 Shield
4	not connected	12	not connected	20	not connected
5	not connected	13	not connected	21	not connected
6	DDC Clock	14	+ 5 V Power	22	TMDS Clock Shield
7	DDC Data	15	Ground (+ 5 V, Analog H/V Sync)	23	TMDS Clock +
8	Analog Vertical Sync	16	Hot Plug Detect	24	TMDS Clock -

3.2.2 USB

The panel PC has four USB interfaces (X104, X107). They are used to connect peripheral devices with USB interfaces.

Depending on the device generation, the supported USB standard of the four interfaces varies. The following table shows the interface assignment based on the device generation:

Table 4: USB interfaces based on device generation

Device generation	USB interfaces
CP27xx-0010	4x USB-2.0 (X104-X107)
CP27xx-0020	2x USB-3.0 (X104, X105) 2x USB-2.0 (X106, X107)

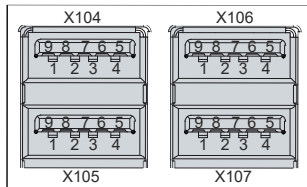


Fig. 6: CP27xx_USB interface pin numbering

Table 5: USB interface pin assignment

Pin	Assignment
1	Vbus
2	D -
3	D +
4	GND
5	StdA_SSRX -
6	StdA_SSRX +
7	GND_DRAIN
8	StdA_SSTX -
9	StdA_SSTX +

For USB 2.0, only pins 1 to 4 are relevant.

3.2.3 Ethernet RJ45

The panel PC has two Gigabit LAN ports (X108, X109). The 100Base-T and 1000Base-T Ethernet standards enable the connection of corresponding network components and data rates of 100/1000 Mbit/s. The required speed is selected automatically.

The RJ45 connection technology with twisted-pair cables is used. The maximum length of the cable connection is 100 m.

If you use the Ethernet ports with EtherCAT or for Real-Time Ethernet applications, you have to regard the following distinction:

The Ethernet port (X109, LAN2) connected via PCIe with the i210 controller is generally suitable for cycle times ≤ 1 ms and for distributed clock applications with EtherCAT.

The Ethernet port (X108, LAN1) integrated in the chipset with the i219 controller is generally suitable for EtherCAT and Real-Time Ethernet applications with cycle times > 1 ms (without distributed clocks).

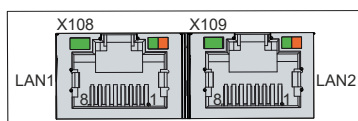


Fig. 7: CP27xx_Ethernet interface pin numbering

Table 6: Ethernet interface pin assignment

Pin	Signal	Description
1	T2 +	Pair 2
2	T2 -	
3	T3 +	Pair 3
4	T1 +	Pair 1
5	T1 -	
6	T3 -	Pair 3
7	T4 -	Pair 4
8	T4 -	

The LEDs of the LAN interfaces indicate the activity and the speed of the data transmission (Mbit/s). The LED on the left in the figure indicates whether the interface is connected to a network. If this is the case, the LED lights up green. The LED flashes when data transmission is in progress on the interface.

The LED on the right in the figure indicates the speed of the data transmission. If the speed is 100 Mbit/s the LED is orange, at 1000 Mbit/s it is green.

3.2.4 Power supply

The panel PC is supplied with a nominal voltage of 24 V. The power supply and the protective earth of the device are connected via the 8-pin voltage socket (X110). The main supply voltage is applied between PIN 5 (0 V) and PIN 6 (24 V) of the socket. If the panel PC is equipped with an integrated uninterruptible power supply (UPS), an external battery pack can additionally be connected to PIN 1 and PIN 2. Beckhoff offers the C9900-U330 and C9900-U332 battery packs for this purpose.

 



Fig. 8: CP27xx_voltage socket pin numbering

Table 7: Voltage socket pin assignment

Pin	Signal	Description
1	- BAT	Negative pole of the battery pack
2	+ BAT	Positive pole of the battery pack
3	27 V UPS	27 V UPS output 2.5 A, negative is pin 1 "- BAT"
4		Protective earth
5	-	24 V supply voltage, negative pole
6	+ 24 V	24 V supply voltage, positive pole
7	PC-ON	Input PC-ON
8	P-S	Power Status output, minus is the negative pole of the supply voltage

The plug for the power supply is specified for 16 A and can accommodate wire cross-sections of up to 1.5 mm². For long supply lines, use 1.5 mm² cables to achieve a low voltage drop on the supply line. At least 22 V should be present at the voltage connector of the panel PC so that the PC remains switched on in the event of voltage fluctuations. The plug is included in the delivery. You can obtain a replacement plug from your Beckhoff Sales using the following ordering option:

- C9900-P926: power supply connector for CP27xx Panel PC

3.3 Optional interfaces

Various interface options are available to expand your panel PC with additional interfaces beyond the basic configuration. The following table provides information about the available interfaces depending on the device generation:

Table 8: CP27xx interface options

Ordering option	Description
C9900-E268 ¹⁾	1-port USB interface in the front of a CP2xxx without push button extension, USB-A socket IP 65
C9900-E233	1 RS232 serial interface led out in the connection section of the CP2xxx
C9900-E234	2 USB ports of the motherboard led out in the connection section of the CP2xxx
C9900-E240	Serial interface COM2, RS232, electrical isolation, overvoltage protection, D-sub, 9-pin
C9900-E241	Serial interface COM2 RS485, electrical isolation, overvoltage protection, D-sub, 9-pin. Configuration as endpoint without echo: Echo off, Auto send on, Always send off, Auto receive on, Always receive off, Termination on.
C9900-E242	Serial interface COM2 RS422, electrical isolation, overvoltage protection, D-sub, 9-pin. Configuration as full duplex endpoint: Echo on, Auto send off, Always send on, Auto receive off, Always receive on, Termination on

¹⁾This option is not available in combination with stainless steel front.

PCIe modules

In addition, you can expand the panel PC with PCIe modules by ordering the device with PCIe module slots:

Table 9: CP27xx PCIe module slots

Ordering option	Description	Device generation
C9900-B518	1 PCIe module slot, integrated in the CP27xx, for installation of Beckhoff PCIe modules, instead of a connector bracket for leading out interfaces	CP27xx-0010 CP27xx-0020

The PCIe module is the Beckhoff definition of a small plug-in card format with a PCIe-x1 bus interface. For ordering options, please contact your Beckhoff Sales department. If you have ordered your device without PCIe module slots and subsequently want to install PCIe modules, you must first send your device to Beckhoff Service for the conversion (see chapter 10.1 Service and Support).

If you have ordered the device without an already installed module, you have to replace the blank cover of the module slot with the ordered PCIe module on your own. To do this, loosen the two M3x4 screws of the covers, insert the modules and screw the M3x4 screws back in place.

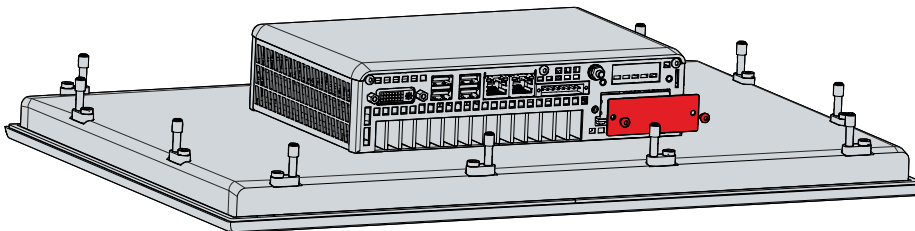


Fig. 9: CP27xx_installation PCIe module

Please refer to the current price list for the available PCIe modules.

3.4 Name plate

The name plate provides information about the panel PC equipment. The name plate shown here serves only as an example.

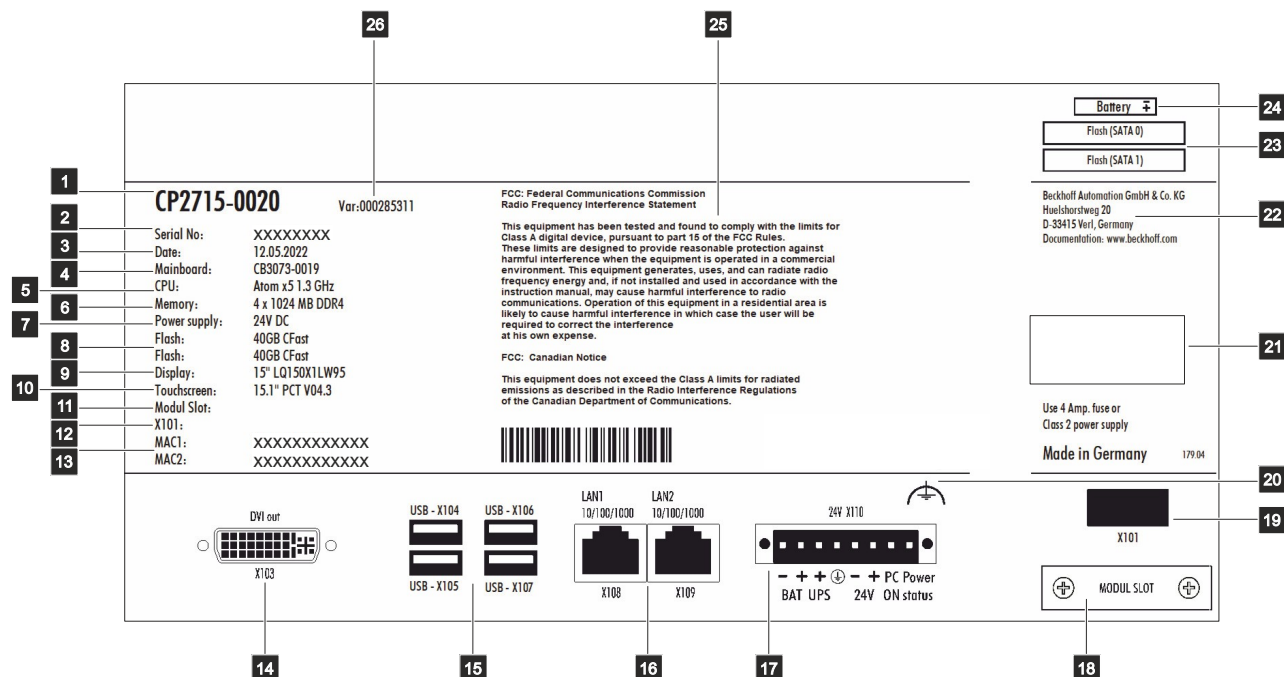



Fig. 10: CP27xx_name plate

Table 10: Legend CP27xx name plate

No.	Description
1	Model: The last four digits indicate the device generation.
2	Serial number (BTN)
3	Date of manufacture
4	Mainboard
5	CPU
6	Main memory
7	Power supply
8	Storage media
9	Display
10	Touch screen
11	Optional slot for PCIe compact modules
12	Optional interface (X101)
13	MAC addresses of the Ethernet interfaces (X108, X109)
14	DVI interface (X103)
15	USB interfaces (X104 - X107)
16	Ethernet interfaces (X108, X109)
17	Connection of the power supply and protective earth of the panel PC (X110)
18	Module slot
19	Optional interface led out into the connection section (X101)
20	Grounding bolt for functional earthing of the panel PC

21	<p>Symbols</p> <p>Note: here are the symbols applicable to the device such as CE, EAC, UKCA, . The approvals of your device can be found on the name plate and in chapter 10.2 Approvals.</p>
22	Address of the vendor
23	Access to storage media
24	Access to motherboard battery
25	FCC approval
26	Variant number: commercial number of the order code including ordering options

4 Commissioning

In order to use the Panel PC, you must first commission it. The first step is to transport the device to its operating location and unpack it. This is followed by installing the device in the control cabinet front, connecting the cables and the power supply and finally switching on the Panel PC.

Operation of the Panel PC

The Panel PC is operated via the touch screen.

NOTICE

Damage to the touch screen

Operating the touch screen with unsuitable objects may damage the touch screen.

- Operate the touch screen only with bare fingers or wearing suitable gloves.
- If you use gloves, make sure that no hard particles such as metal shavings, glass splinters or similar adhere to the glove.

If you, as the user, require additional protection for the touch screen against dirt and scratching, for example due to dirty hands, this can be achieved with a Beckhoff protective film. The film provides short-term protection for a few days.

You can either order your device directly with the protective film applied or order a film individually and apply it yourself. Please refer to the price list for the available protective films according to the display size of your device.

Proceed as follows to attach the protective film to the touch screen:

1. Ensure that the environment is as dust-free as possible.
2. Thoroughly clean the surface of the device to be fitted with the film and remove all grease residues.
3. Detach the film from the backing at the short edge and place it on the surface.
4. Gradually remove the film from the backing. At the same time, use a doctor blade or other object with a soft rubber or felt edge to apply the film.
5. Brush away air bubbles towards the edge with a doctor blade or other object with a soft rubber or felt edge.

⇒ The film is now fitted.

4.1 Transport and unpacking

The specified storage conditions must be adhered to (see chapter 9 [Technical data](#) [► 48]).

Despite the robust design of the unit, the components are sensitive to strong vibrations and impacts. During transport the device must therefore be protected from mechanical stress. Appropriate packaging of the panel PC, in particular the original packaging, can improve the vibration resistance during transport.

NOTICE

Hardware damage due to condensation

Unfavorable weather conditions during transport can cause damage to the device.

- Protect the device against moisture (condensation) during transport in cold weather or in case of extreme temperature fluctuations.
- Do not put the device into operation until it has slowly adjusted to the room temperature.
- Should condensation occur, wait for about 12 hours before switching the device on.

Unpacking

Proceed as follows to unpack the device:

1. Check the packaging for transport damage.
2. Remove packaging.
3. Keep the packaging for possible future transport.
4. Check your delivery for completeness by comparing it with your order.
5. Check the contents for visible shipping damage.
6. In case of discrepancies between the package contents and the order, or in case of transport damage, please inform Beckhoff Service (see Chapter 10.1 Service and Support).

4.2 Control cabinet installation

NOTICE

Extreme environmental conditions

Extreme environmental conditions can cause damage to the device.

- Avoid extreme environmental conditions.
- Protect the device against dust, moisture and heat.

NOTICE

Lack of air circulation

Incorrect installation of the panel PC prevents air circulation in the device and thus causes overheating and functional impairment.

- Only install the panel PC as shown in the corresponding wall in the orientation shown.

The CP27xx Panel PC is designed for installation in the front of a control cabinet in machine and system engineering. Please observe the environmental conditions prescribed for the operation (see Chapter 9 Technical data [► 48]).

Dimensions

The dimensions of the panel PC can be found on the Beckhoff website: <https://www.beckhoff.com/de-de/support/downloadfinder/technische-zeichnungen/>.

All dimensions are in mm.

Preparation of the control cabinet

The control cabinet must have the required installation cutout according to the device dimensions of the panel PC.

The wall thickness must be between 1 mm and 5 mm for installation. In the case of a device with a stainless steel front, the panel thickness must be between 1 mm and 3 mm. After installation, be sure to check the tightness between the panel PC and the wall.

Please also note the following for installation in a control cabinet:

- Ensure that there is 5 cm of free space above and below the device for air circulation.
- Position the panel PC such that reflections from light sources on the screen are avoided as far as possible.
- For the correct installation height, use the position of the screen for guidance. This should always be optimally visible to the user.
- Do not expose the panel PC to direct sunlight.

Installation in the control cabinet

Once you have made the required cutout in the control cabinet, you can install the panel PC in the control cabinet. Clamping levers are provided at the back of the housing for mounting of the device. In the delivery state, the clamping levers are folded onto the device (see Fig. 11).

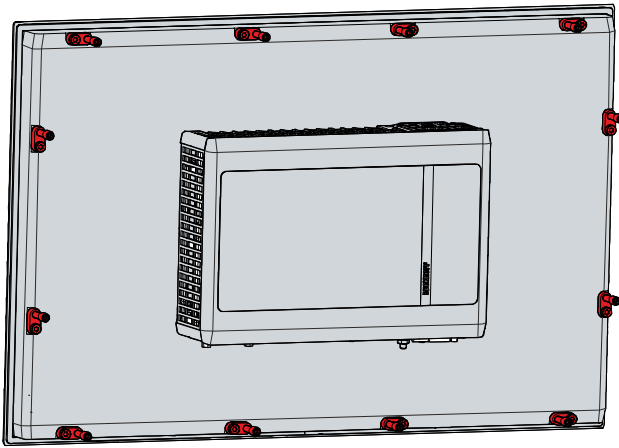


Fig. 11: CP27xx_delivery state clamping lever

To install and secure the panel PC in the control cabinet, follow the steps shown in Fig. 12 and 13:

1. Insert the panel PC at the intended position in the wall of the control cabinet. Make sure that the device is secured against falling out until it is fastened properly.

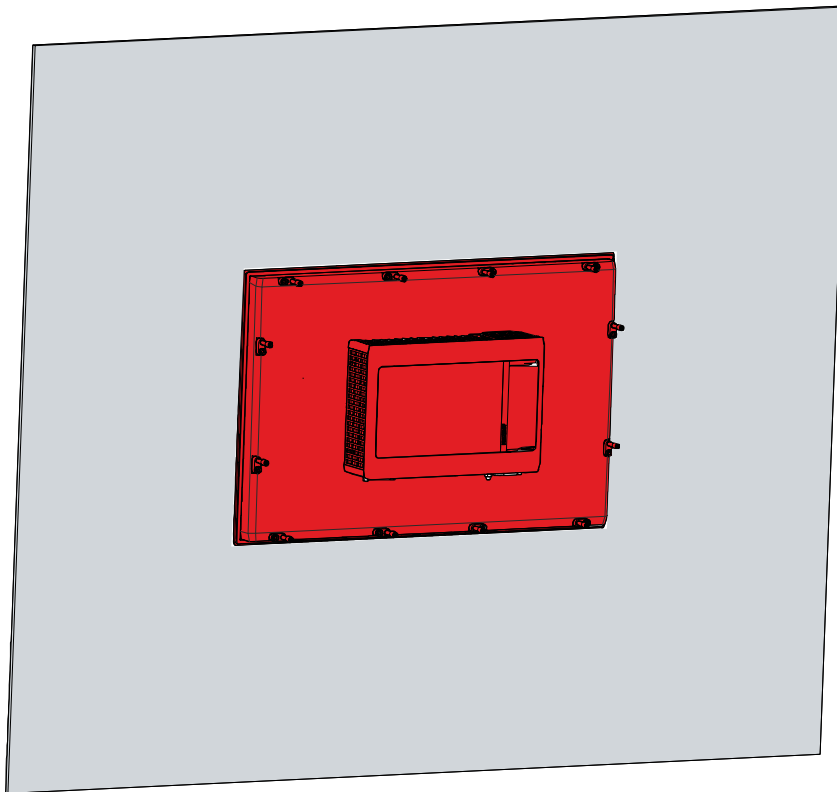


Fig. 12: CP27xx_wall positioning

2. Fold out the clamping levers 90° (section A and B).
 3. Tighten the clamping levers with the Allen key 3.0 mm (section C).
- ⇒ You have mounted the panel PC in the control cabinet.

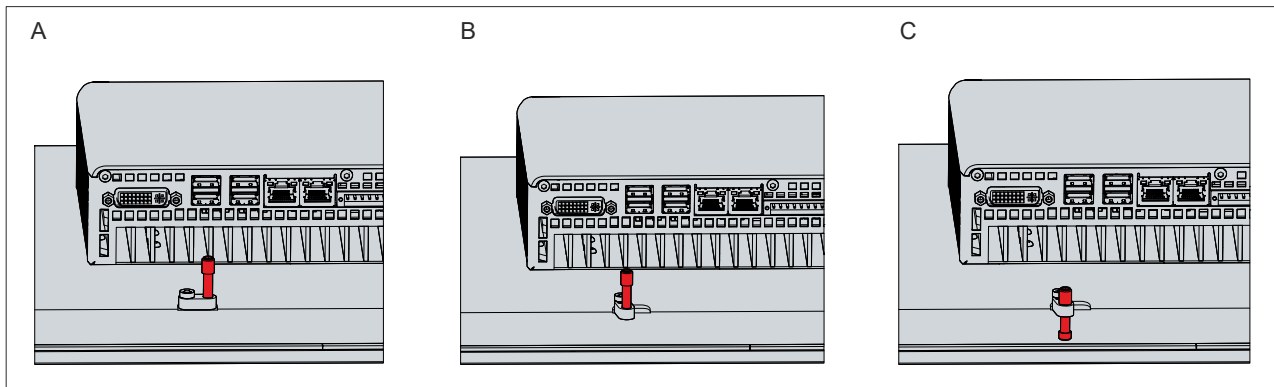


Fig. 13: CP27xx_control cabinet installation

4.3 Connecting the Panel PC

⚠ CAUTION

Risk of electric shock

Dangerous touch voltages can lead to electric shock. To avoid electric shock, observe the following:

- Never connect or disconnect the device cables during a thunderstorm.
- Provide protective earthing for handling the device.

To make the panel PC ready for operation, you have to connect it. The first step is to ground the device. Then you can connect the cables and the power supply.

An external power supply unit providing 24 V DC (-15 %/+20 %) from an isolated source is required for the power supply. This source must be protected by a UL 248 rated fuse with a maximum rating of 4 A.

The cabling of the panel PC in the control cabinet must be done in accordance with the standard EN 60204-1:2006 PELV = Protective Extra Low Voltage:

- The PE conductor (protective earth) and the "0 V" conductor of the voltage source must be on the same potential (connected in the control cabinet).
- Standard EN 60204-1:2006, section 6.4.1:b stipulates that one side of the circuit, or a point of the energy source for this circuit must be connected to the protective conductor system.

Devices connected to the panel PC with their own power supply must have the same potential for the PE and "0 V" conductors as the panel PC (no potential difference).

4.3.1 Mounting power supply cable

Install the cable for the power supply of the panel PC using the material supplied for connector assembly. It consists of an 8-pin connection strip and a strain relief housing with cable tie.

If you require a replacement for the voltage connector or the strain relief housing, you can order these from Beckhoff Sales using the following ordering option:

- C9900-P926: power supply plug for Industrial PC C5210, C63xx, C65xx, C69xx, CP22xx, CP27xx, CP62xx, CP63xx or CP67xx, 8-pin connector with strain relief for the external supply cables

Mounting power supply cable

First mount the plug on the cable as follows:

1. Remove a few centimeters of the cable sheath.
2. Remove the insulation from the wire ends (8-9 mm).
3. Crimp the ferrules onto the stripped wire ends.
4. Insert the cable ends with the ferrules into the 8-pin connection strip. For the pin assignment of the connector, see Chapter 3.2.1 [Power supply](#) [▶ 17].
5. Screw the cable ends into the 8-pin connection strip.

⇒ You have mounted the plug on the cable.

Assembly of the strain relief housing

Now mount the strain relief housing on the previously connected plug and supply cable as shown in Fig. 14:

1. Thread the cable tie into the lower part of the strain relief housing (section A).
2. Insert the connection strip into the lower part of the strain relief housing (section B).
3. Tighten the cable tie and remove the plastic tab (section C).
4. Attach the upper part of the strain relief housing by snapping it onto the lower part (section D).

⇒ You have mounted the strain relief housing.

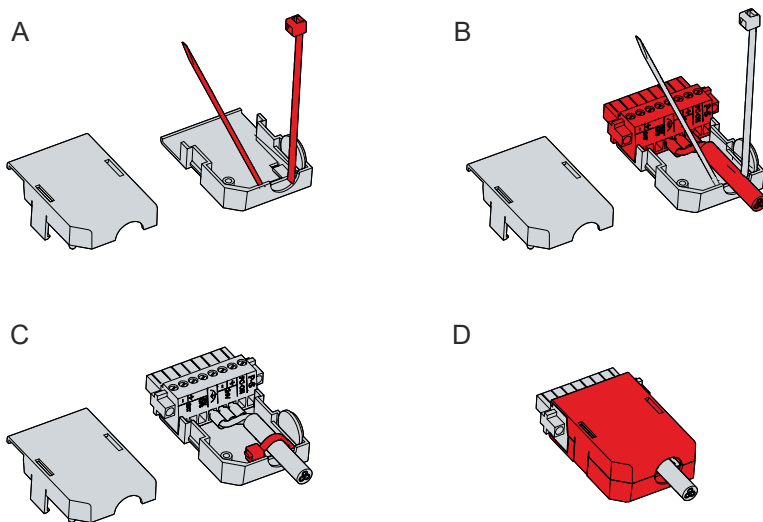


Fig. 14: CP27xx_assembly of strain relief housing

To remove the strain relief housing, proceed as follows:

1. Use your fingers to bend the latching lugs on the lower part slightly outwards (see Fig. 15).
2. Lever the upper part off the lower part.
3. Cut the cable tie.

⇒ You have removed the strain relief housing.

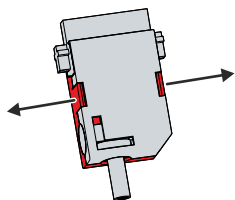


Fig. 15: CP27xx_disassembly of strain relief housing

4.3.2 Grounding the Panel PC

Potential differences are minimized and electrical currents are diverted to the ground through grounding or potential equalization of electronic devices. This is to prevent dangerous touch voltages and electromagnetic interference.

Protective earth

The protective grounding of a device serves to avoid dangerous touch voltages. According to the EN 60204-1 standard (Chapter 8 Potential equalization), protective grounding is required if:

- the device exceeds dimensions of 50 mm x 50 mm,
- the device can be touched or encompassed over a large area,
- contact between the device and active parts is possible,
- an insulation fault may occur.

Establish low-resistance protective earthing of the panel PC via the voltage connection to avoid dangerous touch voltages. There is a pin in the voltage socket for the protective earth (PE).

EMC

NOTICE

Hardware damage due to electromagnetic interference

The use of the panel PC without a functional earth can lead to material damage due to electromagnetic interference.

- Only use the device with functional earth.

Electromagnetic compatibility (EMC) of the panel PC includes on the one hand not affecting other devices and equipment by electromagnetic interference and on the other hand not being disturbed by electrical or electromagnetic effects itself.

To do this, the panel PC must comply with certain protection requirements. The panel PC has EMC interference immunity according to EN 61000-6-2. The EMC interference emission of the device meets the requirements of EN 61000-6-4.

The functional earth is necessary for the EMC of the device. You establish functional earthing via the grounding connection between the grounding bolt in the connection section on the rear side of the panel PC (see Fig. 16) and the central grounding point of the control cabinet in which the PC is installed. Use wires with a cross-section of at least 4 mm² or a flat conductor for the ground connection, as the circumference of the conductor should be as large as possible.

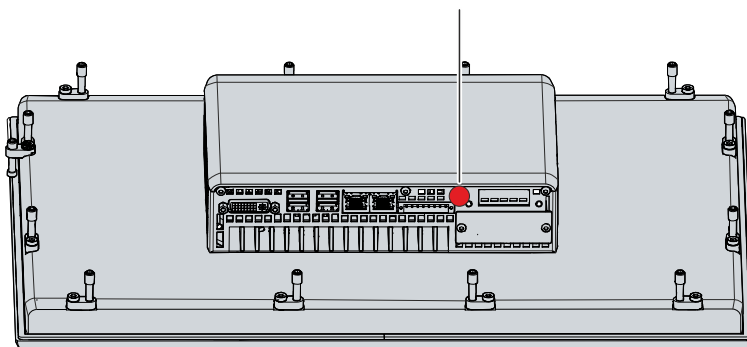


Fig. 16: CP27xx_grounding bolt functional earthing

4.3.3 Connecting cables and power supply

NOTICE

Incorrect connection procedure

Incorrect procedure when connecting the cables and the power supply can cause hardware damage.

- Follow the documented procedure for connecting the cables and the power supply.
- Always connect all cables first and only then switch on the power supply.
- Please read the documentation for the external devices prior to connecting them.

NOTICE

Connection of incorrect battery packs

Connecting the wrong battery packs can cause damage to the panel PC and the battery packs.

- Only connect the Beckhoff battery pack C9900-U332 or C9900-U330 to your panel PC.

The connections are located at the rear of the panel PC.

Connecting cables

Make sure that you first ground the PC (see chapter 4.3.2 [Grounding the panel PC](#) [► 28]) and then plug in all data transmission cables.

Connecting the power supply

Cables with a maximum cable cross-section of 1.5 mm² can be used for connecting the power supply. For long supply lines, use 1.5 mm² cables to achieve a low voltage drop on the supply line. There should be at least 22 V at the voltage connector of the panel PC, so that the PC remains switched on during voltage fluctuations.

Proceed as follows to connect the 24 V_{DC} power supply unit:

1. First mount the power supply cable with the 8-pin connection strip without the strain relief housing.
2. Plug the voltage connector into the voltage socket on the panel PC.
3. Screw the voltage connector to the voltage socket.
4. Connect the PC to your external 24 V power supply.
5. Switch on the 24 V power supply.
6. Measure the voltage on the power supply plug of the PC.
7. Mount the strain relief housing on the 8-pin connection strip.

External battery pack

If you ordered your device with an integrated UPS, then you can connect an external battery pack and install it on a DIN rail near to the PC. Use only Beckhoff battery packs for this:

Table 11: Order identifier battery pack

Order identifier	Version
C9900-U330	Battery pack for PCs with 24 V power supply unit and integrated UPS C9900-P209 or C9900-U209, external for DIN rail mounting, 3.4 Ah, operating temperature 0...50 °C, contains two closed lead-acid batteries VRLA-AGM
C9900-U332	Battery pack for 24 V power supply with integrated C9900-U209 UPS for PCs with Intel-Atom® or Celeron® ULV-827E 1.4 GHz processor, external for DIN rail mounting, 1.2 Ah, operating temperature 0...50 °C, contains two closed VRLA-AGM lead-acid batteries

You can use the UPS output of the power supply unit and connect a Beckhoff Control Panel as a second display. If the supply voltage fails and the panel PC is only supplied by the battery pack, the control panel remains in operation. Second display operators can use it to read the power failure notification, back up data, and shut down the operating system.

In the case of the C9900-U330 battery pack, PIN 4 and 5 of the battery pack are available for looping through a 24 V supply. Accordingly, you can connect a three-core sheathed cable with plus and minus of the supply voltage as well as protective earth to the battery pack and then connect to the PC with a five-core sheathed cable. The method of connecting different components can be taken from the wiring diagram in fig. 17.

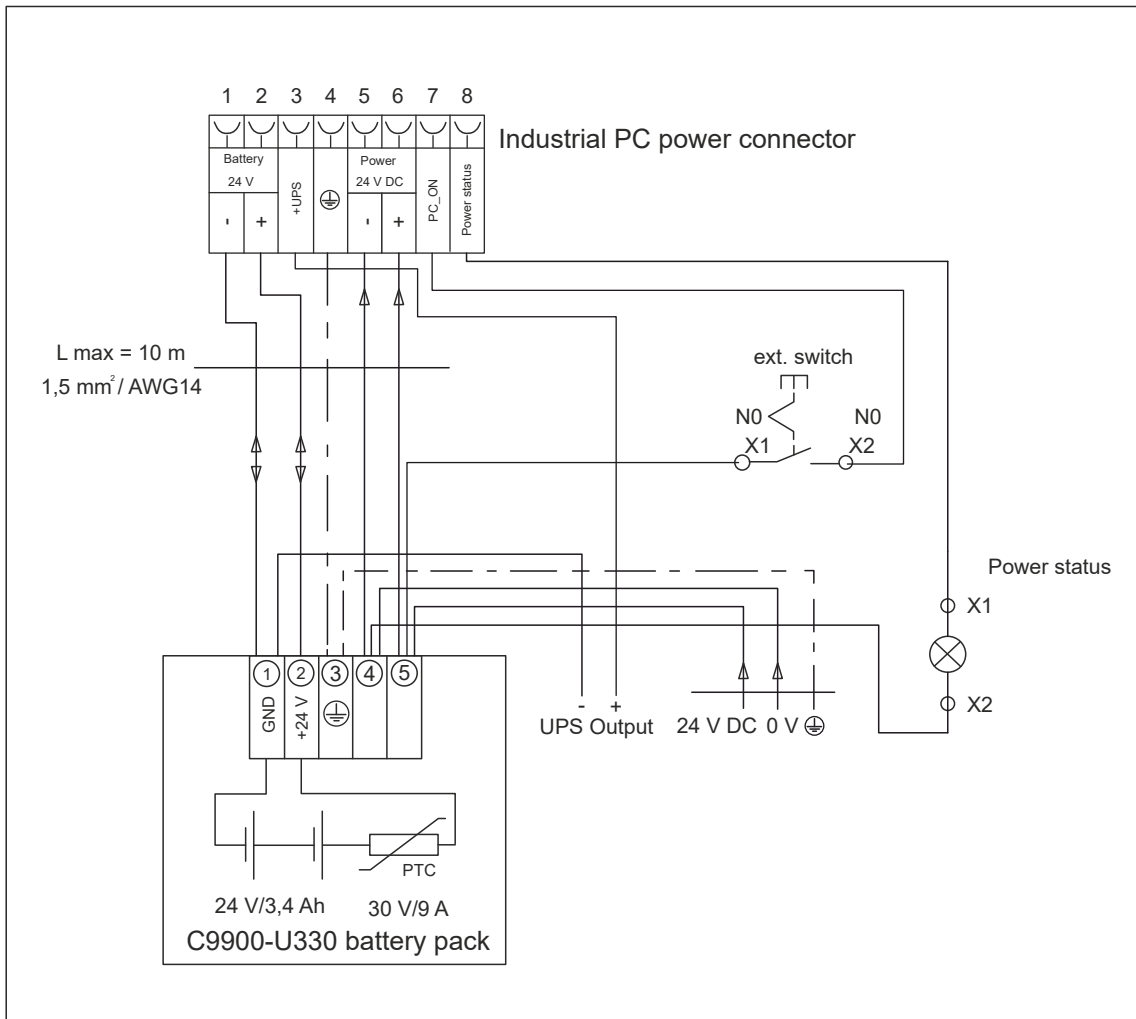


Fig. 17: CP27xx_wiring diagram C9900-U330

In the case of the C9900-U332 battery pack, PIN 5 and 6 of the battery pack are available for looping through a 24 V supply. Accordingly, you can connect a three-core sheathed cable with plus and minus of the supply voltage as well as protective earth to the battery pack and then connect to the PC with an 8-core sheathed cable. The method of connecting different components can be taken from the wiring diagram in fig. 18.

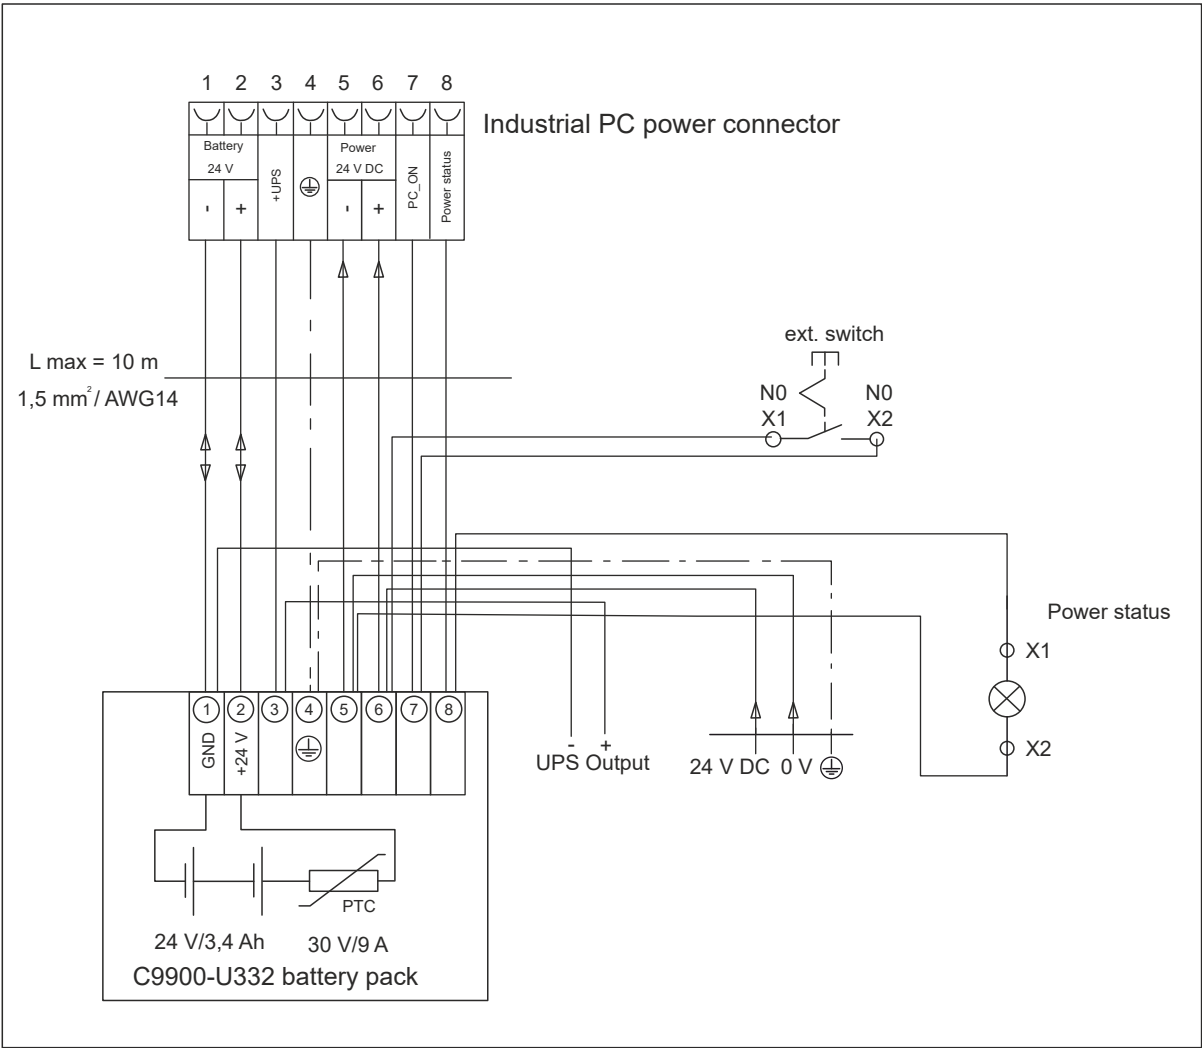


Fig. 18: CP27xx_wiring diagram C9900-U332

4.4 Switching the Panel PC on and off

NOTICE

Public networks

Connecting the PC to public networks without additional protective measures can compromise the safety of the device.

- Protect the PC before connecting it to public networks.

NOTICE

Data loss due to switching off the PC while the software is running

Switching off the PC before the running software is terminated and the operating system is shut down can lead to data loss.

- Quit the running software and shut down the operating system before switching off the PC.

NOTICE

Shortened battery life due to switching off the power supply

If the power supply is simply switched off, the operating system shuts down via the battery. With daily use, this significantly shortens the life of the battery.

- Avoid switching off the power supply before shutting down the operating system.
- Use the PC-ON input (see the following description) to shut down the operating system in a battery-friendly manner.

The panel PC starts up when the system is switched on or when the power supply is connected.

Input PC-ON

You can use the PC-ON input of the PC to control the startup and shutdown of the operating system. The PC-ON signal is inverted, which is why the operating system boots up at 0 V at the input and shuts down at 24 V. During operation, 0 V must therefore be permanently applied to the input.

If you want to shut down the operating system, you must apply 24 V to the PC-ON input. Once the operating system has shut down, the PC power supply unit sets the Power Status output from 24 V to 0 V. This indicates that the shutdown is complete. You can then switch off the power supply. If you remove the 24 V from the PC-ON input before you have switched off the power supply, the operating system restarts. Therefore, 24 V must be applied to the input until you have switched off the power supply.

If you have a panel PC with UPS and simply switch off the power supply, the operating system shuts down via the battery. With frequent use, this shortens the life of the battery.

Driver installation

When you switch on the PC for the first time, the optionally pre-installed operating system will be started. For any additional hardware you have connected, you have to install the drivers yourself afterwards. In addition, the Beckhoff Device Manager starts automatically. The Device Manager is a software from Beckhoff that supports you in configuring the PC.

If you have ordered the PC without an operating system, you must install this and the driver software for the additional hardware you have connected and for the devices in the PC yourself. Please follow the instructions in the documentation for the operating system and the additional devices.

Switching off the panel PC

When the system is switched off or disconnected from its own power supply, the panel PC is also switched off.

To shut down the operating system properly, you can install an additional ON/OFF switch next to the machine's main switch to turn the machine on and off. The main switch can thus remain switched on in principle and thus ensures that the PC is still supplied with power during the shutdown of the operating system.

Via the Power Status output, you can switch, for example, a contactor that switches off the entire system. The maximum load for the Power Status output is 0.5 A and a suitable fuse should be provided.

You can assign different access rights to all users in the operating system and in the application software. Since there is a risk of data loss if the panel PC is switched off incorrectly, assign the rights advisedly. A user who is not allowed to terminate the software should also not be allowed to shut down the operating system and switch off the panel PC.

UPS software components

The UPS software components with the corresponding drivers must be installed on the PC to operate the power supply unit as a UPS. The software components and drivers are already installed on delivery of the PC with operating system. Otherwise, you have to install the installation package *Beckhoff UPS* yourself.

You can obtain the installation package from Beckhoff Service (service@beckhoff.com), who will provide you with the package. You then use the installation package to install the UPS software components. The UPS software components come with a detailed help function. Call up the help files either directly from the configuration register by clicking the Help button or start the file under *Start > Programs > Beckhoff > UPS software components*.

5 Beckhoff Device Manager

The Beckhoff Device Manager enables detailed system diagnostics with uniform secure access to the existing hardware and software components. System data is recorded, analyzed and evaluated during operation. The data helps to detect deviations at an early stage and prevent PC downtime.

The Beckhoff Device Manager always starts automatically after the industrial PC has been booted. In addition, you have the option of manually starting the previously closed Device Manager at any time.

The industrial PC is delivered with predefined access data as standard:

- User name: Administrator
- Password: 1

You also have the option of using the Beckhoff Device Manager to remotely configure the industrial PC via a web browser. More detailed information is available in the Beckhoff Device Manager [manual](#).

First start Beckhoff Device Manager

When your industrial PC is booted for the first time, the Beckhoff Device Manager also starts automatically for the first time. The Security Wizard opens. This tells you that you should reset the default password set by Beckhoff. Proceed as follows:

1. Click **Next** on the Security Wizard start page.
⇒ This will take you to the **Change Passwords** page:

Fig. 19: Beckhoff Device Manager - Change passwords

2. Enter the access data of the Device Manager on delivery.
3. Choose a secure new password. Instructions for choosing a secure password are given below.
4. Confirm the changes by clicking on the tick in the red box on the right.
5. Exit the Security Wizard.
⇒ You have reached the Device Manager start page.

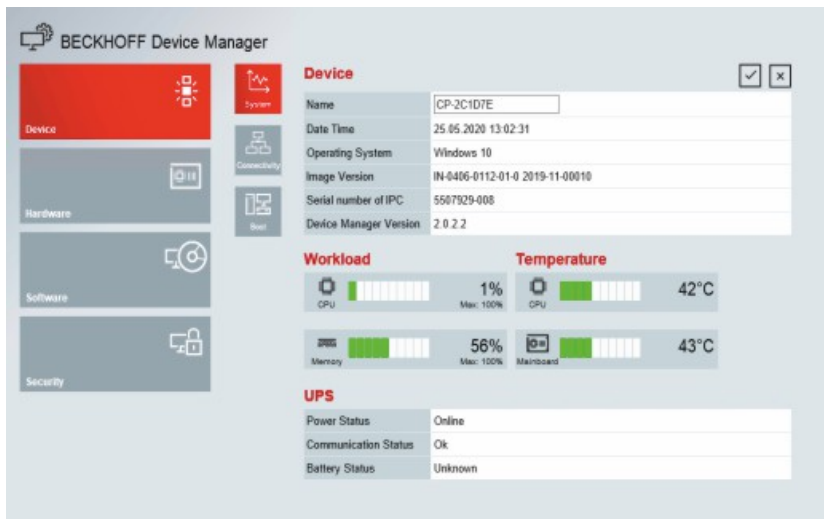


Fig. 20: Beckhoff Device Manager – Start page

Navigate forward in the menu and configure the industrial PC. Note that modifications only become active once they have been confirmed.

Manual start Beckhoff Device Manager

To start the Beckhoff Device Manager manually, proceed as follows:

1. Open a web browser locally on the industrial PC.
2. Enter *localhost/config* in the web browser to start the Beckhoff Device Manager.

The Beckhoff Device Manager starts. The Security Wizard appears.

Secure passwords

Strong passwords are an important prerequisite for a secure system.

Beckhoff supplies the device images with standard user names and standard passwords for the operating system. It is imperative that you change these.

Controllers are shipped without a password in the UEFI/BIOS setup. Beckhoff recommends assigning a password here as well.

Please note the following:

- Passwords should be unique for each user and service.
- Only change passwords after an incident in which passwords have become known without authorization.
- Train the device users in the use of passwords.

A secure password has the following characteristics:

- Password complexity: The password should contain capital and lower-case letters, numbers, punctuation marks and special characters.
- Password length: The password should be at least 10 characters long.

Switching capability Onboard EtherCAT P voltages

Using the Beckhoff Device Manager you can enable and disable the system voltage U_s and the peripheral voltage U_p of the onboard EtherCAT P interface. You can set a state value and a default value for both voltages.

You can set the state value of the voltages at runtime. After a cold start a reset takes place, after a warm start **no** reset takes place.

With the default value of the voltages, you set the value that the voltage has after a cold start. To activate the default value, you must perform a power cycle after setting the value. For the durability of the memory block, note that it may be read cyclically but not written cyclically.

To switch the voltages, follow the steps shown in the figure below:

1. In the left area of the Device Manager, select the **Hardware** tile (1).
2. In the middle area of the Device Manager, select the **Equipment** tile (2).
3. Select either **Enabled** or **Disabled** for the state and default values of the voltages (3).
4. Confirm your selection by clicking on the checkmark on the right (4).

⇒ You have switched the voltages.

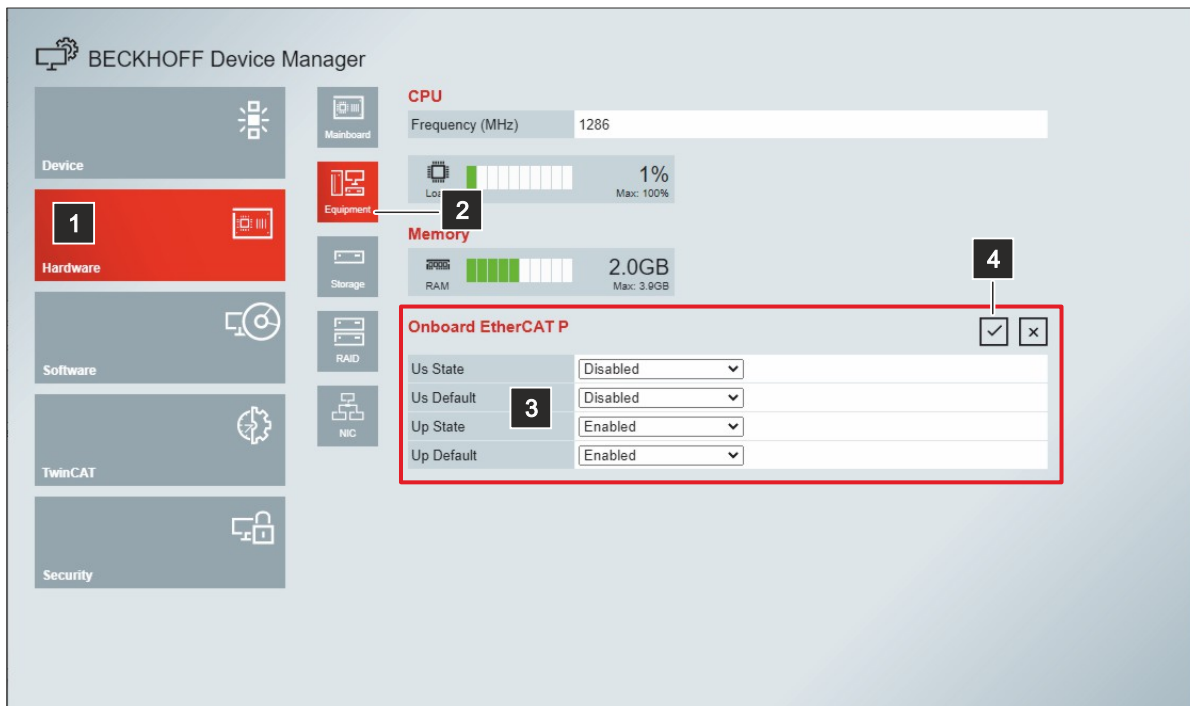


Fig. 21: Beckhoff Device Manager - Onboard EtherCAT P

Further interfaces for switching U_s and U_p , for example directly from the TwinCAT application, can be found in the [manual](#) for the Beckhoff Device Manager.

6 Decommissioning

NOTICE

Hardware damage due to power supply

A connected power supply can cause damage to the Panel PC during disassembly.

- Disconnect the power supply from the device before starting to disassemble it.

As part of the decommissioning of the Panel PC, you must first disconnect the power supply and cables. You can then remove the device from the control cabinet.

If you do not wish to use the Panel PC any further, chapter 6.2 [Disassembly and disposal](#) [► 38] provides information on the correct disposal of the device.

6.1 Disconnecting the power supply and cables

⚠ CAUTION

Risk of electric shock

Disconnecting the panel PC during a thunderstorm can lead to electric shock.

- Never disconnect the cables of the panel PC during a thunderstorm.

Before disassembling the panel PC, disconnect the cables and the power supply. Follow the steps below:

1. Shut down the panel PC.
 2. Disconnect the PC from your external 24 V power supply.
 3. Unscrew the voltage connector and pull it out of the PC.
 4. Make a note of the wiring of all data transmission cables if you want to restore the cabling with another device.
 5. Disconnect the data transmission cables from the panel PC.
 6. Finally, disconnect the ground connection.
- ⇒ You have disconnected the cables and power supply.

6.2 Disassembly and disposal

In order to be able to dismount the panel PC from the control cabinet, you must first have disconnected the power supply and the cables (see Chapter 5.1 [Disconnecting the power supply and cables](#) [▶ 37]).

To remove the panel PC from the control cabinet, follow the steps shown in Fig. 22 and 23:

1. Loosen the clamping levers with a 3.0 mm Allen key (sections A and B). Make sure that the device is secured against falling out of the control cabinet wall.
2. Fold the clamping levers back onto the housing by 90° (section C) and tighten them there again so that they do not fold out unintentionally.

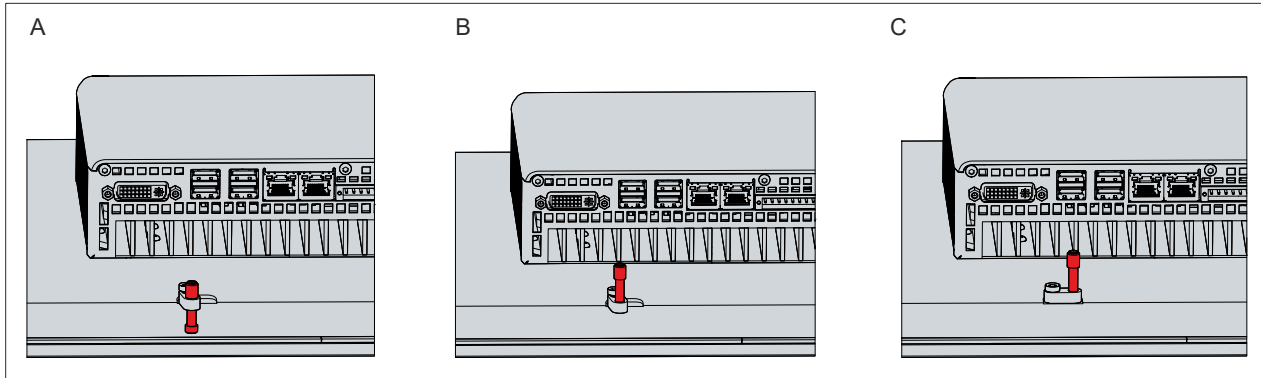


Fig. 22: CP27xx_remove from the control cabinet

⇒ You can now remove the panel PC from the corresponding cutout in the control cabinet wall.

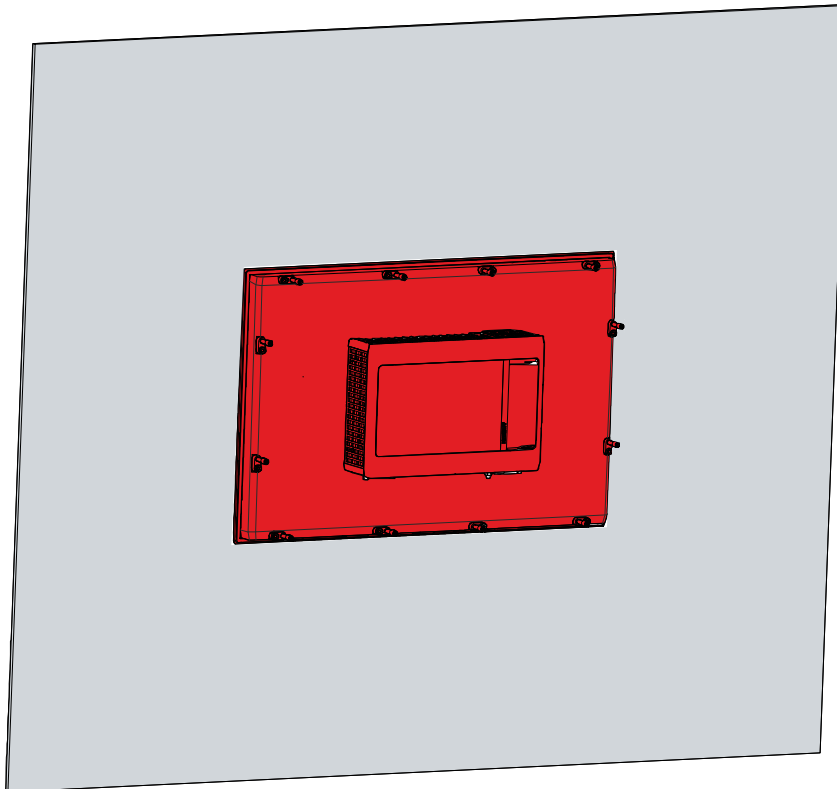


Fig. 23: CP27xx_remove installation cutout

Disposal of the panel PC

When disposing of the panel PC, be sure to observe the national electronic waste regulations.

For disposal, you must remove the device from the control cabinet.

7 Maintenance

⚠ CAUTION

Risk of electric shock

Working on the panel PC when live can lead to electric shock.

- Turn off the supply voltage before cleaning the device or replacing device components. This does not apply to the replacement of CFast cards in the RAID configuration.

Maintenance measures increase the efficiency of the device by ensuring long-term functionality. Cleaning and maintenance of certain device components and the replacement of other device components contribute to this.

7.1 Cleaning

NOTICE

Unsuitable cleaning agents

The use of unsuitable cleaning agents can damage the device.

- Clean the panel PC only as specified.

It is essential to observe the following points when cleaning the PC:

- Keep to the boundary conditions of protection rating IP65/IP20.
- Never use compressed air to clean the PC.
- Maintain an ambient temperature range of 0 °C to 55 °C.

Cleaning agents

In order to avoid damage to the front of the panel PC during cleaning, you must use suitable cleaning agents. Examples include:

- benzine
- spirit
- glass cleaner

Avoid the following cleaning agents:

- detergents with scouring or abrasive components
- metal cleaning objects such as razor blades or steel spatulas
- steam jet cleaner or very hot water
- cold water with a heated device
- high water pressure, e.g. high-pressure cleaner

Cleaning the front screen

You can clean the front screen of the panel PC during operation. In order to avoid inadvertent touch entries when doing this, you must first set the device to "Cleaning Mode" with the help of the Beckhoff Control Tool.

The Beckhoff Control Tool does not start automatically when the PC starts up. Proceed as follows to activate the "Cleaning Mode" of the Beckhoff Control Tool:

1. Click the Beckhoff Control Tool to start it.
 - ⇒ When the tool is started, a small sun symbol appears in the taskbar.
2. Right-click the sun symbol. Touch the sun when operating via the touchscreen.
3. Select the "Cleaning Mode" (see Fig. 24).
 - ⇒ "Cleaning Mode" is activated. You can now clean the front panel.

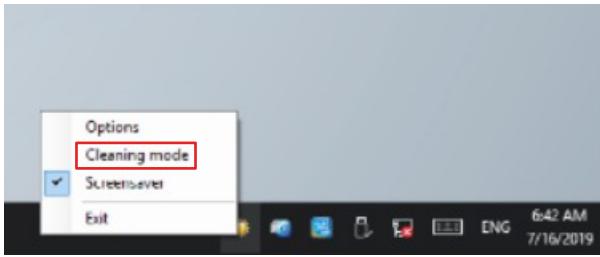


Fig. 24: CP27xx_Select "Cleaning Mode"

You can set the duration for which the PC should remain in Cleaning mode. The period can be set between 5 and 120 seconds. To do this, right-click on the sun symbol again or touch the sun symbol with your finger and click on "Options". Now select the appropriate period (see fig. 25).

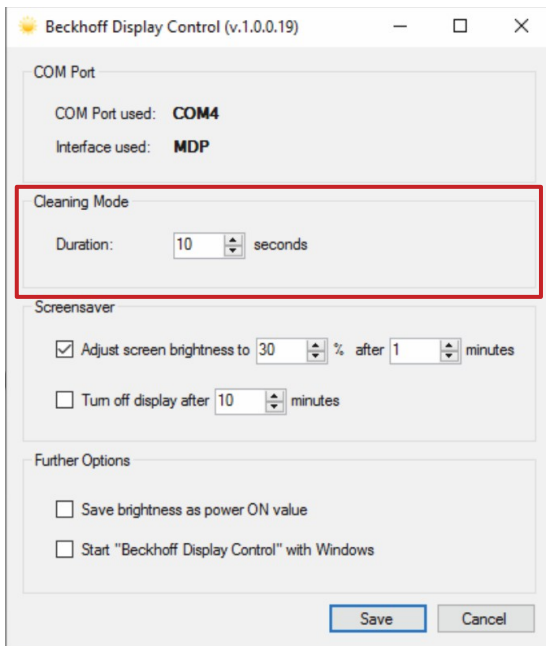


Fig. 25: CP27xx_configuration "Cleaning Mode"

7.2 Maintenance

NOTICE

Use of incorrect spare parts

The use of spare parts not ordered from Beckhoff Service can lead to unsafe and faulty operation.

- Only use spare parts that you have ordered from Beckhoff Service.

Beckhoff Panel PCs are manufactured from components of the highest quality and robustness. They are selected and tested for best interoperability, long-term availability and reliable function under the specified environmental conditions.

Nevertheless, some components of the panel PC may be subject to a limited service life if they are operated under certain conditions, such as more demanding ambient conditions during operation or during storage, or if they are out of service for long periods of storage.

Beckhoff therefore recommends replacing some of the panel PC components after the time after which predictions of the remaining service life of such components can no longer be reliably calculated.

These are the following components:

- Storage media
- Battery and battery pack

The following table provides recommendations for the regular, precautionary replacement of the PC components:

Table 12: Replacement recommendations for PC components

Component	Recommendation for replacement intervals (years)
UPS battery pack	5 years
2.5-inch hard disk	5 years or after 20,000 operating hours at more than 40 °C or after 30,000 operating hours at less than 40 °C
3.5-inch hard disk	5 years, irrespective of the operating hours
Fan	7 years
Compact Flash, CFast or SSD	10 years
Motherboard battery	5 years

Beckhoff is excluded from liability in the event of possible damage occurring during maintenance work. In order to avoid damage caused by electrostatic discharge when replacing device components, protective measures are recommended. Below are some suggestions.

ESD protection

NOTICE
<p>Electrostatic discharge</p> <p>The replacement of device components without ESD protection can lead to functional impairment and destruction of the device.</p> <ul style="list-style-type: none"> • If possible, apply ESD protection measures during maintenance work.

When working on electronic devices, there is a risk of damage due to ESD (electrostatic discharge), which can impair the function or destroy the device.

Protect the panel PC and create an ESD-protected environment in which existing electrostatic charges are safely discharged to ground and charging is prevented.

An ESD-protected environment can best be created by setting up ESD protection zones. The following measures serve this purpose:

- ESD-compliant floors with sufficient conductivity to the reference potential PE;
- ESD-compatible work surfaces such as tables and shelves;
- Wrist grounding strap, especially for sedentary activities;
- grounded and electrostatically dissipating equipment and operating materials (e.g. tools) within the ESD protection zone.

If it is not possible to create an ESD protection zone, you can still protect the device against ESD damage. For example, the following measures can be used:

- Use conductive mats connected to the ground potential as underlays.
- Dissipate possible charges from your own body by touching grounded metal (e.g. control cabinet door).
- Wear a wrist grounding strap.
- Only remove new electronic components from the ESD packaging (tinted plastic bag) after putting on the wrist grounding strap.
- Do not walk around with electronic components in your hand if they are not in ESD packaging.

Access to exchangeable device components

Access is gained to the battery and storage medium from the back of the panel PC. The components are located on the top of the connection block under a cover. To gain access to the device components, follow the steps below, shown in Figure 26:

1. Release the M4 screw (section A). This is a captive screw, so it remains with the cover.
 2. Remove the cover (section B).
- ⇒ You now have access to the battery (1) and the storage medium (2) (section C).

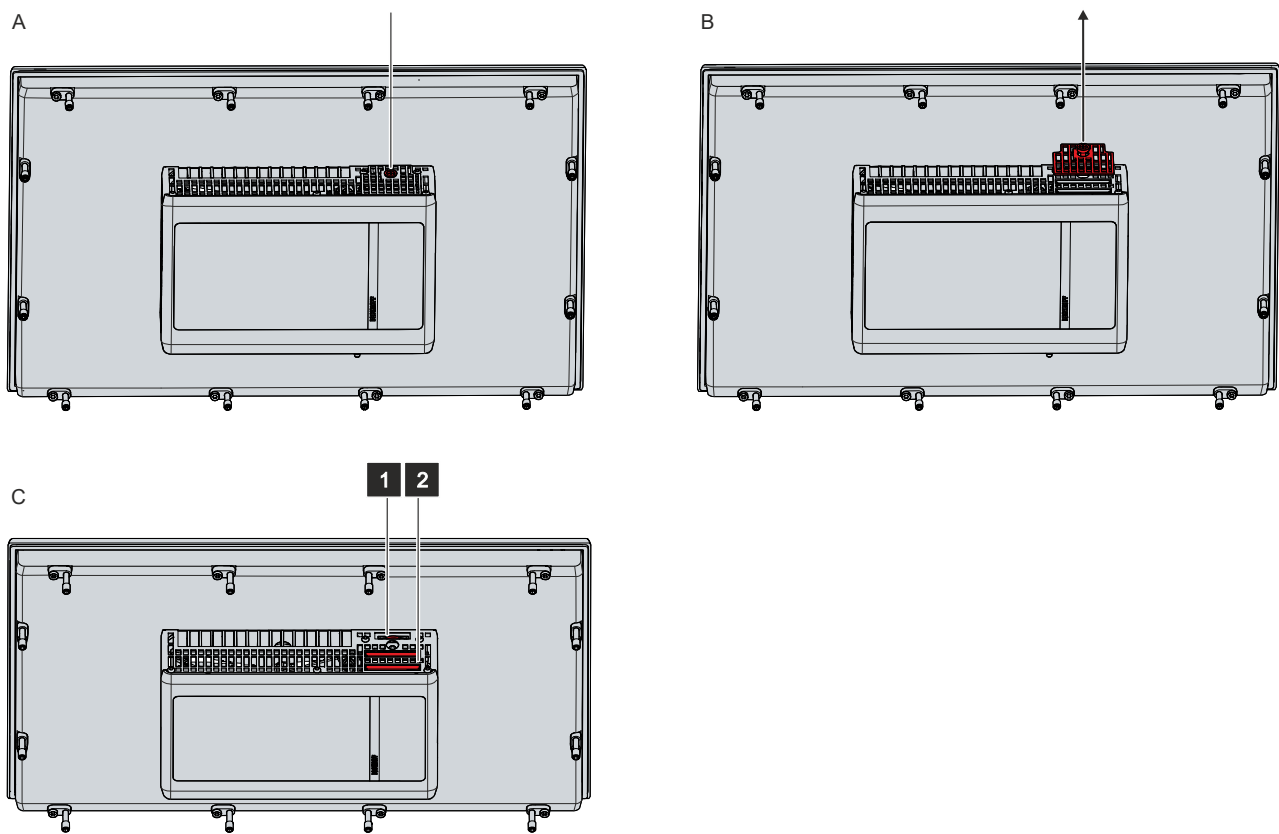


Fig. 26: CP27xx_access device components

7.2.1 Replacing the battery

NOTICE

Incorrect battery type

Inserting the wrong type of battery can damage the device.

- Only replace the battery with a replacement battery from Beckhoff Service.
- When replacing the battery, make sure that the polarity is correct.

NOTICE

Battery damage

Incorrect handling of the motherboard battery can damage it.

- Do not recharge the battery.
- Do not throw the battery on the fire.
- Do not open the battery.
- Protect the battery against direct sunlight and moisture.

NOTICE

Motherboard failure

Scratches on the motherboard may cause the motherboard to fail.

- Be very careful when replacing the battery and be sure to avoid scratches on the motherboard.

The panel PC does not contain a lithium-ion battery. The motherboard battery is a CR2032 lithium-metal cell. It is used to supply power to the clock integrated on the motherboard. If the battery is depleted or missing, the date and time are displayed incorrectly.

Table 13: Technical data of the battery

Battery type	Electrical properties (at 20 °C)		Dimensions		
	Nominal voltage	Nominal capacity	Diameter	Height	Weight
CR2032	3.0 V	225 mAh	20.0 mm	3.20 mm	3.1 g

Chapter 7.2 Maintenance [► 40] shows how to gain access to the battery.

To replace the battery, follow the steps below:

1. Pull the battery out of the panel PC with needle-nose pliers (see Fig. 27).
2. Insert the new battery into the PC by hand. Pay attention to the correct polarity. The negative pole of the battery must face the display.

⇒ You have replaced the battery.

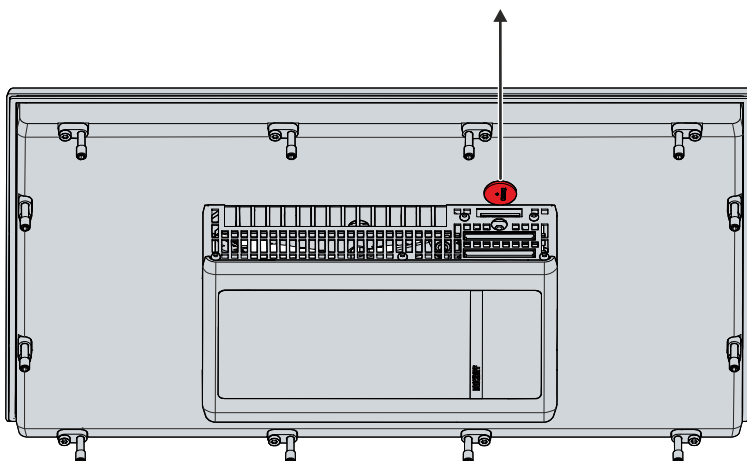


Fig. 27: CP27xx_replacing the battery

To dispose of the battery, remove it, stick insulating tape over the poles and take it to the local battery recycling.

7.2.2 Replacing the storage media

For new storage media, please contact your Beckhoff Sales only.

Chapter 7.2 [Maintenance](#) [► 40] shows how to access the storage media.

Data transmission before replacement

If you want to exchange a storage medium according to Beckhoff's recommendation, you must copy the data from the old to the new storage medium. You can use the Beckhoff Service Tool (BST) for this purpose. BST is a graphical backup and restore program for PCs with a Windows operating system. You can create an image of your operating system and use it to back up the operating system. Then you can restore the created image to a new data carrier. The BST is available on a bootable BST USB flash drive. This includes Windows and a backup software. Select the size of the BST USB flash drive according to the size of the backup copy of your operating system. You can then keep the flash drive as a backup copy. For this purpose, the BST USB flash drives are designed for particularly long data preservation by means of special flash. For more information on the function of the BST, please refer to the corresponding [manual](#).

If your storage medium is defective and there is no backup, Beckhoff Service can provide you with a fresh Windows image. For this to be possible, the Beckhoff PC must already have been shipped with a valid operating system license. After installing the fresh image, the applications must be reinstalled.

Replacing the CFast

To replace the CFast, follow the steps shown below in Fig. 28:

1. Press lightly on the CFast from above, like on a button (section A).
⇒ When you release the CFast, the push-pull mechanism guides the CFast out of the slot far enough for you to grab it (section B).
2. Pull the CFast out of the PC (section C).
3. Insert the new CFast into the PC in the same orientation until it protrudes just a bit from the PC.
4. Press the CFast into the PC.
⇒ You have replaced the CFast.

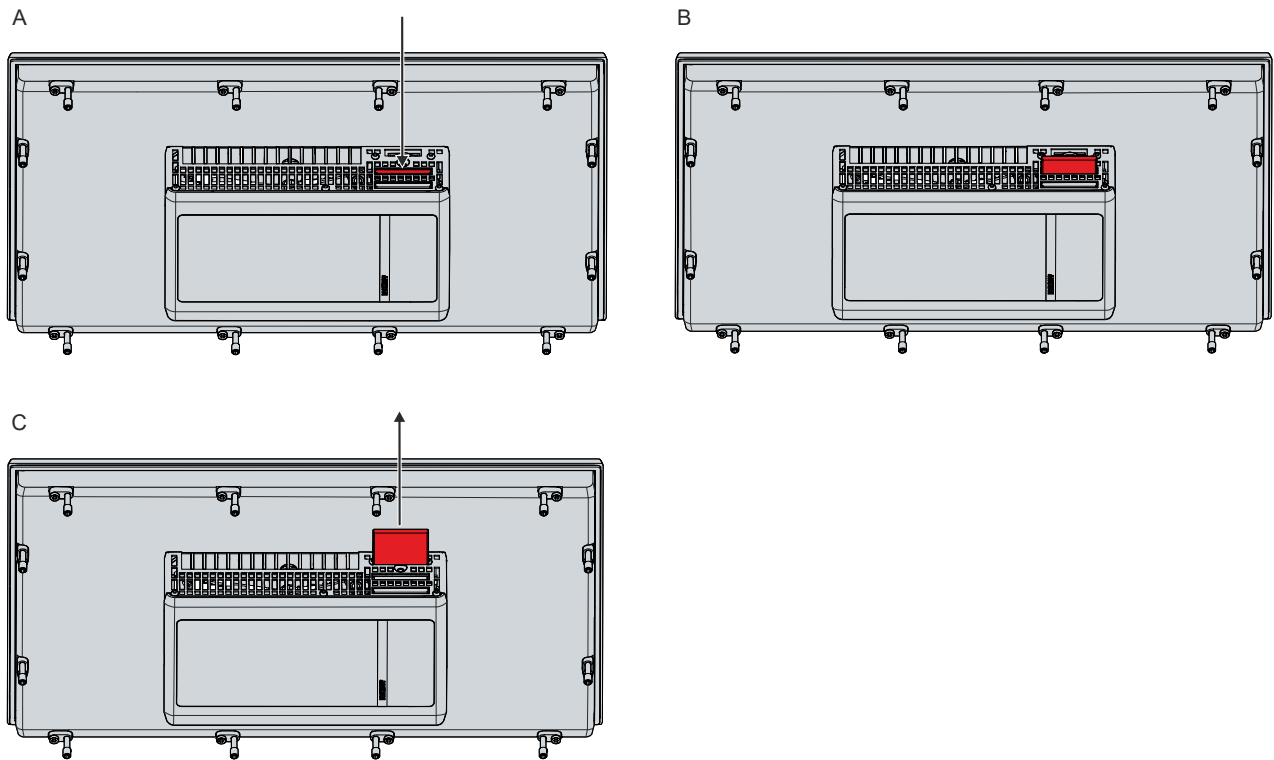


Fig. 28: CP27xx_exchange CFast

The old storage media must be disposed of in accordance with the national electronic waste regulations.

7.2.3 Exchange gasket

If you have chosen to order your device with the option of a stainless steel front instead of an aluminum front, there is a silicone seal on the back of the unit to protect the connection section from moisture.

The silicone seal may become porous after a long operating time. In that case, you should replace the seal to continue protecting the connection section. You can order the following replacement seals from your Beckhoff sales department:

Table 14: Ordering options seal


Ordering option	Description
C9900-Z520	Replacement seals for stainless steel built-in Panel CP2x07-00x0 (C9900-F941)
C9900-Z521	Replacement seals for stainless steel built-in Panel CP2x13-00x0 (C9900-F942)
C9900-Z522	Replacement seals for stainless steel built-in Panel CP2x16-00x0 (C9900-F945)
C9900-Z523	Replacement seals for stainless steel built-in Panel CP2x18-00x0 (C9900-F946)
C9900-Z524	Replacement seals for stainless steel built-in Panel CP2x21-00x0 (C9900-F948)

To replace the seal, follow the steps shown below in figure 29:


1. Loosen and remove the M2.5x4 screws (section A).
2. Remove the seal (section B).
3. Place the new seal in the circumferential sealing groove on the back of the device (section C).
4. Press along the seal with your fingers until it is neatly in the sealing groove. Make sure that the seal does not make any waves.
5. Screw the seal back in place with the M2.5x4 screws.

⇒ You have replaced the seal.

A

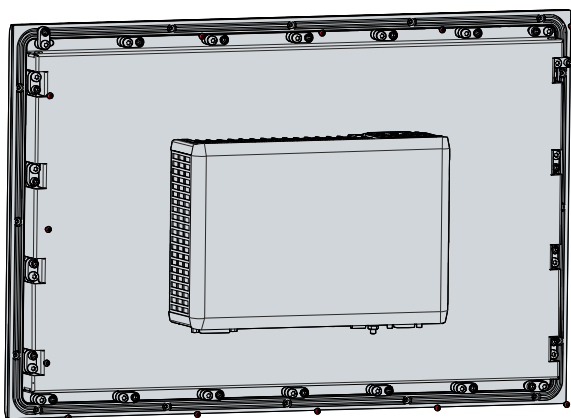

B

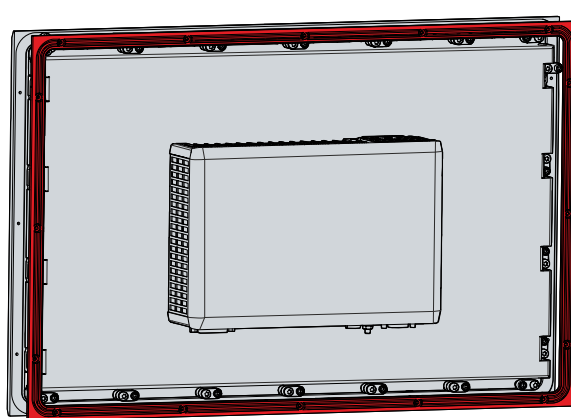

C

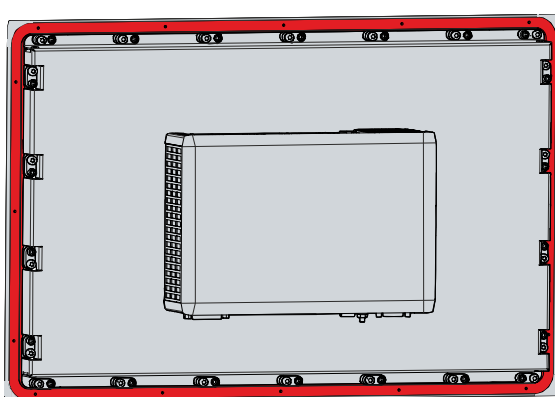


Fig. 29: CP27xx Stainless steel front_replacement silicone deal

8 Troubleshooting

Table 15: Troubleshooting

Fault	Cause	Measures
No function of the Panel PC	No power supply to the Panel PC Cable not connected	Check the power supply cable 1. Correctly connect the cable 2. Call Beckhoff Service
Panel PC boots, software starts, but controller does not work properly	The cause of the error is the software or plant parts outside of the Panel PC	Call the machine or software manufacturer
The Panel PC only works partially or only temporarily, e.g. dark image or none at all	Defective backlight in the display Components defective in the Panel PC	Call Beckhoff Service Call Beckhoff Service
Malfunction of the touch screen	Poor or missing functional earth of the device Poor or missing ground connection of the user	Establish functional earth User must stand on the floor with normal shoes

9 Technical data

Table 16: Technical data

Product designation	CP27xx		
Weights aluminum front/stainless steel front	CP2712: 3.8 kg / 4.1 kg CP2713: 3.6 kg / 3.9 kg CP2715: 4.6 kg / 4.9 kg CP2716: kg CP2718: 6.0 kg / 6.3 kg CP2719: 6.6 kg / 6.9 kg CP2721: kg CP2724: 7.9 kg / 8.2 kg		
Supply voltage	22-30 V _{DC} (24 V _{DC} power supply unit, NEC class 2)		
Power consumption	Data sheet for calculating power consumption and power loss in the download finder: https://www.beckhoff.com/de-de/support/downloadfinder/suchergebnis/?c-1=40717316		
Protection rating	Front IP65, rear IP20		
Vibration resistance (sinusoidal vibration)	EN 60068-2-6:	10 ... 58 Hz:	0.035 mm
		58 ... 500 Hz:	0.5 G (~ 5 m/ s ²)
Shock resistance (shock)	EN 60068-2-27:	5 G (~ 50 m/ s ²), duration: 30 ms	
EMC interference immunity	conforms to EN 61000-6-2		
EMC interference emission	conforms to EN 61000-6-4		
Permissible ambient temperature	Operation: 0 °C ... +55 °C Transport / storage: -25 °C ... +65 °C		
Permissible relative air humidity	Maximum 95%, no condensation		
Transport and storage	The same values for air humidity and shock resistance are to be observed during transport and storage as in operation. The shock resistance during transport can be improved by means of suitably packing the panel PC.		

10 Appendix

In the appendix you will find information for servicing and details of the approvals that your device has.

10.1 Service and support

Beckhoff and its worldwide branch offices offer comprehensive service and support, providing fast and competent assistance with all issues relating to Beckhoff products and system solutions.

Beckhoff Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: + 49 5246/963-460

email: service@beckhoff.com

If your device requires service, please indicate the serial number, which you can find on the name plate.

Beckhoff Support

Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- World-wide support
- Design, programming and commissioning of sophisticated automation systems
- extensive training program for Beckhoff system components

Hotline: + 49 5246/963-157

email: support@beckhoff.com

Headquarters

Beckhoff Automation GmbH & Co. KG
Hülshorstweg 20
33415 Verl
Germany

Phone: + 49 5246/963-0

email: info@beckhoff.de

The addresses of the worldwide Beckhoff branches and agencies can be found on our website at <http://www.beckhoff.com/>.

You will also find further documentation for Beckhoff components there.

10.2 Approvals

Your device has the following approvals:

- CE
- EAC
- UKCA
- FCC

You will find all other applicable approvals on the name plate of your device.

FCC approvals for the United States of America

FCC: Federal Communications Commission Radio Frequency Interference Statement

This device was tested and complies with the limits for a digital device of class A, according part 15 of the FCC regulations. These limits are designed to provide adequate protection against adverse interference, if the device is used in a commercial environment. This device generates, uses and may emit radio frequency energy and may cause adverse interference with radio communications, if it is not installed and used in accordance with the operating instructions. If this device is used in a residential area it is likely to cause adverse interference, in which case the user must take appropriate countermeasures in order to eliminate the interference at his own expense.

FCC approvals for Canada

FCC: Canadian Notice

This device does not exceed the class A limits for radiation, as specified by the Radio Interference Regulations of the Canadian Department of Communications.

List of figures

Fig. 1	CP27xx_without and with push button extension.....	11
Fig. 2	CP27xx_structure.....	12
Fig. 3	CP27xx_structure stainless steel device.....	13
Fig. 4	CP27xx_connection section.....	14
Fig. 5	CP27xx_DVI port pin numbering.....	14
Fig. 6	CP27xx_USB interface pin numbering.....	15
Fig. 7	CP27xx_Ethernet interface pin numbering	16
Fig. 8	CP27xx_voltage socket pin numbering.....	17
Fig. 9	CP27xx_installation PCIe module.....	18
Fig. 10	CP27xx_name plate.....	19
Fig. 11	CP27xx_delivery state clamping lever	24
Fig. 12	CP27xx_wall positioning	24
Fig. 13	CP27xx_control cabinet installation	25
Fig. 14	CP27xx_assembly of strain relief housing	26
Fig. 15	CP27xx_disassembly of strain relief housing.....	27
Fig. 16	CP27xx_grounding bolt functional earthing	28
Fig. 17	CP27xx_wiring diagram C9900-U330.....	30
Fig. 18	CP27xx_wiring diagram C9900-U332.....	31
Fig. 19	Beckhoff Device Manager - Change passwords	34
Fig. 20	Beckhoff Device Manager – Start page	35
Fig. 21	Beckhoff Device Manager - Onboard EtherCAT P.....	36
Fig. 22	CP27xx_removal from the control cabinet	38
Fig. 23	CP27xx_removal installation cutout.....	38
Fig. 24	CP27xx_Select "Cleaning Mode".....	40
Fig. 25	CP27xx_configuration "Cleaning Mode"	40
Fig. 26	CP27xx_access device components	42
Fig. 27	CP27xx_replacing the battery	43
Fig. 28	CP27xx_exchange CFast	45
Fig. 29	CP27xx Stainless steel front_replacement silicone deal.....	46

List of tables

Table 1	Legend CP27xx structure.....	12
Table 2	Legend structure CP27xx stainless steel device.....	13
Table 3	DVI interface pin assignment	14
Table 4	USB interfaces based on device generation	15
Table 5	USB interface pin assignment.....	15
Table 6	Ethernet interface pin assignment.....	16
Table 7	Voltage socket pin assignment	17
Table 8	CP27xx interface options	18
Table 9	CP27xx PCIe module slots	18
Table 10	Legend CP27xx name plate.....	19
Table 11	Order identifier battery pack.....	29
Table 12	Replacement recommendations for PC components.....	41
Table 13	Technical data of the battery	43
Table 14	Ordering options seal	46
Table 15	Troubleshooting	47
Table 16	Technical data.....	48

More Information:
www.beckhoff.com/cp27xx

Beckhoff Automation GmbH & Co. KG
Hülshorstweg 20
33415 Verl
Germany
Phone: +49 5246 9630
info@beckhoff.com
www.beckhoff.com

