


Montageanleitung


M8 x 1 konfektionierbar, geschirmt, axial mit Crimpanschluss

für Stiftstecker 4pol, P-codiert

- 1 Klemmmutter [a],
Kabeldichtung [b],
und Gehäuse [c]
auf das Kabel
schieben

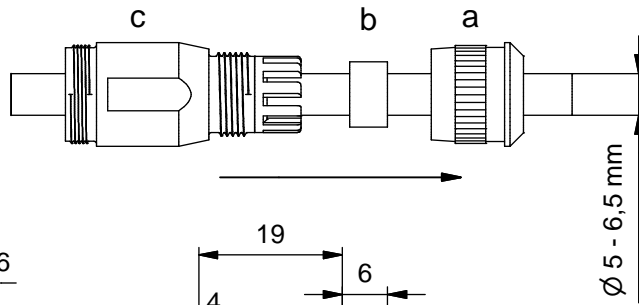


- 2 abmanteln
abisolieren

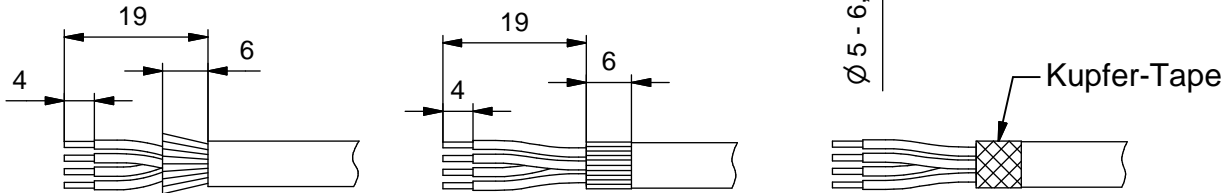


Schirm kürzen, auf Kabelmantel umschlagen und mit Kupfer-Tape umwickeln


- 3 Kontakte ancrimpen
und in den Kontaktträger
seitlich eindrücken
Anschlussbelegung: siehe Tabelle

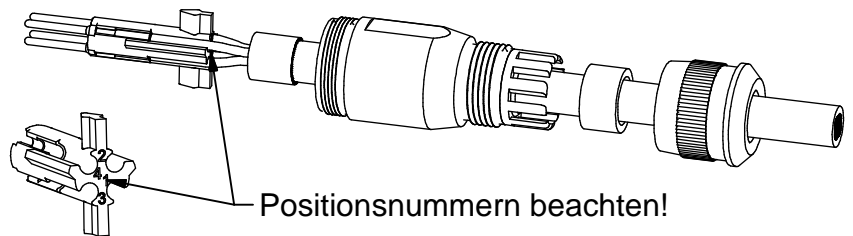


- 4 Kontaktträger in
Frontgehäuse einschieben,
bis die Pfeile verrastet sind

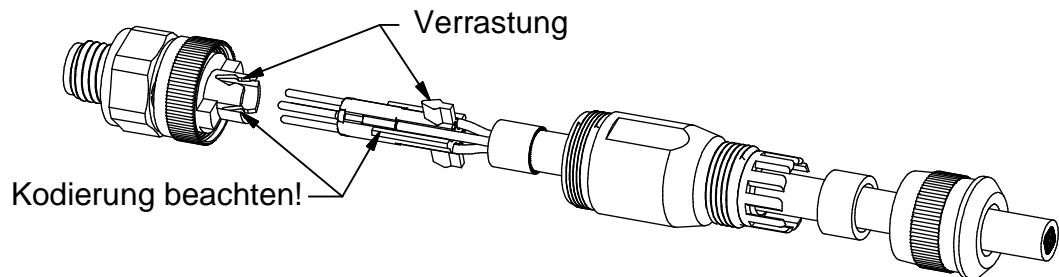

- 5 Gehäuse [c] mittels
Gehäusemutter verschrauben

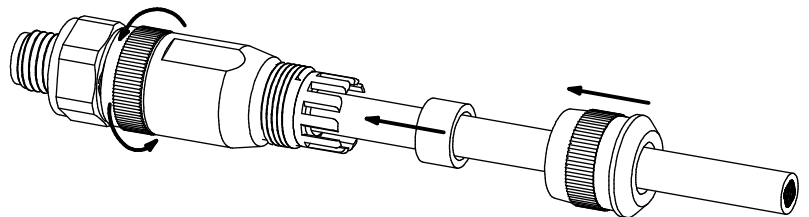

- 6 Kabeldichtung [b] in den
Kabelkäfig schieben

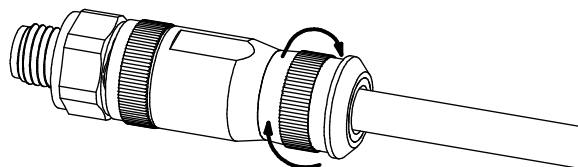

- 7 Klemmmutter [a] verschrauben

Crimpzange	Crimpeinsatz / Locator
ZB8810-0000	ZB8810-0001


Anschlussbelegung	
PIN Nr.	Aderfarbe
1	gelb
2	weiß
3	blau
4	orange

Assembly instruction


M8 x 1 field wireable, shielded, axial with crimp termination

for male connector 4pos, P-coded

- 1** pull clamping nut [a], cable seal [b], and housing [c] over the cable

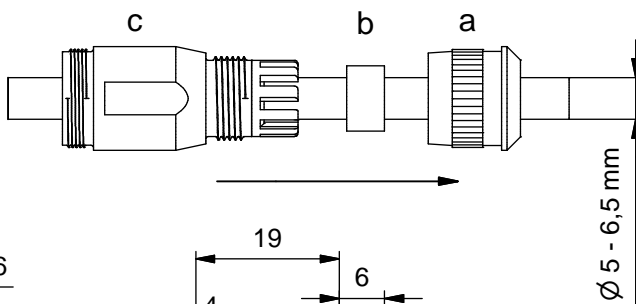

- 2** strip cable as shown

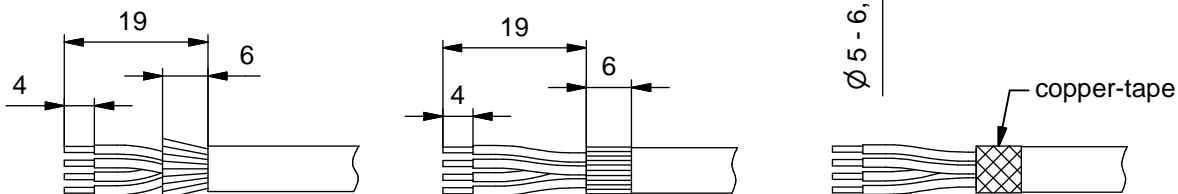


shorten braided shield, turn it over the cable jacket and wrap it with copper tape


- 3** crimp contacts and insert contacts into the contact carrier laterally
PIN assignment: see table




- 4** slide contact carrier into front housing, until the arrows are locked

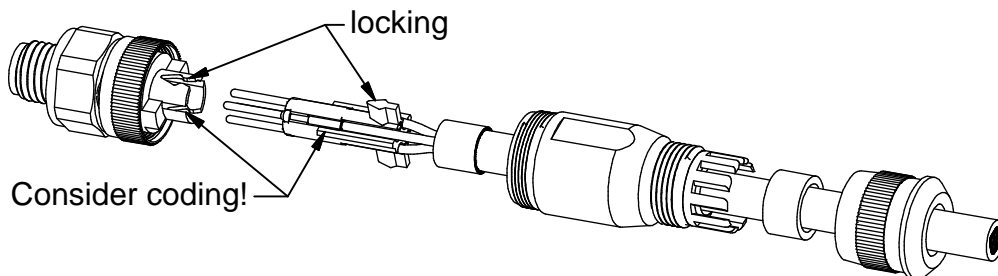

- 5** mount housing [c] with housing nut

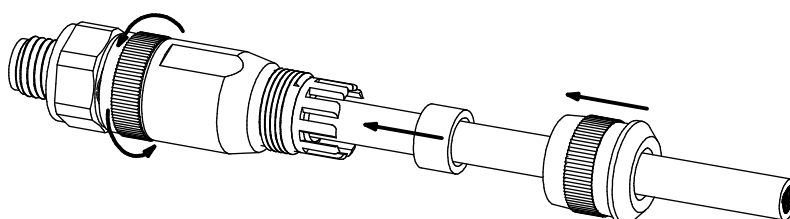

- 6** slide cable seal [b] into the cable cage

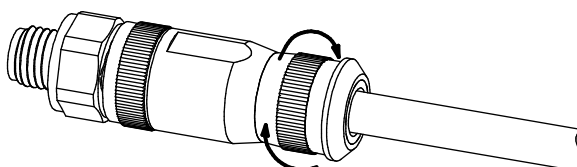

- 7** mount clamping nut [a]

crimping tool	crimping insert / locator
ZB8810-0000	ZB8810-0001

PIN assignment	
PIN No.	Wire colour
1	yellow
2	white
3	blue
4	orange