

Manual | EN

CP6900-0001-0010

Control Panel



Table of contents

1	Notes on the documentation.....	5
2	For your safety	6
2.1	Signal words.....	6
2.2	Intended use	6
2.3	Fundamental safety instructions	7
2.4	Operator's obligation to exercise diligence.....	7
2.5	Notes on information security.....	8
3	Product overview	9
3.1	Structure.....	10
3.2	Interface description	10
3.2.1	Power supply.....	11
3.2.2	USB output.....	11
3.2.3	USB input.....	12
3.2.4	USB Extended input.....	12
3.3	Name plate	13
3.4	Connection kits.....	14
4	Commissioning	15
4.1	Transport and unpacking	16
4.2	Control cabinet installation	16
4.3	Connecting the Control Panel	19
4.3.1	Mounting power supply cable.....	19
4.3.2	Grounding the Control Panel.....	20
4.3.3	Connecting cables and power supply	21
5	Decommissioning	23
5.1	Disconnecting the power supply and cables	23
5.2	Disassembly and disposal.....	24
6	Maintenance	25
7	Troubleshooting	27
8	Technical data	28
9	Appendix.....	29
9.1	Service and support	29
9.2	Approvals	30

1 Notes on the documentation

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards.

The following instructions and explanations must be followed during installation and commissioning of the components. The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

Disclaimer

The documentation has been prepared with care. The products described are, however, constantly under development. For that reason the documentation is not in every case checked for consistency with performance data, standards or other characteristics. In the event that it contains technical or editorial errors, we retain the right to make alterations at any time and without warning. No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams, and descriptions in this documentation. All illustrations shown are only examples. The configurations depicted may deviate from the standard.

Trademarks

Beckhoff®, TwinCAT®, TwinCAT/BSD®, TC/BSD®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, Safety over EtherCAT®, TwinSAFE®, XFC®, XTS® and XPlanar® are registered and licensed trademarks of Beckhoff Automation GmbH.

Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.

Patents

The EtherCAT Technology is covered, including but not limited to the following patent applications and patents: EP1590927, EP1789857, EP1456722, EP2137893, DE102015105702 and similar applications and registrations in several other countries.

Copyright

© Beckhoff Automation GmbH & Co. KG. Publication of this document on websites other than ours is prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

Delivery state

All the components are supplied in particular hardware and software configurations appropriate for the application. Changes to the hardware or software configuration are permitted, provided they are within the specified limits for power consumption and power loss (please refer to the respective data sheet).

Currentness

Please check whether you are using the current and valid version of this document. The current version is always available for download from the Beckhoff website. In case of doubt, contact Technical Support.

Delivery conditions

In addition, the general delivery conditions of the company Beckhoff Automation GmbH & Co. KG apply.

2 For your safety

The signal words and their meanings are explained in the chapter on safety. They contain fundamental safety instructions that are essential for the avoidance of personal injuries and damage to property.

Exclusion of liability

Beckhoff shall not be liable in the event of non-compliance with this documentation and thus the use of the devices outside the documented operating conditions.

2.1 Signal words

The signal words used in the documentation are classified below.

Warning of personal injuries

 DANGER
Hazard with high risk of death or serious injury.
 WARNING
Hazard with medium risk of death or serious injury.
 CAUTION
There is a low-risk hazard that can result in minor injury.

Warning of property and environmental damage

NOTICE
There is a possibility of damage to the environment, equipment or data.

2.2 Intended use

The control panel is designed for industrial application in machine and system engineering. It serves as the operating unit of the machine or plant.

The front of the panel PC is designed for an IP54 working environment. There is complete protection against contact and against dust in harmful quantities, as well as protection against splash water on all sides.

The rear side is designed for a working environment that meets the IP20 protection rating. This involves finger protection and protection against solid foreign objects up to 12.5 mm. There is no protection against water. Operation of the device in wet and dusty environments is not permitted. The specified limits for technical data must be adhered to.

The specified limits for technical data must be adhered to.

The device can be used within the documented operating conditions.

Improper use

Do not use the device outside the documented operating conditions.

2.3 Fundamental safety instructions

The following safety instructions must be observed when handling the the Control Panel.

Application conditions

- Do not use the device under extreme environmental conditions.
- Only use the device in hazardous areas if it is explicitly designed for this purpose.
- Do not carry out any work on the device while it is live. Always switch off the supply voltage for the device before mounting it, replacing device components or rectifying malfunctions.
- Never plug or unplug connectors during thunderstorms. There is a risk of electric shock.
- Ensure that the device has a protective and functional earth connection.

Damage to property, loss of data and impairment of functions

- Ensure that only trained specialists with a control and automation engineering background, operate the device. Use by unauthorized persons can lead to damage to property and loss of data.
- In the case of a 24 V DC power supply unit, fuse the power supply line according to its cross-section to protect the supply line in the event of a short circuit.
- In case of fire, extinguish the device with powder or nitrogen.

2.4 Operator's obligation to exercise diligence

The operator must ensure that

- the products are used only for their intended purpose (see Chapter 2.2 [Intended use](#) [► 6]).
- the products are only operated in sound condition and in working order.
- the products are operated only by suitably qualified and authorized personnel.
- the personnel is instructed regularly about relevant occupational safety and environmental protection aspects, and is familiar with the operating instructions and in particular the safety instructions contained herein.
- the operating instructions are in good condition and complete, and always available for reference at the location where the products are used.

2.5 Notes on information security

The products of Beckhoff Automation GmbH & Co. KG (Beckhoff), insofar as they can be accessed online, are equipped with security functions that support the secure operation of plants, systems, machines and networks. Despite the security functions, the creation, implementation and constant updating of a holistic security concept for the operation are necessary to protect the respective plant, system, machine and networks against cyber threats. The products sold by Beckhoff are only part of the overall security concept. The customer is responsible for preventing unauthorized access by third parties to its equipment, systems, machines and networks. The latter should be connected to the corporate network or the Internet only if appropriate protective measures have been set up.

In addition, the recommendations from Beckhoff regarding appropriate protective measures should be observed. Further information regarding information security and industrial security can be found in our <https://www.beckhoff.com/secguide>.

Beckhoff products and solutions undergo continuous further development. This also applies to security functions. In light of this continuous further development, Beckhoff expressly recommends that the products are kept up to date at all times and that updates are installed for the products once they have been made available. Using outdated or unsupported product versions can increase the risk of cyber threats.

To stay informed about information security for Beckhoff products, subscribe to the RSS feed at <https://www.beckhoff.com/secinfo>.

3 Product overview

The Economy built-in Control Panel is designed for installation in the front of a control cabinet. It can be used for various automation tasks.

The control panel has the following features:

- 10.1-inch display, 1024 x 600 resolution
- Single-finger touch screen
- Aluminum front with sheet-steel rear cover, front IP54, rear IP20
- Control cabinet installation via pull-out clamping levers for fast installation without loose parts
- 24 V DC power supply unit

Push button extension

You have the possibility to order the control panel with the following push button extensions:

- C9900-G072: push button extension for CP6x00 with horizontal 10.1-inch display
- C9900-G073: push button extension for CP6x00 with horizontal 10.1-inch display

For explanations of the push button extensions and the functions, refer to the manual [C9900-G072/G073](#).

Figure 1 shows the control panel without (A) and with (B) push button extension.

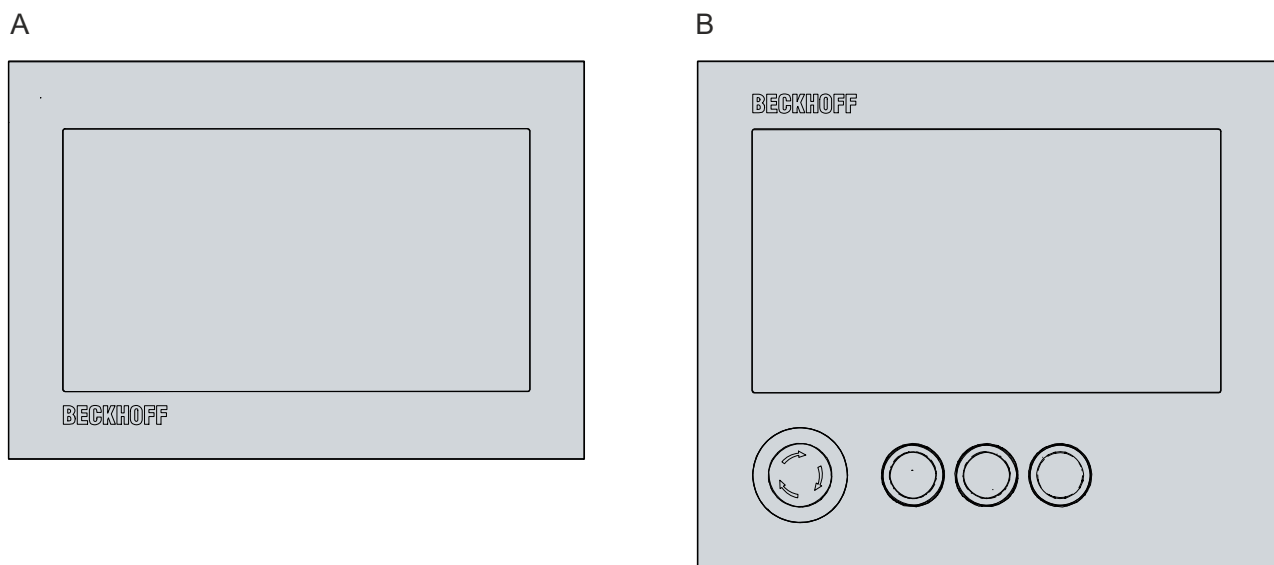


Fig. 1: Without and with push button extension

3.1 Structure



Fig. 2: Structure

Table 1: Legend structure CP6900-0001-0010

No.	Component	Description
1	Clamping lever	Mounting the control panel in the control cabinet wall
2	Name plate	Information on the control panel equipment
3	Access to interfaces	Interfaces on the underside
4	Display and touch screen glass	Operating the control panel

3.2 Interface description

The CP6900-0001-0010 has the following interfaces:

- Power supply (X101)
- USB output (X102, X103)
- USB input (X104)
- USB Extended input (X105)
- DVI Extended input (X106)

The interfaces are located on the back of the control panel at the bottom of the connection section (see fig. 3).

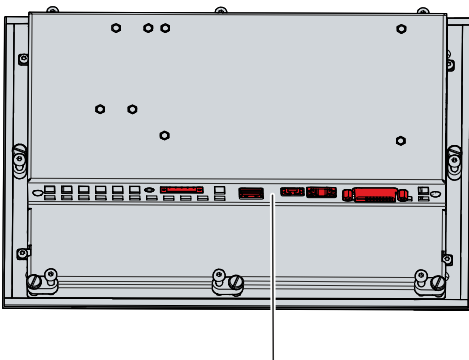


Fig. 3: Connection section

3.2.1 Power supply

The control panel is supplied with a nominal input voltage of 24 V_{DC}. The power supply and the protective earth of the device are connected via the 5-pin voltage socket (X101).



Fig. 4: Power supply pin numbering

Table 2: Voltage socket pin assignment

Pin	Signal	Description
1	NC	not used
2	NC	not used
3		Protective earth
4	-	Negative pole power supply 24 V
5	+ 24 V	24 V power supply, positive pole

The plug for the power supply is specified for 16 A and can accommodate wire cross-sections of up to 1.5 mm². For long supply lines, use 1.5 mm² cables to achieve a low voltage drop on the supply line. There should be at least 22 V at the power supply plug of the control panel, so that the control panel remains switched on during voltage fluctuations. The plug is included in the delivery. You can obtain a replacement plug from your Beckhoff Sales using the following ordering option:

- C9900-P927: Power supply connector for CP690x Control Panel, 5-pin connector with strain relief for the external supply cable

3.2.2 USB output

The control panel has two USB outputs (X102, X103) with socket type A. The interfaces are used to connect peripheral devices with USB connection. USB specification 2.0 is supported.

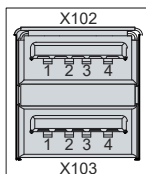


Fig. 5: USB interface pin numbering

Table 3: USB interface pin assignment

Pin	Connection
1	Vbus
2	D -
3	D +
4	GND

3.2.3 USB input

The control panel has a USB input (X104) with socket type B. The USB input is used to connect the control panel directly to the standard output of an industrial PC at distances of up to 5 m. USB specification 2.0 is supported.

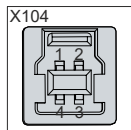


Fig. 6: USB input pin numbering

Table 4: USB interface pin assignment

Pin	Connection
1	Vbus
2	D -
3	D +
4	GND

3.2.4 USB Extended input

The control panel has a USB Extended input (X105) in the form of an RJ45 socket. The control panel is connected to the CU8801 USB-to-USB Extended converter box via the interface. The interface transmits USB 2.0 with 480 Mbit/s.

To realize a distance of 50 m without hubs, USB Extended converts the USB signal so that it can be transmitted via a 50 m CAT-5 cable. In the control panel the signal is converted back to USB. This is not an Ethernet connection. No Ethernet switch or hub can be integrated in the USB-Extended cable.

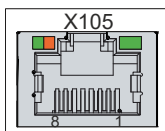


Fig. 7: USB-E input pin numbering

Table 5: USB-E input pin assignment

Pin	Signal	Description
1	T2 +	Pair 2
2	T2 -	
3	T3 +	Pair 3
4	T1 +	Pair 1
5	T1 -	
6	T3 -	Pair 3
7	T4 -	Pair 4
8	T4 -	

3.3 Name plate

The name plate provides information about the control panel equipment. The name plate shown here serves only as an example.

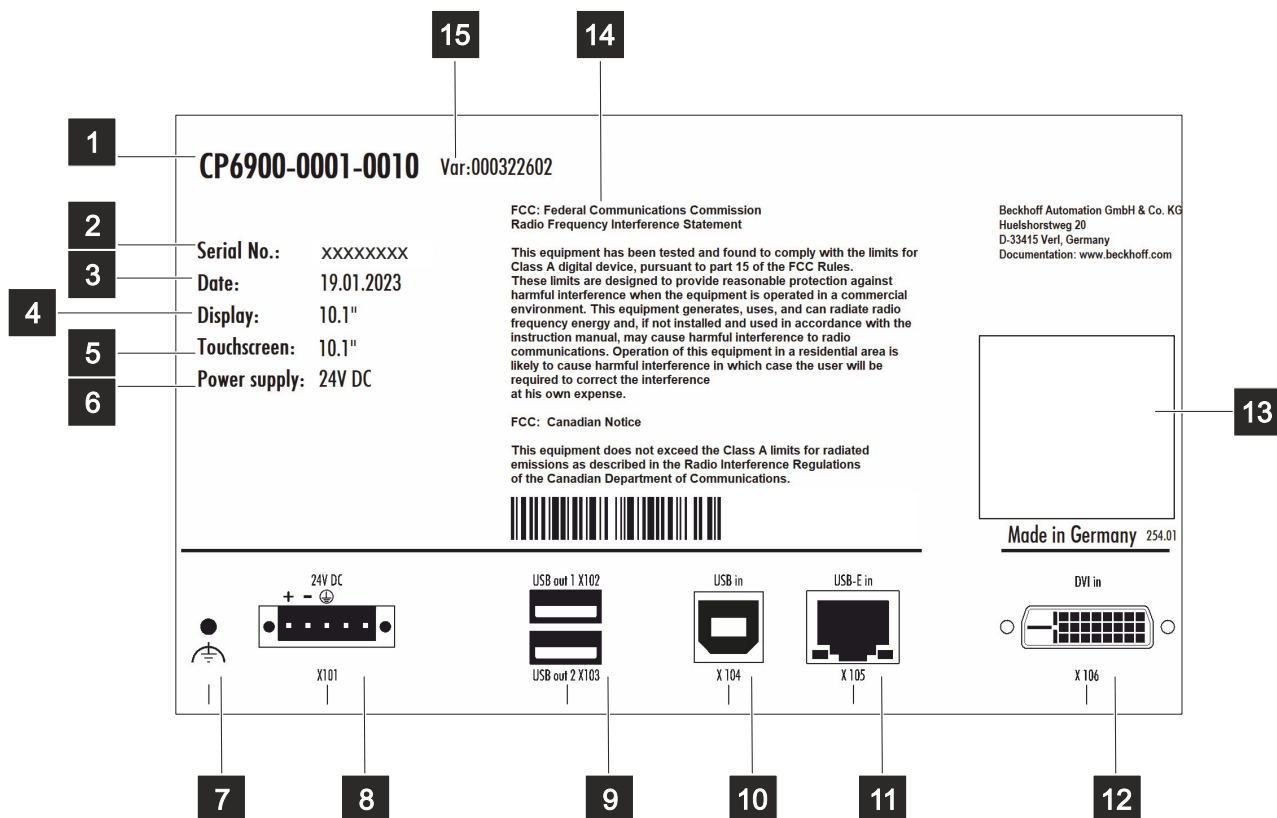



Fig. 8: Name plate

Table 6: Legend name plate CP6900-0001-0010

No.	Description
1	Model: The last four digits indicate the device generation.
2	Serial number (BTN)
3	Date of manufacture
4	Display
5	Touch screen
6	Power supply: 24 V _{DC} , NEC class 2
7	Grounding bolt for functional earthing of the control panel
8	Connection of the power supply and protective earth of the control panel (X101)
9	USB output (X102, X103)
10	USB input (X104)
11	USB Extended Interface (X105)
12	DVI Extended interface (X106)
13	<p>Symbols</p> <p>Note: Here are the symbols applicable to the device such as CE, EAC, UKCA, . The approvals of your device can be found on the name plate and in chapter 9.2 Approvals [► 30].</p>
14	FCC approval
15	Variant number: commercial number of the order code including ordering options

3.4 Connection kits

The following optional connection kits are available:

Table 7: Connection kits CP6900-0001-0010

Connection kits	Description
C9900-K560	1 m connection kit for CP69xx, consisting of: DVI cable 1 m, USB cable 1 m
C9900-K513	3 m connection kit for CP69xx, consisting of: DVI cable 3 m, USB cable 3 m
C9900-K515	5 m connection kit for CP69xx, consisting of: DVI cable 5 m, USB cable 5 m
C9900-K625	10 m connection kit for CP29xx-0000, CPX29xx-0000 and CP69xx-xxxx-0010 consisting of: 10 m DVI cable, 10 m Cat.5 cable for USB-E 2.0, CU8801 USB-to-USB-E 2.0 converter for DIN rail mounting next to the PC and 1 m USB cable for connecting the USB-to-USB-E 2.0 converter to the PC
C9900-K626	20 m connection kit for CP29xx-0000, CPX29xx-0000 and CP69xx-xxxx-0010 consisting of: 20 m DVI cable, 20 m Cat.5 cable for USB-E 2.0, CU8801 USB-to-USB-E 2.0 converter for DIN rail mounting next to the PC and 1 m USB cable for connecting the USB-to-USB-E 2.0 converter to the PC
C9900-K627	30 m connection kit for CP29xx-0000, CPX29xx-0000 and CP69xx-xxxx-0010 consisting of: 30 m DVI cable, 30 m Cat.5 cable for USB-E 2.0, CU8801 USB-to-USB-E 2.0 converter for DIN rail mounting next to the PC and 1 m USB cable for connecting the USB-to-USB-E 2.0 converter to the PC
C9900-K628	40 m connection kit for CP29xx-0000, CPX29xx-0000 and CP69xx-xxxx-0010 consisting of: 40 m DVI cable, 40 m Cat.5 cable for USB-E 2.0, CU8801 USB-to-USB-E 2.0 converter for DIN rail mounting next to the PC and 1 m USB cable for connecting the USB-to-USB-E 2.0 converter to the PC
C9900-K629	50 m connection kit for CP29xx-0000, CPX29xx-0000 and CP69xx-xxxx-0010 consisting of: 50 m DVI cable, 50 m Cat.5 cable for USB-E 2.0, CU8801 USB-to-USB-E 2.0 converter for DIN rail mounting next to the PC and 1 m USB cable for connecting the USB-to-USB-E 2.0 converter to the PC
C9900-K777	1 m connection kit for CP69xx, consisting of: 1 m DisplayPort to DVI cable, 1 m USB cable
C9900-K778	3 m connection kit for CP69xx, consisting of: 3 m DisplayPort to DVI cable, 3 m USB cable
C9900-K779	5 m connection kit for CP69xx, consisting of: 5 m DisplayPort to DVI cable, 5 m USB cable

4 Commissioning

To use the control panel, you must first put it into operation. The first step is to transport the device to its operating location and unpack it. This is followed by installing the device in the control cabinet front, connecting the cables and the power supply and finally switching on the control panel. Since the control panel does not have its own power switch, switching the power supply on and off also switches the control panel on and off.

Operating the control panel

NOTICE

Damage to the touch screen

Operating the touch screen with unsuitable objects may damage the touch screen.

- Only operate the touch screen with your bare finger, your finger while using a suitable glove or a touch screen pen (C9900-T902).
- If you use gloves, make sure that no hard particles such as metal shavings, glass splinters or similar adhere to the glove.

If you, as the user, require additional protection for the touch screen against dirt and scratching, for example due to dirty hands, this can be achieved with a Beckhoff protective film.

You can either order your device directly with the protective film applied or order a film individually and apply it yourself. Please refer to the price list for the available protective films according to the display size of your device.

Proceed as follows to attach the protective film to the touch screen:

1. Ensure that the environment is as dust-free as possible.
2. Thoroughly clean the surface of the device to be fitted with the film and remove all grease residues.
3. Detach the film from the backing at the short edge and place it on the surface.
4. Gradually remove the film from the backing. At the same time, use a doctor blade or other object with a soft rubber or felt edge to apply the film.
5. Brush away air bubbles towards the edge with a doctor blade or other object with a soft rubber or felt edge.

⇒ The film is now fitted.

If you want to remove the protective film again, you must proceed with caution so as not to damage the touch foil, which is located between the glass pane of the control panel and the applied protective film.

To remove the protective film, proceed as follows:

1. Carefully loosen one corner of the protective film.
2. Carefully pull the protective film off the control panel at the loosened corner at as flat an angle as possible.

⇒ You have removed the protective film.

4.1 Transport and unpacking

The specified storage conditions must be adhered to (see chapter 8 [Technical data](#) [► 28]).

Despite the robust design of the unit, the components are sensitive to strong vibrations and impacts. During transport the device must therefore be protected from mechanical stress. Appropriate packaging of the control panel, in particular the original packaging, can improve the shock resistance during transport.

NOTICE

Hardware damage due to condensation

Unfavorable weather conditions during transport can cause damage to the device.

- Protect the device against moisture (condensation) during transport in cold weather or in case of extreme temperature fluctuations.
- Do not put the device into operation until it has slowly adjusted to the room temperature.
- Should condensation occur, wait for about 12 hours before switching the device on.

Unpacking

Proceed as follows to unpack the device:

1. Check the packaging for transport damage.
2. Remove packaging.
3. Keep the packaging for possible future transport.
4. Check your delivery for completeness by comparing it with your order.
5. Check the contents for visible shipping damage.
6. In case of discrepancies between the package contents and the order, or in case of transport damage, please inform Beckhoff Service (see Chapter 9.1 [Service and Support](#) [► 29]).

4.2 Control cabinet installation

NOTICE

Extreme environmental conditions

Extreme environmental conditions can cause damage to the device.

- Avoid extreme environmental conditions.
- Protect the device against dust, moisture and heat.

NOTICE

Lack of air circulation

Incorrect installation of the control panel prevents air circulation in the unit and thus causes overheating and impaired functioning.

- Only install the control panel in the corresponding wall in the orientation shown.

The CP6900-0001-0010 Control Panel is designed for installation in the front of a control cabinet in machine and system engineering. Please observe the environmental conditions prescribed for the operation (see Chapter 8 [Technical data](#) [► 28]).

Dimensions

The dimensions of the control panel can be found on the Beckhoff website: <https://www.beckhoff.com/de-de/support/downloadfinder/technische-zeichnungen/>.

All dimensions are in mm.

Preparation of the control cabinet

The control cabinet must have the required installation cutout according to the device dimensions of the control panel.

The wall thickness must be between 2 mm and 5 mm for installation. After installation, be sure to check the tightness between the control panel and the installation wall.

Please also note the following for installation in a control cabinet:

- Position the control panel such that reflections from light sources on the screen are avoided as far as possible.
- For the correct installation height, use the position of the screen for guidance. This should always be optimally visible to the user.
- Do not expose the control panel to direct sunlight.

Installation in the control cabinet

Once you have made the required cutout in the control cabinet, you can install the control panel in the control cabinet. Clamping levers are provided at the back of the housing for mounting of the device. In the delivery state, the clamping levers are folded onto the device (see Fig. 9).

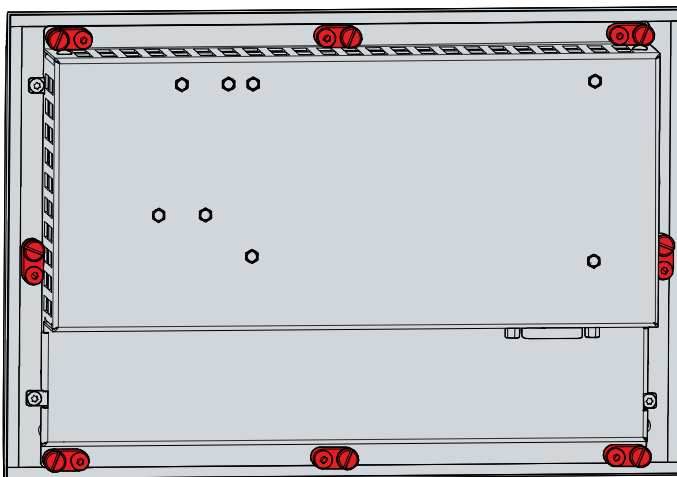


Fig. 9: Delivery state clamping lever

To install and secure the control panel in the control cabinet, follow the steps shown in Fig. 10 and 11:

1. Insert the control panel at the intended position in the control cabinet wall. Make sure that the device is secured against falling out until it is fastened properly.

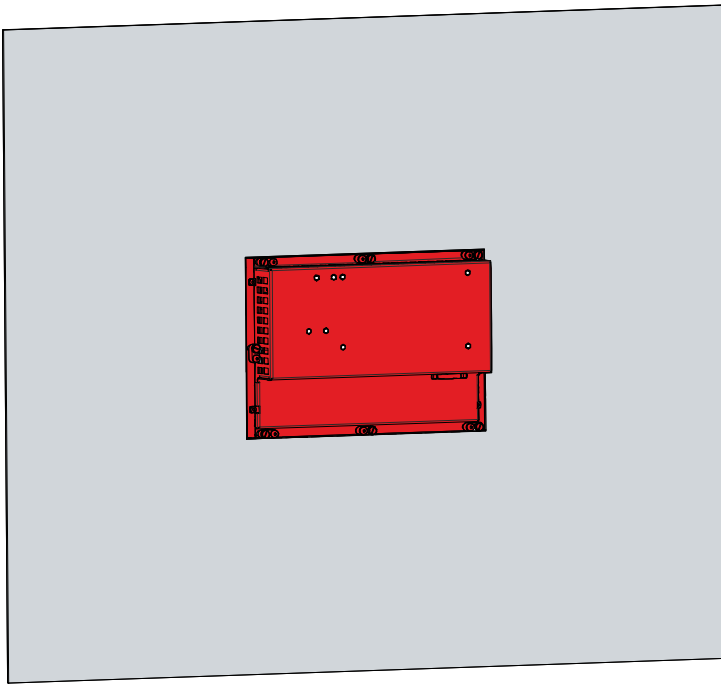


Fig. 10: Wall positioning

2. Fold out the clamping levers 90° (section A and B).
3. Tighten the clamping levers with the Allen key 3.0 mm (section C).

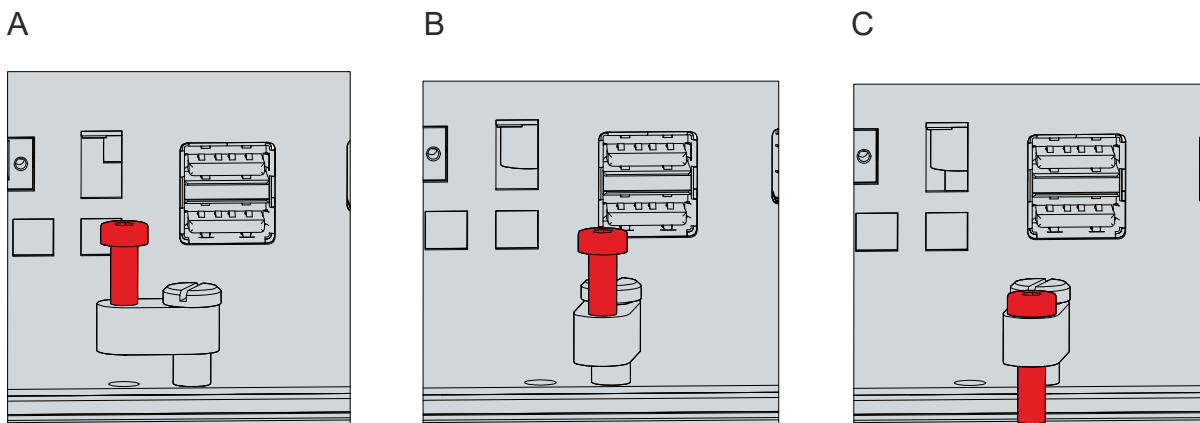


Fig. 11: Control cabinet installation

4.3 Connecting the Control Panel

⚠ CAUTION

Risk of electric shock

Dangerous touch voltages can lead to electric shock. To avoid electric shock, observe the following:

- Never connect or disconnect the device cables during a thunderstorm.
- Provide protective earthing for handling the device.

To prepare the control panel for operation, you have to connect it. The first step is to ground the device. Then you can connect the cables and the power supply.

An external power supply unit is required to supply 24 V DC (-15 %/+20 %) for operating the device.

Connect the control panel in the control cabinet according to standard EN 60204-1:2006 Protective Extra Low Voltage (PELV):

- The PE conductor (protective earth) and the "0 V" conductor of the voltage source must be on the same potential (connected in the control cabinet).
- Standard EN 60204-1:2006, section 6.4.1:b stipulates that one side of the circuit, or a point of the energy source for this circuit must be connected to the protective conductor system.

Devices connected to the control panel with their own power supply must have the same potential for the PE "0 V" conductors as the control panel (no potential difference).

4.3.1 Mounting power supply cable

Install the cable for the power supply of the control panel using the material supplied for connector assembly. It consists of a 5-pin connection strip and a strain relief housing with cable tie.

If you require a replacement for the voltage connector or the strain relief housing, you can order these from Beckhoff Sales using the following ordering option:

- C9900-P927: power supply connector for CP69xx or CP66xx Control Panel, 5-pin connector with strain relief for the external supply cable

Mounting power supply cable

First mount the plug on the cable as follows:

1. Remove a few centimeters of the cable sheath.
 2. Remove the insulation from the wire ends (8-9 mm).
 3. Crimp the ferrules onto the stripped wire ends.
 4. Insert the cable ends with the ferrules into the 5-pin connection strip. For the pin assignment of the connector, see Chapter 3.2.1 [Power supply](#) [► 11].
 5. Screw the cable ends into the 5-pin connection strip.
- ⇒ You have mounted the plug on the cable.

4.3.2 Grounding the Control Panel

Potential differences are minimized and electrical currents are diverted to the ground through grounding or potential equalization of electronic devices. This is to prevent dangerous touch voltages and electromagnetic interference.

Protective earth

The protective grounding of a device serves to avoid dangerous touch voltages. According to the EN 60204-1 standard (Chapter 8 Potential equalization), protective grounding is required if:

- the device exceeds dimensions of 50 mm x 50 mm,
- the device can be touched or encompassed over a large area,
- contact between the device and active parts is possible,
- an insulation fault may occur.

Establish low-resistance protective earth of the control panel via the voltage connection to avoid dangerous touch voltages. There is a pin in the voltage socket for the protective earth (PE).

EMC

NOTICE

Hardware damage due to electromagnetic interference

Using the control panel without functional earth can lead to hardware damage due to electromagnetic interference.

- Only use the device with functional earth.

Electromagnetic compatibility (EMC) of the control panel includes on the one hand not affecting other devices and equipment by electromagnetic interference and on the other hand not being disturbed by electrical or electromagnetic effects itself.

The control panel must comply with certain protection requirements. The control panel has EMC interference immunity according to EN 61000-6-2. The EMC interference emission of the device meets the requirements of EN 61000-6-4.

The functional earth is necessary for the EMC of the device. You establish functional earthing via the ground connection between the threaded hole in the connection section on the back of the control panel (see Fig. 12) and the central grounding point of the control cabinet in which the panel is installed. Use wires with a cross-section of at least 4 mm² or a flat conductor for the ground connection, as the circumference of the conductor should be as large as possible.

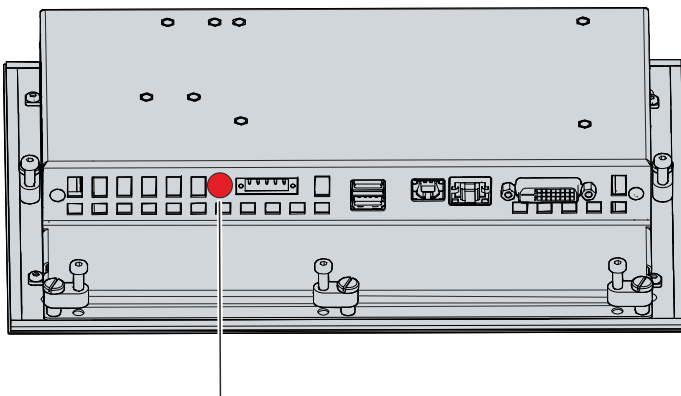


Fig. 12: Ground connection Functional earthing

4.3.3 Connecting cables and power supply

NOTICE

Incorrect connection procedure

Incorrect procedure when connecting the cables and the power supply can cause hardware damage.

- Follow the documented procedure for connecting the cables and the power supply.
- Always connect all cables first and only then switch on the power supply.
- Please read the documentation for the external devices prior to connecting them.

The connections are located at the rear in the connection section of the device.

Connecting cables

Make sure that you first ground the panel (see Chapter 4.3.2 [Grounding the control panel](#) [► 20]) and then plug in all data transmission cables.

When connecting the control panel to an industrial PC with UPS output, Beckhoff recommends using this for the connection so that the display is also active in UPS mode. Only one control panel may be connected to the UPS output on the PC.

Connect power supply cable

Cables with a maximum cable cross-section of 1.5 mm² can be used for connecting the power supply. For long supply lines, use 1.5 mm² cables to achieve a low voltage drop on the supply line. There should be at least 22 V at the power supply plug of the control panel, so that the panel remains switched on during voltage fluctuations.

Proceed as follows to connect the 24 V_{DC} power supply unit:

1. First mount the power supply cable with the 5-pin connection strip without its strain relief housing.
2. Plug the voltage connector into the voltage socket on the panel.
3. Screw the voltage connector to the voltage socket.
4. Connect the panel to your external 24 V power supply.
5. Switch on the 24 V power supply.
6. Measure the voltage at the 5-pin connection strip of the panel.
7. Mount the strain relief housing on the 5-pin connection strip.

Assembly of the strain relief housing

Now mount the strain relief housing on the previously connected plug and power supply cable as shown in Fig. 13:

1. Thread the cable tie into the lower part of the strain relief housing (section A).
 2. Insert the connection strip into the lower part of the strain relief housing (section B).
 3. Tighten the cable tie and remove the plastic tab (section C).
 4. Attach the upper part of the strain relief housing by snapping it onto the lower part (section D).
- ⇒ You have mounted the strain relief housing.

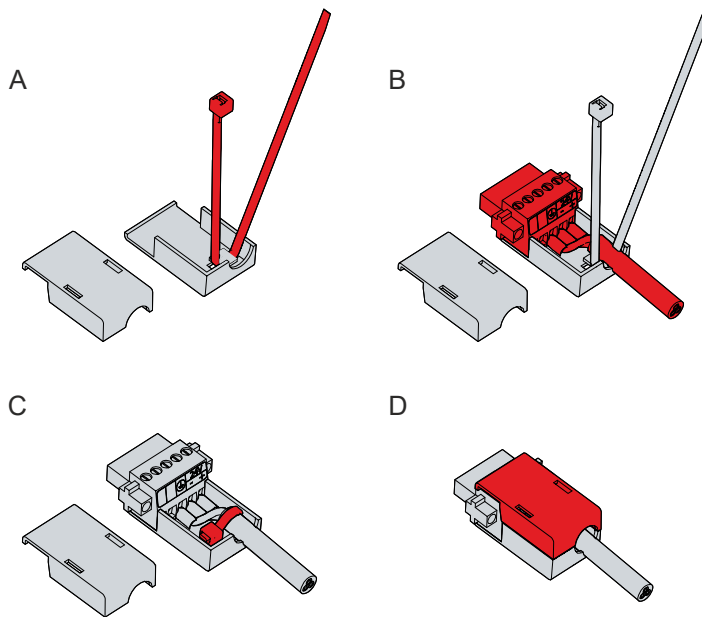


Fig. 13: Assembly of the strain relief housing

To remove the strain relief housing, proceed as follows:

1. Use your fingers to bend the latching lugs on the lower part slightly outwards (see Fig. 14).
2. Lever the upper part off the lower part.
3. Cut the cable tie.

⇒ You have removed the strain relief housing.

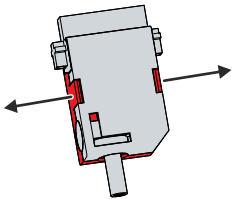


Fig. 14: Disassembly of the strain relief housing

5 Decommissioning

NOTICE

Hardware damage due to power supply

A connected power supply can cause damage to the control panel during disassembly.

- Disconnect the power supply from the device before starting to disassemble it.

When taking the control panel out of operation, you must first disconnect the power supply and cables. You can then remove the device from the control cabinet.

If you do not wish to use the control panel any further, chapter 5.2 [Disassembly and disposal](#) [► 24] provides information on the correct disposal of the device.

5.1 Disconnecting the power supply and cables

⚠ CAUTION

Risk of electric shock

Disconnecting the control panel during a thunderstorm can lead to electric shock.

- Never disconnect the cables of the control panel during a thunderstorm.

Before disassembling the control panel, disconnect the power supply and the cables. Follow the steps below:

1. Shut down the control panel.
 2. Disconnect the control panel from the external 24 V power supply.
 3. Loosen the screw connection between the voltage socket and the voltage connector.
 4. Remove the voltage connector from the voltage socket.
 5. Remove the power supply cable if the connector is to remain with the panel.
 6. Make a note of the wiring of all data transmission cables if you want to restore the cabling with another device.
 7. Disconnect all data transfer cables from the control panel.
 8. Finally, disconnect the ground connection.
- ⇒ You have disconnected the power supply and the cables.

5.2 Disassembly and disposal

In order to be able to dismount the control panel from the control cabinet, you must first have disconnected the power supply and the cables (see Chapter 5.1 [Disconnecting the power supply and cables](#) |► 23|).

To remove the control panel from the control cabinet, follow the steps shown in Fig. 15 and 16:

1. Loosen the clamping levers with a 3.0 mm Allen key (sections A and B). Make sure that the device is secured against falling out of the control cabinet wall.
2. Fold the clamping levers back by 90° onto the housing (section C).

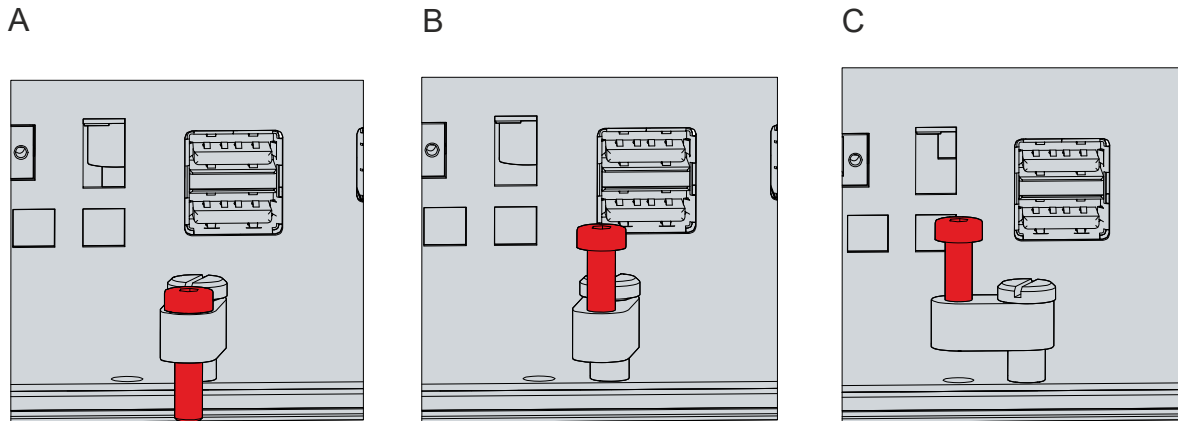


Fig. 15: Removal from the control cabinet

⇒ You can now remove the control panel from the corresponding cutout in the control cabinet wall.

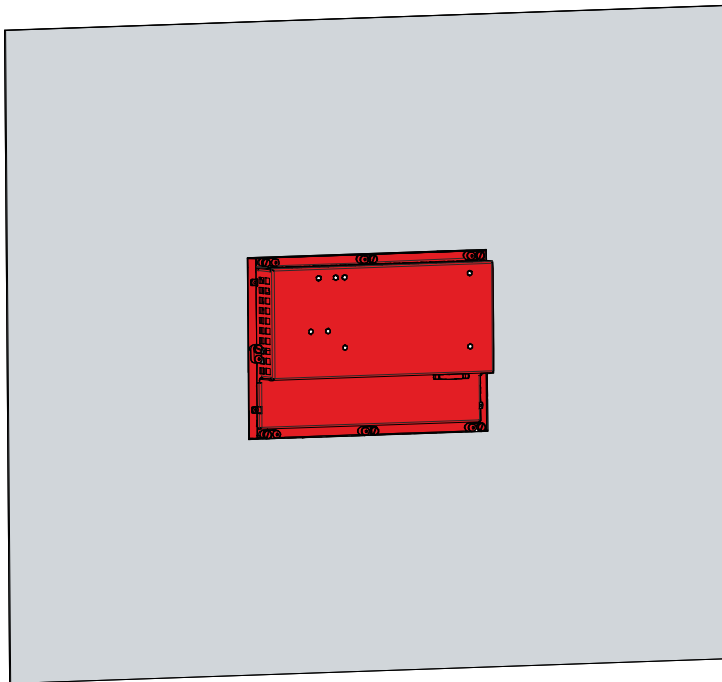


Fig. 16: Wall positioning

Disposal of the control panel

When disposing of the control panel the national electronic waste regulations must be followed.

For disposal, you must remove the device from the control cabinet.

6 Maintenance

Maintenance measures increase the efficiency of the device by ensuring long-term functionality. Cleaning the device contributes to this.

Defective pixels in the TFT display are production-related and are not grounds for complaint.

Cleaning

NOTICE

Unsuitable cleaning agents

The use of unsuitable cleaning agents can damage the device.

- The control panel should only be cleaned as specified.

It is essential to observe the following aspects when cleaning the control panel:

- Ensure that no dust enters the panel via the rear.
- Never use compressed air to clean the panel.
- Maintain an ambient temperature range of 0 °C to 55 °C.

Cleaning agents

In order to avoid damage to the front of the control panel during cleaning, you must use suitable cleaning agents. Examples include:

- benzine
- spirit
- glass cleaner

Avoid the following cleaning agents:

- detergents with scouring or abrasive components
- metal cleaning objects such as razor blades or steel spatulas
- steam jet cleaner or very hot water
- cold water with a heated device
- high water pressure, e.g. high-pressure cleaner

Cleaning the front screen

You can clean the front screen of the control panel during operation. In order to avoid inadvertent touch entries when doing this, you must first set the device to "Cleaning Mode" with the help of the Beckhoff Control Tool.

The Beckhoff Control Tool does not start automatically when the connected PC starts up. Proceed as follows to activate the "Cleaning Mode" of the Beckhoff Control Tool:

1. Click the Beckhoff Control Tool to start it.
⇒ When the tool is started, a small sun symbol appears in the taskbar.
2. Right-click the sun symbol. Touch the sun when operating via the touch screen.
3. Select the "Cleaning Mode" (see Fig. 17).
⇒ "Cleaning Mode" is activated. You can now clean the front panel.

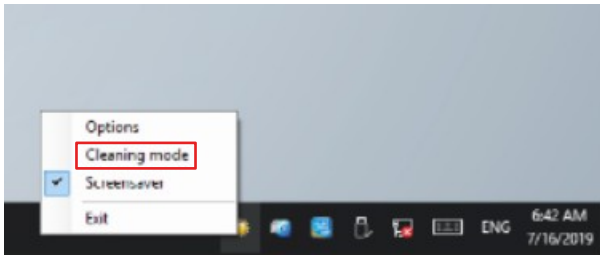


Fig. 17: Select Cleaning Mode

You can set the duration for which the panel should remain in "Cleaning Mode". The period can be set between 5 and 120 seconds. Right-click the sun symbol again and click "Options". Now select the appropriate period (see Fig. 18).

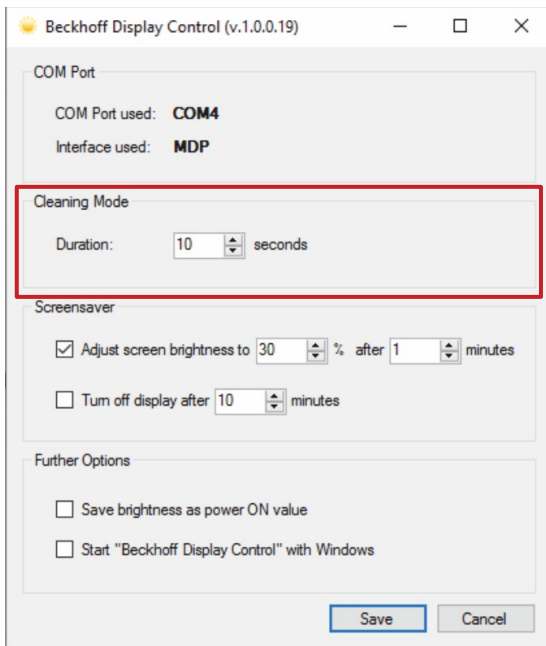


Fig. 18: Options

Repair

Only the vendor may repair the device. If a repair should be necessary, contact Beckhoff Service (see Chapter 9.1 [Service and Support](#) [[P](#) 29]).

7 Troubleshooting

Table 8: Troubleshooting

Fault	Cause	Measures
No Control Panel function	Lack of power supply to the Control Panel Cable not connected	Check the power supply cable 1. Correctly connect the cable 2. Call Beckhoff Service
USB error during access with TwinCAT via USB	Cycle time in TwinCAT set to 10 ms (standard)	Increase the cycle time to between 50 ms and 80 ms
No picture/backlight	Problem with the cable connections	Check DVI cable connection

Beckhoff recommends using Beckhoff connection cables and connection kits.

8 Technical data

Table 9: Technical data

Product designation	CP6900-0001-0010		
Supply voltage	22-30 V _{DC} (24 V _{DC} power supply unit, NEC class 2)		
Weight	approx. 1.4 kg		
Power consumption	Data sheet for calculating power consumption and power loss in the download finder: https://www.beckhoff.com/de-de/support/downloadfinder/suchergebnis/?c-1=40717316		
Protection rating	Front IP54, rear IP20		
Vibration resistance (sinusoidal vibration)	EN 60068-2-6:	10 ... 58 Hz:	0.035 mm
		58 ... 500 Hz:	0.5 G (~ 5 m/ s ²)
Shock resistance (shock)	EN 60068-2-27:	5 G (~ 50 m/ s ²), duration: 30 ms	
EMC interference immunity	conforms to EN 61000-6-2		
EMC interference emission	conforms to EN 61000-6-4		
Permissible ambient temperature	Operation: 0 °C ... +55 °C		
	Transport / storage: -25 °C ... +65 °C		
Permissible relative air humidity	Maximum 95%, no condensation		
Transport and storage	The same values for air humidity and shock resistance are to be observed during transport and storage as in operation. Suitable packaging of the control panel can improve the resistance to impact during transport.		

9 Appendix

In the appendix you will find information for servicing and details of the approvals that your device has.

9.1 Service and support

Beckhoff and its worldwide branch offices offer comprehensive service and support, providing fast and competent assistance with all issues relating to Beckhoff products and system solutions.

Beckhoff Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: + 49 5246/963-460
email: service@beckhoff.com

If your device requires service, please indicate the serial number, which you can find on the name plate.

Beckhoff Support

Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- World-wide support
- Design, programming and commissioning of sophisticated automation systems
- extensive training program for Beckhoff system components

Hotline: + 49 5246/963-157
email: support@beckhoff.com

Headquarters

Beckhoff Automation GmbH & Co. KG
Hülshorstweg 20
33415 Verl
Germany

Phone: + 49 5246/963-0
email: info@beckhoff.de

The addresses of the worldwide Beckhoff branches and agencies can be found on our website at <http://www.beckhoff.com/>.

You will also find further documentation for Beckhoff components there.

9.2 Approvals

Your device has the following approvals:

- CE
- EAC
- UKCA
- FCC

You will find all other applicable approvals on the name plate of your device.

FCC approvals for the United States of America

FCC: Federal Communications Commission Radio Frequency Interference Statement

This device was tested and complies with the limits for a digital device of class A, according part 15 of the FCC regulations. These limits are designed to provide adequate protection against adverse interference, if the device is used in a commercial environment. This device generates, uses and may emit radio frequency energy and may cause adverse interference with radio communications, if it is not installed and used in accordance with the operating instructions. If this device is used in a residential area it is likely to cause adverse interference, in which case the user must take appropriate countermeasures in order to eliminate the interference at his own expense.

FCC approvals for Canada

FCC: Canadian Notice

This device does not exceed the class A limits for radiation, as specified by the Radio Interference Regulations of the Canadian Department of Communications.

List of figures

Fig. 1	Without and with push button extension	9
Fig. 2	Structure.....	10
Fig. 3	Connection section.....	10
Fig. 4	Power supply pin numbering.....	11
Fig. 5	USB interface pin numbering	11
Fig. 6	USB input pin numbering	12
Fig. 7	USB-E input pin numbering.....	12
Fig. 8	Name plate.....	13
Fig. 9	Delivery state clamping lever	17
Fig. 10	Wall positioning	18
Fig. 11	Control cabinet installation	18
Fig. 12	Ground connection Functional earthing	20
Fig. 13	Assembly of the strain relief housing	22
Fig. 14	Disassembly of the strain relief housing.....	22
Fig. 15	Removal from the control cabinet	24
Fig. 16	Wall positioning	24
Fig. 17	Select Cleaning Mode	26
Fig. 18	Options.....	26

List of tables

Table 1 Legend structure CP6900-0001-0010..... 10

Table 2 Voltage socket pin assignment 11

Table 3 USB interface pin assignment..... 11

Table 4 USB interface pin assignment..... 12

Table 5 USB-E input pin assignment 12

Table 6 Legend name plate CP6900-0001-0010 13

Table 7 Connection kits CP6900-0001-0010 14

Table 8 Troubleshooting 27

Table 9 Technical data..... 28

More Information:
www.beckhoff.com/cp6900-0001-0010

Beckhoff Automation GmbH & Co. KG
Hülshorstweg 20
33415 Verl
Germany
Phone: +49 5246 9630
info@beckhoff.com
www.beckhoff.com

